 
The **Firefly Plus**<sup>™</sup> is a dual purpose waterproof light. One end is a flashlight and the other end is a flashling strobe. The strobe can be seen about 1 mile (approx. 2 km) away on a clear night.

### HOW TO LOAD BATTERIES:

 
- 1. Unscrew the strobe cover (counter-clockwise) from the body.
- 2. Take out the battery holder using a finger to pull it out, as per diagram.
- 3. Insert 2 AA size Alkaline batteries in the holder according to the polarity signs in the holder.
- 4. Replace the holder into the body by following the arrow signs on the holder and body. There is a rib in the body for the holder to slide into the body.
- 5. Rescrew the strobe cover (clockwise) back to the body.

## ON/OFF SWITCH:

The **Firefly Plus**<sup>™</sup> features a magnetic switch which is waterproof. Turn the switch ring to the right side with a "<sup>5</sup>/"mark and the strobe will be switched ON and flash. Turn the switch ring to the left with the sign of "<sup>□</sup>/" and the flashlight will be switched ON. The OFF position is between these two signs.



# Battery holder



Flash Light

Strobe

#### REMARKS:

- 1. The strobe tube, flashlight bulb and the reed switch inside this light are all made of glass, which may be damaged by impact.
- 2. Remove batteries if storing for an extended period of time.
- 3. Before use, please check to determine whether they are in good condition. If the light of the strobe becomes dull and yellowish in color, batteries have run down and do not have enough power; replace batteries.
- 4. Do not attempt to touch flashing strobe circuit due to possible injury.
- 5. Lubricate the entire O-ring with silicone-based grease prior to closing, to ensure a water-tight seal. Do not use petroleum base grease.

### SPECIFICATIONS:

Product: Flashlight and strobe.

Materials: Flashlight and strobe covers are acrylic; body is ABS plastic. Waterproof: Up to 10 atmospheric pressure (over 100 meters deep).

Power source: Two AA Alkaline batteries.

Switch: Magnetic reed switch outside case.

Measurement: 1 7/8 x 5 3/8 inches (48 x 136 mm).

Weight: 4oz. (112gm) without battery.

Accessory: Wrist strap included

