Playing Audio Wirelessly

- If the unit has already been paired to a Bluetooth device, use the controls on the connected device to **select and begin playing** audio.
- Use the controls on the speaker or the connected Bluetooth device to play/pause, adjust volume or skip audio tracks.

Using the Speakerphone

- To accept a call, press the **Speakerphone** button or use the controls on the connected phone.
- To end a call, press the **Speakerphone** button or use the controls on the connected phone.
- To re-dial the last dialed number, press the Speakerphone button twice.

FCC WARNINGS

 Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

ADDITIONAL WARNINGS

- WARNING: Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.
- NOTE: This device uses an internal rechargeable lithium-ion battery that should last the lifetime of the device. If you suspect your battery may be dead after several attempts to charge, please contact 1-888-999-4215 for support.
- Never disassemble the unit or attempt to remove the battery as that could cause leakage of an electrolytic substance.
- Lithium batteries, like all rechargeable batteries, are recyclable and should be recycled or disposed of according to state and local guidelines. They should never be disposed of in normal household waste, and they should never be incinerated, as they might explode. Contact your local government for disposal or recycling practices in your area.
- WARNING: This product may contain chemicals known to the State of California to cause birth defects, or other reproductive harm (California Prop 65). Wash hands after handling
- · This product meets and complies with all Federal regulations.

Contact Information

Website: www.iLiveElectronics.com Email Support: prodinfo@dpiinc.com Email Parts: partsinfo@dpiinc.com Phone Support: 1-888-999-4215

Warranty

For Warranty Information and the most up-to-date version of this User's Guide, go to: www.iLiveElectronics.com.



Specifications are subject to change without notice.

Copyright © 2017 Digital Products International (DPI, Inc.)
All other trademarks appearing herein are the property
of their respective owners.





Waterproof Wireless Speaker

User's Guide for Model ISBW157 v1848-01

Features

Includes

Bluetooth wireless: range 60 ft.

- USB charging cable Carabiner User's Guide
- Rubberized coating


Shock proof

 DC battery power built-in rechargeable battery: approx. 8 hrs playtime at 50% volume

Waterproof Rating - IP66

- · Complete protection from dust, oil, and other noncorrosive material.
- Complete protection from contact with enclosed equipment
- Protection from water, even from powerful jets of water
- Equivalent to NEMA rated 4 and 4X enclosures.

Overview

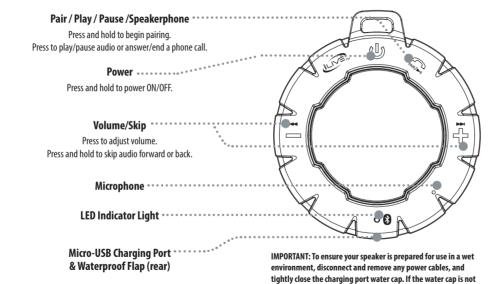

properly closed, water resistance will be compromised and could result in damage to the speaker or personal injury.

Charging the Battery

Initial charge time is approximately 2 hours. Charge fully before use.

. Using a Micro-USB to USB cable (included), connect to the USB port of a powered on computer or USB power adaptor (not included) to charge the unit.



Power Status	Indicator Light
Low Battery	Flashing red light
Charging	Solid Red light
Finished Charging	No light

Warning: Do not, under any circumstances, charge the speaker while it is in or near water. Allow ample time to dry before charging after use in water.

Pairing a Bluetooth Device

- Press and hold the Play/Pause/Speakerphone/ Pair button until the indicator light begins flashing blue. When pairing, remain within 3 feet of the unit
- 2. Using the controls on your Bluetooth device. select ISBW157 in your Bluetooth settings to pair. If your device requests a password, enter the default password **0 0 0 0**. Refer to the user's manual for your specific device for detailed instructions on pairing to Bluetooth devices.
- 3. When successfully paired, an audible chime will sound and the LED indicator will change to solid blue Audio from the connected Bluetooth device should now be heard through the speaker, see next section for playing music wirelessly.

After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. Repeat these steps if your device should become unpaired or will not connect normally.