

# CONTENTS

---

## 1

### GENERAL INFORMATION, SAFETY AND TOOLS

HOW TO USE THIS MANUAL	1-2
BOATING SAFETY	1-4
BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
SAFETY IN SERVICE	1-12
TROUBLESHOOTING	1-13
SHOP EQUIPMENT	1-16
TOOLS	1-18
FASTENERS, MEASUREMENT, AND CONVERSIONS	1-26
SPECIFICATIONS	1-27

---

## 2

### MAINTENANCE & TUNE-UP

GENERAL INFORMATION	2-2
LUBRICATION SERVICE	2-5
ENGINE MAINTENANCE	2-12
BOAT MAINTENANCE	2-26
TUNE-UP	2-39
TIMING AND SYNCHRONIZATION	2-48
VALVE CLEARANCE (4-STROKE MODELS)	2-76
STORAGE	2-86
CLEARING A SUBMERGED MOTOR	2-90
SPECIFICATIONS	2-91

---

## 3

### FUEL SYSTEMS

FUEL SYSTEM BASICS	3-2
FUEL TANK AND LINES	3-6
CARBURETED FUEL SYSTEM	3-12
SPECIFICATIONS	3-47
ELECTRONIC FUEL INJECTION (EFI)	3-48

---

## 4

### IGNITION & ELECTRICAL SYSTEMS

UNDERSTANDING AND TROUBLESHOOTING	
ELECTRICAL SYSTEMS	4-2
IGNITION SYSTEMS	4-8
CHARGING CIRCUIT	4-52
STARTING CIRCUIT	4-71
WARNING SYSTEM	4-107
WIRING DIAGRAMS	4-114
SPECIFICATIONS	4-144

---

## 5

### LUBRICATION & COOLING

OIL METERING SYSTEM (OMS) - 2-STROKE MOTORS	5-2
LUBRICATION SYSTEM - 4-STROKE MOTORS	5-12
COOLING SYSTEM	5-28
SPECIFICATIONS	5-62

# CONTENTS

POWERHEAD  
POWERHEAD BREAK-IN  
SPECIFICATIONS

6-2  
6-129  
6-130

POWERHEAD

6

GEARCASE  
SPECIFICATIONS CHARTS

7-2  
7-96

LOWER UNIT

7

TRIM/TILT SYSTEMS- 2-STROKE  
TRIM/TILT SYSTEMS- 4-STROKE  
MECHANICAL HYDRAULIC TILT ASSIST

8-2  
8-15  
8-33

TRIM & TILT

8

REMOTE CONTROLS  
CONTROL CABLES

9-2  
9-14

REMOTE CONTROLS

9

HAND REWIND STARTERS  
EMERGENCY STARTING

10-2  
10-16

HAND REWIND STARTER

10

MASTER INDEX

10-17

MASTER INDEX

AC LIGHTING COIL	4-69	STATOR/BATTERY CHARGE COIL	4-57
REMOVAL & INSTALLATION	4-69	TROUBLESHOOTING	4-54
TESTING	4-69	<b>CHARGING SYSTEM IDENTIFICATION</b>	<b>4-53</b>
AIR INTAKE SILENCER	3-76	CHEMICALS	1-17
REMOVAL & INSTALLATION	3-76	CLEANERS	1-18
ANODES (ZINCS)	2-34	LUBRICANTS & PENETRANTS	1-17
INSPECTION	2-34	SEALANTS	1-17
LOCATION	2-34	<b>CLEARING A SUBMERGED MOTOR</b>	<b>2-90</b>
SERVICING	2-35	COMPASS	1-10
BASIC ELECTRICAL THEORY	4-2	COMPASS PRECAUTIONS	1-11
HOW DOES IT WORK	4-2	INSTALLATION	1-11
OHM'S LAW	4-2	SELECTION	1-10
BASIC OPERATING PRINCIPLES	1-13	COMPRESSION TESTS	2-41
2-STROKE MOTORS	1-13	OVERHAUL LEAKAGE CHECK	2-42
4-STROKE MOTORS	1-14	TUNE-UP COMPRESSION CHECK	2-41
COMBUSTION	1-16	CONCEALED SIDE MOUNT REMOTE UNITS	9-9
BATTERY		OVERHAUL	9-9
CONSTRUCTION	4-70	REPLACING THE TRIM/TILT SWITCH	9-9
LOCATION	4-70	<b>CONTROL CABLES</b>	<b>9-14</b>
MAINTENANCE	2-36	RIGGING	9-14
MARINE	4-70	<b>COOLING SYSTEM</b>	
RATINGS	4-70	COOLING SYSTEM SCHEMATICS	5-51
SERVICE	4-70	DESCRIPTION & OPERATION	5-28
STORAGE	2-38	FLUSHING	2-15
TESTING	2-38	THERMOSTAT	5-47
<b>BOAT MAINTENANCE</b>	<b>2-36</b>	TROUBLESHOOTING	5-29
BATTERIES	2-36	WATER PRESSURE RELIEF VALVE	5-50
FIBERGLASS HULL	2-39	WATER PUMP	5-32
<b>BOATING EQUIPMENT</b>	<b>1-10</b>	<b>COOLING SYSTEM SCHEMATICS</b>	<b>5-51</b>
ANCHORS	1-10	CRANKSHAFT POSITION SENSOR	3-96
BAILING DEVICES	1-10	REMOVAL & INSTALLATION	3-97
COMPASS	1-10	TESTING	3-96
FIRST AID KIT	1-10	CTP SWITCH	3-101
OAR/PADDLE	1-10	REMOVAL & INSTALLATION	3-102
TOOLS AND SPARE PARTS	1-12	TESTING	3-101
VHF-FM RADIO	1-10	DUAL HANDLE SURFACE MOUNT REMOTE UNITS FOR SINGLE	
<b>BOATING SAFETY</b>	<b>1-4</b>	MOTORS	9-7
COURTESY MARINE EXAMINATIONS	1-10	OVERHAUL	9-7
REGULATIONS FOR YOUR BOAT	1-4	ECM PINOUTS	3-56
REQUIRED SAFETY EQUIPMENT	1-5	EFI SYSTEM RELAY	3-103
BREAKING IN A POWERHEAD	6-129	TESTING & SERVICE	3-103
2-STROKE MOTORS	6-129	ELECTRIC FUEL PRIMER	3-44
4-STROKE MOTORS	6-129	REMOVAL & INSTALLATION	3-46
CAMSHAFT POSITION SENSOR	3-94	TESTING	3-45
REMOVAL & INSTALLATION	3-95	ELECTRIC STARTER MOTOR PINION	2-5
TESTING	3-94	LUBRICATION	2-5
<b>CARBURETED FUEL SYSTEM</b>	<b>3-12</b>	RECOMMENDED LUBRICANT	2-5
CARBURETOR	3-14	ELECTRICAL TESTING	4-6
DESCRIPTION & OPERATION	3-12	OPEN CIRCUITS	4-7
ELECTRIC FUEL PRIMER	3-44	RESISTANCE	4-6
FUEL PUMP	3-39	SHORT CIRCUITS	4-7
MANUAL FUEL PRIMER	3-42	VOLTAGE	4-6
TROUBLESHOOTING	3-13	VOLTAGE DROP	4-6
CARBURETOR	3-14	<b>ELECTRONIC FUEL INJECTION (EFI)</b>	<b>3-48</b>
3.5 HP	3-15	AIR INTAKE SILENCER & FLAME ARRESTER	3-76
6 HP (128cc) 4-STROKE	3-18	CAMSHAFT POSITION SENSOR	3-94
4/5/6 HP (138cc) 4-STROKE	3-20	CRANKSHAFT POSITION SENSOR	3-96
8 HP 4-STROKE	3-21	CTP SWITCH	3-101
9.9/15 HP & 25 HP V2 4-STROKE	3-23	DESCRIPTION & OPERATION	3-48
25/30 HP	2-CYL	ECM PINOUTS	3-56
3-25		EFI SYSTEM RELAY	3-103
6/8/9.9/15 HP & 40/50/55 HP 2-STROKE	3-27	ENGINE CONTROL MODULE	3-97
25/30 HP (3-CYL) 4-STROKE	3-30	ENGINE DIAGNOSTIC CHARTS	3-69
90/105/115 HP V4 & 150/175 HP V6	3-33	EVAPORATION PURGE VALVE	3-103
CLEANING & INSPECTION	3-37	FUEL PRESSURE REGULATOR	3-102
CHARGE COIL	4-18	FUEL RAIL & INJECTORS	3-91
REMOVAL & INSTALLATION	4-22	IAC VALVE	3-104
TESTING	4-18	LOW PRES. ELECT. FUEL PUMP	3-86
<b>CHARGING CIRCUIT</b>	<b>4-52</b>	LOW PRES. MECH. FUEL PUMP	3-83
AC LIGHTING COIL	4-69	MAP SENSOR	3-100
BATTERY	4-69	MULTI-STAGE INDUCTION COMPONENTS	3-102
GENERAL INFORMATION	4-52	NEUTRAL (SAFETY) SWITCH	3-105
IDENTIFICATION	4-53	SELF DIAGNOSTIC SYSTEM	3-51
RECTIFIER	4-59	SENSOR & CIRCUIT TESTS	3-55
REGULATOR/RECTIFIER	4-62	SHIFT POSITION SENSOR	3-107

# 10-18 INDEX

TEMPERATURE SENSORS	3-98	FUEL LINES/FITTINGS	3-9
THROTTLE BODY & INTAKE MANIFOLD	3-77	SERVICE	3-10
TP SENSOR	3-102	TESTING	3-9
TROUBLESHOOTING	3-48	FUEL PRESSURE REGULATOR	3-102
VAPOR SEPARATOR TANK & HIGH PRES. FUEL PUMP	3-86	FUEL PRIMER	
ELECTRONIC IGNITION SYSTEMS	2-48	ELECTRIC	3-44
INSPECTION	2-48	MANUAL	3-42
ELECTRONIC TOOLS	1-23	FUEL PUMP	
BATTERY CHARGERS	1-23	CARBURETOR	3-39
BATTERY TESTERS	1-23	EFI (LOW)	3-83
GAUGES	1-24	EFI (HIGH)	3-86
MULTI-METERS (DVOMS)	1-23	OVERHAUL	3-41
<b>EMERGENCY STARTING</b>	<b>10-16</b>	REMOVAL & INSTALLATION	3-40
GENERAL INFORMATION	10-16	TESTING	3-39
ENGINE CONTROL MODULE	3-97	FUEL RAIL & INJECTORS	3-91
REMOVAL & INSTALLATION	3-97	REMOVAL & INSTALLATION	3-93
ENGINE COVER LATCHES	2-6	TESTING	3-92
LUBRICATION	2-6	<b>FUEL SYSTEM BASICS</b>	<b>3-2</b>
RECOMMENDED LUBRICANT	2-6	FUEL	3-2
ENGINE COVERS	2-12	FUEL SYSTEM PRESSURIZATION	3-4
REMOVAL & INSTALLATION	2-12	FUEL SYSTEM SERVICE CAUTIONS	3-2
<b>ENGINE DIAGNOSTIC CHARTS</b>	<b>3-69</b>	FUEL SYSTEM PRESSURIZATION	3-4
INLINE POWERHEADS	3-69	CHECKING FOR LEAKS	3-5
V6 POWERHEADS	3-72	RELIEVING PRESSURE	3-4
<b>ENGINE IDENTIFICATION</b>	<b>2-2</b>	FUEL SYSTEM SERVICE CAUTIONS	3-2
MODEL CODE	2-3	FUEL TANK	3-6
SERIAL NUMBERS	2-4	<b>FUEL TANK AND LINES</b>	<b>3-6</b>
<b>ENGINE MAINTENANCE</b>	<b>2-12</b>	FUEL LINES/FITTINGS	3-9
ANODES (ZINCS)	2-34	FUEL TANK	3-6
COOLING SYSTEM	2-15	GAS-CHARGED TILT ASSIST CYLINDER	8-33
ENGINE COVERS	2-12	REMOVAL & INSTALLATION	8-33
ENGINE OIL (2-STROKE)	2-17	GEARCASE OIL	2-24
ENGINE OIL AND FILTER (4-STROKE)	2-19	DRAINING & FILLING	2-25
FUEL & BREATHER LINES	2-30	LEVEL & CONDITION	2-24
FUEL FILTER	2-26	OIL RECOMMENDATIONS	2-24
GEARCASE OIL	2-24	<b>GEARCASE SERVICE</b>	<b>7-2</b>
PROPELLER	2-30	DESCRIPTION & OPERATION	7-2
TIMING BELT	2-36	3.5 HP 2-STROKE	7-6
ENGINE MOUNT CLAMP SCREWS	2-6	4/5/6 HP (138cc) 4-STROKE	7-9
LUBRICATION	2-6	6 HP (128cc) 4-STROKE	7-13
RECOMMENDED LUBRICANT	2-6	6/8 HP (164cc) 2-STROKE	7-13
ENGINE OIL (2-STROKE)	2-17	8 HP 4-STROKE	7-18
FILLING	2-18	9.9/15 HP 4-STROKE	7-22
FUEL:OIL RATIO	2-18	9.9/15 HP 2-STROKE	7-18
OIL RECOMMENDATIONS	2-17	25/30 HP 2-STROKE	7-26
PRE-MIX	2-18	25 HP V2 4-STROKE	7-32
ENGINE OIL/FILTER (4-STROKE)	2-19	25/30 HP 4-STROKE	7-48
OIL CHANGE & FILTER	2-21	40/50 HP (3-CYL) 4-STROKE	7-48
OIL LEVEL	2-19	40/50 HP (737cc) NON-COMMERCIAL 2-STROKE	7-35
OIL RECOMMENDATIONS	2-19	55 HP (737cc) COMMERCIAL	7-42
ENGINE TEMPERATURE SENSORS	4-111	60/70 HP 4-STROKE	7-58
ENGINE TEMPERATURE SWITCHES	4-111	90/115/140 HP 4-STROKE	7-65
REMOVAL & INSTALLATION	4-112	90/105/115 HP V4 2-STROKE	7-74
TESTING	4-111	150/175 HP V6 2-STROKE	7-74
EVAPORATION PURGE VALVE	3-103	200/225/250 HP 4-STROKE	7-87
CHECKING	3-103	<b>HAND REWIND STARTERS</b>	<b>10-2</b>
<b>FASTENERS, MEASUREMENTS AND CONVERSIONS</b>	<b>1-26</b>	GENERAL INFORMATION	10-2
BOLTS, NUTS & OTHER THREADED RETAINERS	1-26	INTRODUCTION	10-2
STANDARD & METRIC MEASUREMENTS	1-27	3.5 HP MOTORS	10-2
TORQUE	1-27	4/5/6 HP (138CC) 4-STROKE MOTORS	10-5
FIBERGLASS HULL	2-39	6 HP (128CC)/8 HP 4-STROKE & 6/8/9.9/15 HP	
INSPECTION AND CARE	2-39	2-STROKE MOTORS	10-6
FLAME ARRESTER	3-76	9.9/15 HP AND 25 HP V2 4-STROKE MOTORS	10-8
REMOVAL & INSTALLATION	3-76	25/30 HP 2-STROKE MOTORS	10-10
FLYWHEEL	6-2	40/50/55 HP 2-CYLINDER MOTORS	10-13
REMOVAL & INSTALLATION	6-2	3-6 CYLINDER MODELS	10-16
FUEL	3-2	HAND TOOLS	1-19
FUEL FILTER	2-26	BREAKER BARS	1-20
CARBURETED MOTORS	2-26	HAMMERS	1-22
FUEL INJECTED MOTORS	2-28	PLIERS	1-21
FUEL/WATER SEPARATING FILTERS	2-30	SCREWDRIVERS	1-21

SOCKET SETS .....	1-19	DESCRIPTION & OPERATION .....	5-2
WRENCHES .....	1-21	OMS PICK-UP AND OIL SUPPLY HOSE .....	5-5
<b>HOW TO USE THIS MANUAL .....</b>	<b>1-2</b>	OMS PUMP ASSEMBLY .....	5-6
AVOIDING COMMON MISTAKES .....	1-3	OIL RECIRCULATION & VENT HOSES .....	5-10
AVOIDING TROUBLE .....	1-2	OMS VERIFICATION & TROUBLESHOOTING .....	5-2
CAN YOU DO IT? .....	1-2	PULSE LIMITER .....	5-6
DIRECTIONS & LOCATIONS .....	1-2	OIL PRESSURE - 4-STROKE .....	5-19
MAINTENANCE OR REPAIR? .....	1-2	TESTING .....	5-19
PROFESSIONAL HELP .....	1-3	OIL PRESSURE SWITCH .....	4-112
PURCHASING PARTS .....	1-3	REMOVAL & INSTALLATION .....	4-113
WHERE TO BEGIN .....	1-2	TESTING .....	4-113
IAC VALVE .....	3-104	OIL PRESSURE SWITCH & WARNING SYSTEM .....	5-27
REMOVAL & INSTALLATION .....	3-105	OIL PUMP - 4-STROKE .....	5-20
TESTING .....	3-104	REMOVAL, OVERHAUL & INSTALLATION .....	5-20
IGNITION COILS .....	4-43	OIL RECIRCULATION & VENT HOSES .....	5-10
DESCRIPTION & OPERATION .....	4-43	OMS PICK-UP & OIL SUPPLY HOSE .....	5-5
REMOVAL & INSTALLATION .....	4-47	INSPECTION & SERVICE .....	5-5
TESTING .....	4-44	OMS PUMP ASSEMBLY .....	5-6
<b>IGNITION SYSTEMS .....</b>	<b>4-8</b>	OVERHAUL .....	5-7
CHARGE COIL .....	4-18	REMOVAL & INSTALLATION .....	5-6
DESCRIPTION & OPERATION .....	4-8	POWER COIL .....	4-31
IGNITION COILS .....	4-43	REMOVAL & INSTALLATION .....	4-33
POWER COIL .....	4-31	TESTING .....	4-32
POWER PACK (IGNITION MODULE) .....	4-38	POWER PACK (IGN. MODULE) .....	4-38
QUIKSTART SYSTEM VERIFICATION .....	4-51	REMOVAL & INSTALLATION .....	4-42
SENSOR/TRIGGER COIL .....	4-33	TESTING .....	4-38
SHIFT SWITCH .....	4-17	POWER TRIM/TILT RESERVOIR .....	2-6
TROUBLESHOOTING .....	4-10	FLUID LEVEL/CONDITION 2 -6 .....	2-6
INTAKE MANIFOLD .....	3-77	RECOMMENDED LUBRICANT .....	2-6
REMOVAL & INSTALLATION .....	3-77	<b>POWERHEAD .....</b>	<b>6-2</b>
LINKAGE, CABLES AND SHAFTS .....	2-7	FLYWHEEL .....	6-2
LUBRICATION .....	2-7	POWERHEAD CLEANING & INSPECTION .....	6-104
RECOMMENDED LUBRICANT .....	2-7	POWERHEAD SERVICE .....	6-5
<b>LUBRICATION SERVICE .....</b>	<b>2-5</b>	TIMING BELT/CHAIN/GEAR .....	6-117
ELECTRIC STARTER MOTOR PINION .....	2-5	<b>POWERHEAD BREAK-IN .....</b>	<b>6-129</b>
ENGINE COVER LATCHES .....	2-6	BREAKING IN A POWERHEAD .....	6-129
ENGINE MOUNT CLAMP SCREWS .....	2-6	POWERHEAD CLEANING & INSPECTION .....	6-104
LINKAGE, CABLES AND SHAFTS .....	2-7	CLEANING .....	6-105
POWER TRIM/TILT RESERVOIR .....	2-6	CYLINDER BLOCK COMPONENT INSPECTION .....	6-110
STEERING (ARM/SHAFT & FRICTION SCREW) .....	2-10	CYLINDER HEAD COMPONENT INSPECTION .....	6-106
SWIVEL BRACKET .....	2-11	<b>POWERHEAD SERVICE .....</b>	<b>6-6</b>
TILT ASSEMBLY .....	2-11	3.5 HP MOTORS .....	6-6
<b>LUBRICATION SYSTEM - 4-STROKE MOTORS .....</b>	<b>5-12</b>	6 HP (128cc) 4-STROKE .....	6-8
DESCRIPTION & OPERATION .....	5-12	4/5/6 HP (138cc) 4-STROKE .....	6-14
OIL COOLER .....	5-27	6/8 HP 2-STROKE .....	6-18
OIL FLOW DIAGRAMS .....	5-12	8 HP 4-STROKE .....	6-23
OIL PRESSURE .....	5-19	9.9/15 HP 2-STROKE .....	6-28
OIL PRESSURE SWITCH & WARNING SYSTEM .....	5-27	9.9/15 HP 4-STROKE .....	6-33
OIL PUMP .....	5-20	25/30 HP 2-STROKE .....	6-39
MANUAL FUEL PRIMER .....	3-42	25 HP V2 4-STROKE .....	6-45
SERVICE .....	3-43	40/50/55 HP 2-CYL 2-STROKE .....	6-50
TESTING .....	3-43	25/30 HP (3-CYL) 4-STROKE .....	6-57
MAP SENSOR .....	3-100	40/50 HP 4-STROKE .....	6-64
REMOVAL & INSTALLATION .....	3-101	60/70 HP 4-STROKE .....	6-71
TESTING .....	3-101	90/115/140 HP 4-STROKE .....	6-79
MEASURING TOOLS .....	1-24	90/105/115 HP V4 2-STROKE .....	6-86
DEPTH GAUGES .....	1-26	150/175 HP V6 2-STROKE .....	6-86
DIAL INDICATORS .....	1-25	200/225/250 HP 4-STROKE .....	6-96
MICROMETERS & CALIPERS .....	1-24	PRE-WIRED BINNACLE MOUNT REMOTE UNITS .....	9-11
TELESCOPING GAUGES .....	1-26	OVERHAUL .....	9-11
<b>MECHANICAL HYDRAULIC TILT ASSIST .....</b>	<b>8-33</b>	PROPELLER .....	2-30
GAS-CHARGED TILT ASSIST CYLINDER .....	8-33	INSPECTION .....	2-31
MULTI-STAGE INDUCTION COMPONENTS .....	3-102	REMOVAL & INSTALLATION .....	2-31
NEUTRAL (SAFETY) SWITCH .....	3-105	PULSE LIMITER .....	5-6
REMOVAL & INSTALLATION .....	3-107	CHECKING .....	5-6
TESTING .....	3-106	QUIKSTART SYSTEM VERIFICATION .....	4-51
OIL COOLER - 4-STROKE .....	5-27	FUNCTIONAL CHECK .....	4-51
REMOVAL & INSTALLATION .....	5-27	GENERAL INFORMATION .....	4-51
OIL FLOW DIAGRAMS - 4-STROKE .....	5-12	RE-COMMISSIONING .....	2-89
OIL LEVEL SWITCH .....	4-113	REMOVAL FROM STORAGE .....	2-89
<b>OIL METERING SYSTEM (OMS) - 2-STROKE MOTORS .....</b>	<b>5-2</b>	RECTIFIER .....	4-59

# 10-20 INDEX

REMOVAL & INSTALLATION.....	4-60	GENERAL ENGINE SYSTEM - 90-250 HP.....	2-94
TESTING.....	4-59	IGNITION TESTING.....	4-144
REGULATIONS FOR YOUR BOAT.....	1-4	IGNITION TESTING - CARB. MOTORS.....	4-144
CAPACITY INFORMATION.....	1-4	LUBRICATION SERVICES.....	2-96
CERTIFICATE OF COMPLIANCE.....	1-5	MAINTENANCE INTERVALS.....	2-95
DOCUMENTING OF VESSELS.....	1-4	METRIC BOLTS - TYPICAL TORQUE VALUES.....	1-28
HULL IDENTIFICATION NUMBER.....	1-4	SHIFT ROD HEIGHT SPECIFICATIONS - 40-175 HP 2-STROKE.....	7-96
LENGTH OF BOATS.....	1-4	SPARK PLUG DIAGNOSIS.....	2-91
NUMBERING OF VESSELS.....	1-4	TUNE-UP - 1-CYL, 2-CYL & 25/30 HP 3-CYL.....	2-98
REGISTRATION OF BOATS.....	1-4	TUNE-UP - 40/50 HP 3-CYL & ALL L4, V4 & V6.....	2-99
SALES AND TRANSFERS.....	1-4	TWO-STROKE MOTOR FUEL:OIL RATIO.....	2-96
VENTILATION.....	1-5	U.S. STANDARD BOLTS - TYPICAL TORQUE VALUES.....	1-28
VENTILATION SYSTEMS.....	1-5	VALVE CLEARANCE.....	2-100
REGULATOR/RECTIFIER.....	4-62	3.5 HP (78cc) 1-CYL.....	6-130
REMOVAL & INSTALLATION.....	4-65	6 HP (128cc) 1-CYL 4-STROKE.....	6-130
TESTING.....	4-62	4/5/6 HP (138cc) 1-CYL 4-STROKE.....	6-131
<b>REMOTE CONTROLS.....</b>	<b>9-2</b>	6/8 HP 2-CYL 2-STROKE.....	6-132
INTRODUCTION.....	9-2	8 HP 2-CYL 4-STROKE.....	6-133
DESCRIPTION & OPERATION.....	9-2	9.9/15 HP 2-CYL 2-STROKE.....	6-133
CONCEALED SIDE MOUNT REMOTE UNITS.....	9-9	9.9/15HP 2-CYL 4-STROKE.....	6-134
DUAL HANDLE SURFACE MOUNT REMOTE UNITS.....		25/30 HP (521cc) 2-CYL 2-STROKE.....	6-135
FOR SINGLE MOTORS.....	9-7	25 HP (538cc) V2 4-STROKE.....	6-136
PRE-WIRED BINNACLE MOUNT REMOTE UNITS.....	9-11	25-55 HP (737cc) 2-CYL 2-STROKE.....	6-137
SMALL MOTOR STANDARD SURFACE REMOTE UNITS.....	9-5	25/30 HP (597cc) 3-CYL 4-STROKE.....	6-138
STANDARD SURFACE MOUNT REMOTE UNITS.....	9-3	40/50 HP 3-CYL 4-STROKE.....	6-140
REQUIRED SAFETY EQUIPMENT.....	1-5	60/70 HP 4-CYL 4-STROKE.....	6-142
FIRE EXTINGUISHERS.....	1-6	90-115 HP V4 2-SROKE.....	6-144
PERSONAL FLOTATION DEVICES.....	1-7	140 HP 4-CYL 4-STROKE.....	6-146
SOUND PRODUCING DEVICES.....	1-8	150/175 HP V6 2-STROKE.....	6-148
TYPES OF FIRES.....	1-5	200/225/250 HP V6 4-STROKE.....	6-149
VISUAL DISTRESS SIGNALS.....	1-8	STANDARD SURFACE MOUNT REMOTE UNITS.....	9-3
WARNING SYSTEM.....	1-7	OVERHAUL.....	9-3
RIGGING.....	9-14	STARTER MOTOR.....	4-90
<b>SAFETY IN SERVICE.....</b>	<b>1-12</b>	CLEANING & INSPECTION.....	4-103
DO'S.....	1-12	DISASSEMBLY & ASSEMBLY.....	4-96
DON'TS.....	1-12	GENERAL INFORMATION.....	4-90
SAFETY TOOLS.....	1-16	REMOVAL & INSTALLATION.....	4-92
EYE AND EAR PROTECTION.....	1-16	TESTING.....	4-90
WORK CLOTHES.....	1-17	STARTER MOTOR PINION.....	2-5
WORK GLOVES.....	1-16	LUBRICATION.....	2-5
<b>SELF DIAGNOSTIC SYSTEM.....</b>	<b>3-51</b>	RECOMMENDED LUBRICANT.....	2-5
READING & CLEARING CODES.....	3-51	STARTER MOTOR SOLENOID/RELAY SWITCH.....	4-105
SENSOR & CIRCUIT TESTS.....	3-55	REMOVAL & INSTALLATION.....	4-107
SHIFT POSITION SENSOR.....	3-107	TESTING.....	4-106
TESTING.....	3-107	<b>STARTING CIRCUIT.....</b>	<b>4-71</b>
SHIFT SWITCH.....	4-17	DESCRIPTION & OPERATION.....	4-71
DIODE & CONNECTOR TEST.....	4-18	SOLENOID/RELAY SWITCH.....	4-105
ELIMINATION TEST.....	4-17	STARTER MOTOR.....	4-90
GENERAL INFORMATION.....	4-17	TROUBLESHOOTING.....	4-71
SWITCH RESISTANCE TEST.....	4-17	STATOR/BATTERY CHARGE COIL.....	4-57
<b>SHOP EQUIPMENT.....</b>	<b>1-16</b>	REMOVAL & INSTALLATION.....	4-58
SAFETY TOOLS.....	1-16	TESTING.....	4-57
SMALL MOTOR STANDARD SURFACE REMOTE UNITS.....	9-5	STEERING.....	2-10
OVERHAUL.....	9-5	LUBRICATION.....	2-10
SPARK PLUG WIRES.....	2-47	RECOMMENDED LUBRICANT.....	2-10
REMOVAL & INSTALLATION.....	2-48	<b>STORAGE.....</b>	<b>2-86</b>
TESTING.....	2-47	RE-COMMISSIONING.....	2-89
SPARK PLUGS.....	2-43	WINTERIZATION.....	2-86
HEAT RANGE.....	2-43	SWIVEL BRACKET.....	2-11
INSPECTION & GAPPING.....	2-47	LUBRICATION.....	2-11
READING SPARK PLUGS.....	2-45	RECOMMENDED LUBRICANT.....	2-11
REMOVAL & INSTALLATION.....	2-44	TEMPERATURE SENSORS.....	3-98
<b>SPECIFICATIONS.....</b>		REMOVAL & INSTALLATION.....	3-100
CAPACITIES - 2-STROKE.....	2-97	TESTING.....	3-98
CAPACITIES - 4-STROKE.....	2-97	THERMOSTAT.....	5-47
CARBURETOR SET UP.....	3-47	EXPLODED VIEWS.....	5-48
CONVERSION FACTORS.....	1-27	REMOVAL & INSTALLATION.....	5-47
COOLING SYSTEM.....	5-62	THROTTLE BODY.....	3-77
GENERAL ENGINE.....	2-92	REMOVAL & INSTALLATION.....	3-77
GENERAL ENGINE SYSTEM - 3.5-115 HP.....	2-93	TILT ASSEMBLY.....	2-11

LUBRICATION .....	2-11	OIL METERING SYSTEM .....	5-2
RECOMMENDED LUBRICANT .....	2-11	STARTING SYSTEM .....	4-71
TILT LIMIT SWITCH (FASTRAK(r)) .....	8-9	WARNING SYSTEM .....	4-109
ADJUSTMENT .....	8-9	<b>TUNE-UP .....</b>	<b>2-39</b>
<b>TIMING AND SYNCHRONIZATION .....</b>	<b>2-48</b>	COMPRESSION TESTS .....	2-41
HOMEMADE SYNCHRONIZATION TOOL .....	2-49	DE-CARBONING THE PISTONS .....	2-40
3.5 HP .....	2-50	ELECTRONIC IGNITION SYSTEMS .....	2-48
4/5/6 HP (138cc) 4-STROKE .....	2-50	INTRODUCTION TO TUNE-UPS .....	2-39
6/8 HP (164cc) 2-STROKE .....	2-51	SPARK PLUG WIRES .....	2-47
6 HP (128cc) & 8 HP 4-STROKE .....	2-52	SPARK PLUGS .....	2-43
9.9/15 HP 2-STROKE .....	2-53	TUNE-UP SEQUENCE .....	2-39
9.9/15 HP (302cc) 4-STROKE .....	2-55	<b>UNDERSTANDING AND TROUBLESHOOTING</b>	
25/30 HP 2-CYL .....	2-56	<b>ELECTRICAL SYSTEMS .....</b>	<b>4-2</b>
25 HP V2 4-STROKE .....	2-58	BASIC ELECTRICAL THEORY .....	4-2
40/50/55 HP 2-CYL .....	2-60	ELECTRICAL COMPONENTS .....	4-2
25/30 HP (3-CYL) 4-STROKE .....	2-64	ELECTRICAL SYSTEM PRECAUTIONS .....	4-8
40/50 HP 4-STROKE .....	2-67	ELECTRICAL TESTING .....	4-6
60/70 HP 4-STROKE .....	2-68	TEST EQUIPMENT .....	4-4
90/115/140 HP 4-STROKE .....	2-69	TROUBLESHOOTING ELECTRICAL SYSTEMS .....	4-6
90/105/115 HP V4 & 150/175 HP V6 .....	2-70	WIRE AND CONNECTOR REPAIR .....	4-8
200/225/250 HP 4-STROKE .....	2-75	<b>VALVE CLEARANCE .....</b>	<b>2-76</b>
TIMING BELT .....	2-36	VALVE LASH .....	2-76
TIMING BELT/CHAIN/GEAR .....	6-117	VAPOR SEPARATOR TANK .....	3-86
REMOVAL & INSTALLATION .....	6-118	OVERHAUL .....	3-90
<b>TOOLS .....</b>	<b>1-18</b>	REMOVAL & INSTALLATION .....	3-88
ELECTRONIC TOOLS .....	1-23	TESTING .....	3-87
HAND TOOLS .....	1-19	WARNING HORN/BUZZER .....	4-113
MEASURING TOOLS .....	1-24	TESTING .....	4-113
OTHER COMMON TOOLS .....	1-22	<b>WARNING SYSTEM .....</b>	<b>4-107</b>
SPECIAL TOOLS .....	1-23	DESCRIPTION & OPERATION .....	4-107
TP SENSOR .....	3-102	OIL LEVEL SWITCH .....	4-113
REMOVAL & INSTALLATION .....	3-102	OIL PRESSURE SWITCH .....	4-112
TESTING .....	3-102	TEMPERATURE SENSORS .....	4-111
TRIM SENDING UNIT .....	8-9	TEMPERATURE SWITCHES .....	4-111
ADJUSTMENT .....	8-9	TROUBLESHOOTING .....	4-109
TRIM/TILT ASSEMBLY .....		WARNING HORN OR BUZZER .....	4-113
FASTRAK(r) 2-STROKE .....	8-10	WATER PRESSURE RELIEF VALVE .....	5-50
SMALL-MOTOR 2-STROKE .....	8-12	<b>WATER PUMP .....</b>	<b>5-32</b>
25/30 HP 4-STROKE .....	8-23	INSPECTION & OVERHAUL .....	5-47
40/50 HP 4-STROKE .....	8-24	REMOVAL & INSTALLATION .....	5-32
60/70 HP AND 90/115 HP 4-STROKE .....	8-26	3.5 HP .....	5-32
140 HP 4-STROKE .....	8-28	4/5/6 HP (138cc) 4-STROKE .....	5-33
200/225/250 HP 4-STROKE .....	8-30	6/8 HP (164cc) .....	5-34
<b>TRIM/TILT SYSTEMS - 2-STROKE .....</b>	<b>8-2</b>	6 HP (128cc) 4-STROKES .....	5-35
DESCRIPTION & OPERATION .....	8-3	8 HP 4-STROKES .....	5-35
INTRODUCTION .....	8-2	9.9/15 HP 2-STROKES .....	5-35
SYSTEM DIAGNOSIS .....	8-5	9.9/15 HP 4-STROKE .....	5-37
SYSTEM IDENTIFICATION .....	8-2	25/30 HP 2-STROKE .....	5-38
TILT LIMIT SWITCH .....	8-9	25 HP V2 4-STROKE .....	5-39
TRIM SENDING UNIT .....	8-9	25/30 HP (3-CYL) 4-STROKE .....	5-39
TRIM/TILT ASSEMBLY - FASTRAK(r) .....	8-10	40/50 HP (2-CYL) 2-STROKE .....	5-42
TRIM/TILT ASSEMBLY - SMALL-MOTOR CONVENTIONAL .....	8-12	40/50 HP 4-STROKE .....	5-39
WIRING .....	8-13	55 HP COMMERCIAL 2-STROKE .....	5-40
<b>TRIM/TILT SYSTEMS - 4-STROKE .....</b>	<b>8-15</b>	60-140 HP 4-STROKE .....	5-42
DESCRIPTION & OPERATION .....	8-15	90-175 V4/V6 2-STROKE .....	5-42
INTRODUCTION .....	8-15	200/225/250 HP 4-STROKE MODELS .....	5-46
SYSTEM DIAGNOSIS .....	8-18	<b>WINTERIZATION .....</b>	<b>2-86</b>
TRIM/TILT ASSEMBLY - 25/30 HP .....	8-23	PREPPING FOR STORAGE .....	2-86
TRIM/TILT ASSEMBLY - 40/50 HP .....	8-24	STORAGE CHECKLIST .....	2-87
TRIM/TILT ASSEMBLY - 60/70/90/115 HP .....	8-26	<b>WIRING DIAGRAMS .....</b>	<b>4-114</b>
TRIM/TILT ASSEMBLY - 140 HP .....	8-28	INDEX .....	4-114
TRIM/TILT ASSEMBLY - 200/225/250 HP .....	8-30	SWITCHES & INSTRUMENTS .....	4-142
<b>TROUBLESHOOTING</b>		TRIM/TILT - 2-STROKE .....	8-13
BASIC OPERATING PRINCIPLES .....	1-13	TRIM/TILT - 4-STROKE .....	8-16
CARBURETOR .....	3-13	1-CYL MOTORS .....	4-114
CHARGING SYSTEM .....	4-54	2-CYL MOTORS .....	4-116
COOLING SYSTEM .....	5-29	3-CYL MOTORS .....	4-126
EFI .....	3-48	4-CYL MOTORS .....	4-130
ELECTRICAL SYSTEMS .....	4-6	6-CYL MOTORS .....	4-136
IGNITION SYSTEMS .....	4-10		