

# CONTENTS

---

<b>1</b>	<b>GENERAL INFORMATION, SAFETY AND TOOLS</b>	HOW TO USE THIS MANUAL	1-2
		BOATING SAFETY	1-4
		BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
		SAFETY IN SERVICE	1-12
		TROUBLESHOOTING	1-13
		SHOP EQUIPMENT	1-16
		TOOLS	1-18
		FASTENERS, MEASUREMENT, AND CONVERSIONS	1-26
		SPECIFICATIONS	1-27
<hr/>			
<b>2</b>	<b>MAINTENANCE &amp; TUNE-UP</b>	GENERAL INFORMATION	2-2
		ENGINE MAINTENANCE	2-6
		BOAT MAINTENANCE	2-54
		TUNE-UP	2-57
		VALVE CLEARANCE	2-65
		TIMING AND SYNCHRONIZATION	2-82
		STORAGE	2-113
		CLEARING A SUBMERGED MOTOR	2-116
		SPECIFICATIONS	2-117
<hr/>			
<b>3</b>	<b>FUEL SYSTEMS</b>	FUEL SYSTEM BASICS	3-2
		FUEL TANK & LINES	3-6
		CARBURETED FUEL SYSTEM	3-12
		ELECTRONIC FUEL INJECTION (EFI)	3-46
		TROUBLESHOOTING CHARTS - CARBURETED	3-111
		TROUBLESHOOTING CHARTS - PGM-FFI/EFI	3-124
		SPECIFICATIONS	
<hr/>			
<b>4</b>	<b>IGNITION &amp; ELECTRICAL SYSTEMS</b>	UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS SPECIFICATIONS	4-2
		IGNITION COILS	4-21
		CHARGING CIRCUIT	4-39
		STARTING CIRCUIT	4-55
		WARNING SYSTEM	4-74
		TROUBLESHOOTING CHARTS	4-79
		WIRING DIAGRAMS	4-92
		<hr/>	
<b>5</b>	<b>LUBRICATION &amp; COOLING</b>	LUBRICATION SYSTEM	5-2
		COOLING SYSTEM	5-11
		SPECIFICATIONS	5-28

# CONTENTS

---

POWERHEAD 6-2  
ENGINE RECONDITIONING 6-108  
POWERHEAD BREAK-IN 6-126  
SPECIFICATIONS 6-127

**POWERHEAD**

**6**

---

GEARCASE 7-2  
JET DRIVE 7-72

**LOWER UNIT**

**7**

---

TRIM & TILT SYSTEMS 8-2  
GAS ASSIST TILT ASSEMBLY 8-3  
MANUAL TILT 8-3  
POWER TRIM & TILT 8-5

**TRIM & TILT SYSTEMS**

**8**

---

REMOTE CONTROL BOX 9-2  
TILLER HANDLE 9-20

**REMOTE CONTROLS**

**9**

---

HAND REWIND STARTERS 10-2

**HAND REWIND STARTER**

**10**

---

MASTER INDEX 10-15

**MASTER INDEX**

AIR INTAKE SILENCER .....	3-70	DESCRIPTION & OPERATION .....	3-12
REMOVAL & INSTALLATION .....	3-70	FUEL PUMP .....	3-42
ALTERNATOR .....	4-46	TROUBLESHOOTING .....	3-14
OVERHAUL & CHECKING .....	4-48	CARBURETOR SERVICE .....	3-16
REMOVAL & INSTALLATION .....	4-47	BF2D MOTORS .....	3-16
ALTERNATOR DRIVE BELTS .....	2-51	BF5A MOTORS .....	3-18
INSPECTION & ADJUSTMENT .....	2-51	BF8A MOTORS .....	3-20
REMOVAL & INSTALLATION .....	2-52	BF15A MOTORS .....	3-22
ANCHORS .....	1-10	BF8D/BF9.9D & BF15D/BF20D MOTORS .....	3-25
ANODES .....	2-42	25-90 HP MOTORS .....	3-29
GENERAL INFORMATION .....	2-42	<b>CHARGING CIRCUIT .....</b>	<b>4-39</b>
INSPECTION .....	2-42	ALTERNATOR .....	4-46
LOCATION .....	2-42	BATTERY .....	4-53
SERVICING .....	2-43	BATTERY CHARGE COIL/STATOR .....	4-42
AVOIDING COMMON MISTAKES .....	1-3	DESCRIPTION & OPERATION .....	4-39
AVOIDING TROUBLE .....	1-2	RECTIFIER .....	4-49
BAILING DEVICES .....	1-10	REGULATOR/RECTIFIER .....	4-50
BALANCER CHAIN & ASSEMBLY .....	6-80	TROUBLESHOOTING .....	4-40
REMOVAL & INSTALLATION .....	6-80	CHEMICALS .....	1-17
BALANCER DRIVE BELT .....	2-52	CLEANERS .....	1-18
INSPECTION & ADJUSTMENT .....	2-52	LUBRICANTS & PENETRANTS .....	1-17
REMOVAL & INSTALLATION .....	2-53	SEALANTS .....	1-17
BARO SENSOR .....	3-106	<b>CLEARING A SUBMERGED MOTOR .....</b>	<b>2-116</b>
SERVICING .....	3-106	COMPASS .....	1-10
BASIC ELECTRICAL THEORY .....	4-2	INSTALLATION .....	1-11
HOW DOES ELECTRICITY WORK .....	4-2	PRECAUTIONS .....	1-11
OHM'S LAW .....	4-2	SELECTION .....	1-10
BASIC OPERATING PRINCIPLES .....	1-13	COMPRESSION TESTS .....	2-58
2-STROKE MOTORS .....	1-13	COMPRESSION CHECK .....	2-58
4-STROKE MOTORS .....	1-15	LEAKAGE CHECK .....	2-60
COMBUSTION .....	1-16	<b>COOLING SYSTEM</b>	
BATTERY		DESCRIPTION & OPERATION .....	5-11
CONSTRUCTION .....	4-54	ENGINE THERMO-SWITCH/THERMO-SENSOR &	
LOCATION .....	4-55	WARNING SYSTEM .....	5-27
MAINTENANCE .....	2-54	FLUSHING THE SYSTEM .....	2-20
MARINE BATTERIES .....	4-54	THERMOSTAT .....	5-23
RATINGS .....	4-54	TROUBLESHOOTING .....	5-13
RECOMMENDATIONS .....	4-54	WATER PRESSURE RELIEF VALVE .....	5-26
SERVICE .....	4-55	WATER PUMP .....	5-15
STORAGE .....	2-56	COURTESY MARINE EXAMINATIONS .....	1-10
TESTING .....	2-55	CRANKSHAFT, PISTON(S) & BEARINGS .....	6-81
BATTERY CHARGE COIL/STATOR .....	4-42	REMOVAL & INSTALLATION .....	6-81
DESCRIPTION & OPERATION .....	4-42	CYLINDER HEAD .....	6-47
REMOVAL & INSTALLATION .....	4-45	REMOVAL & INSTALLATION .....	6-47
TESTING .....	4-45	DESCRIPTION & OPERATION	
BEFORE/AFTER EACH USE .....	2-5	BATTERY CHARGE COIL/STATOR .....	4-42
VISUALLY INSPECTING THE BOAT & MOTOR .....	2-5	CARBURETOR .....	3-12
<b>BOAT MAINTENANCE .....</b>	<b>2-54</b>	CHARGING CIRCUIT .....	4-39
BATTERIES .....	2-54	EFI .....	3-47
FIBERGLASS HULL .....	2-57	GAS ASSIST TILT .....	8-3
<b>BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED) .....</b>	<b>1-10</b>	GEARCASE .....	7-4
ANCHORS .....	1-10	HAND REWIND STARTERS .....	10-2
BAILING DEVICES .....	1-10	IGNITION COILS .....	4-21
COMPASS .....	1-10	IGNITION MODULE/CDI UNIT .....	4-29
FIRST AID KIT .....	1-10	IGNITION SYSTEM - CARB .....	4-9
OAR/PADDLE .....	1-10	IGNITION SYSTEM - EFI MOTORS .....	4-10
TOOLS & SPARE PARTS .....	1-12	JET DRIVE .....	7-72
VHF-FM RADIO .....	1-10	LUBRICATION SYSTEM .....	5-2
<b>BOATING SAFETY .....</b>	<b>1-14</b>	MANUAL TILT .....	8-3
COURTESY MARINE EXAMINATIONS .....	1-10	POWER TRIM & TILT .....	8-5
REGULATIONS FOR YOUR BOAT .....	1-4	REMOTE .....	9-2
REQUIRED SAFETY EQUIPMENT .....	1-5	STARTER MOTOR .....	4-60
BOLTS, NUTS & OTHER THREADED RETAINERS .....	1-26	STARTING CIRCUIT .....	4-55
BREAKING IN A POWERHEAD .....	6-126	TILLER HANDLE .....	9-7
BUY OR REBUILD? .....	6-108	WARNING SYSTEM .....	4-74
CAMSHAFT, BEARINGS & LIFTERS .....	6-72	DIAGNOSTIC TROUBLE CODES .....	3-51
REMOVAL & INSTALLATION .....	6-72	CLEARING CODES .....	3-55
CAMSHAFT POSITION SENSOR .....	4-16	ECM CIRCUIT, PINOUTS & COMPONENT LOCATIONS .....	3-56
DESCRIPTION & OPERATION .....	4-16	GENERAL INFORMATION .....	3-51
REMOVAL & INSTALLATION .....	4-18	READING CODES .....	3-52
TESTING .....	4-16	SERVICE PRECAUTIONS .....	3-52
CARB CLEANING & INSPECTION .....	3-41	TROUBLE CODE CHARTS .....	3-54
<b>CARBURETED FUEL SYSTEM .....</b>	<b>3-12</b>	ELECTRICAL COMPONENTS .....	4-2
CARB CLEANING & INSPECTION .....	3-41	CONNECTORS .....	4-4
CARBURETOR SERVICE .....	3-16	GROUND .....	4-3

# 10-16 MASTER INDEX

LOAD	4-4	OIL LEVEL CHECK	2-14
POWER SOURCE	4-2	OIL & FILTER CHANGE	2-17
PROTECTIVE DEVICES	4-3	ENGINE OVERHAUL TIPS	6-109
STARTING CIRCUIT	4-55	OVERHAUL TIPS	6-109
SWITCHES & RELAYS	4-4	REPAIRING DAMAGED THREADS	6-109
WIRING & HARNESSSES	4-4	TOOLS	6-109
ELECTRICAL SYSTEM PRECAUTIONS	4-8	ENGINE PREPARATION	6-109
ELECTRICAL TESTING	4-7	<b>ENGINE RECONDITIONING</b>	<b>6-108</b>
OPEN CIRCUITS	4-7	BUY OR REBUILD?	6-108
RESISTANCE	4-7	CLEANING	6-110
SHORT CIRCUITS	4-8	ENGINE BLOCK, CRANK & PISTONS	6-117
VOLTAGE	4-7	ENGINE OVERHAUL TIPS	6-109
VOLTAGE DROP	4-7	ENGINE PREPARATION	6-109
<b>ELECTRONIC FUEL INJECTION (EFI)</b>	<b>3-46</b>	HEAD & VALVES	6-112
AIR/FUEL RATIO SENSOR	3-104	ENGINE THERMO-SWITCH/THERMO-SENSOR	
AIR INTAKE SILENCER	3-70	& WARNING SYSTEM 5-27	
BARO SENSOR	3-106	EXCITER COIL	4-13
DESCRIPTION & OPERATION	3-47	DESCRIPTION & OPERATION	4-13
DIAGNOSTIC TROUBLE CODES	3-51	REMOVAL & INSTALLATION	4-15
ENGINE CONTROL MODULE (ECM)	3-102	TESTING	4-13
FUEL INJECTION BASICS	3-47	<b>FASTENERS, MEASUREMENTS &amp; CONVERSIONS</b>	<b>1-26</b>
FUEL LINE CUT SOLENOID VALVE	3-109	BOLTS, NUTS & OTHER THREADED RETAINERS	1-26
FUEL PRESSURE REGULATOR	3-100	STANDARD & METRIC MEASUREMENTS	1-27
FUEL PUMP LOW PRESSURE	3-81	TORQUE	1-27
FUEL PUMP -HIGH PRESSURE	3-83	FIRE EXTINGUISHERS	1-5
FUEL RAIL & INJECTORS	3-97	CARE & TREATMENT	1-6
GENERAL INFORMATION	3-46	CONTENTS OF EXTINGUISHERS	1-6
IDLE AIR CONTROL (IAC) VALVE	3-107	EXTINGUISHER APPROVAL	1-6
INTAKE AIR BYPASS (IAB) CONTROL SOLENOID VALVE	3-109	HALON EXTINGUISHERS	1-6
KNOCK SENSOR	3-107	LEGAL REQUIREMENTS	1-6
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR	3-105	USING A EXTINGUISHER	1-6
O2 SENSOR	3-104	FIRST AID KIT	1-10
OIL PRESSURE SWITCH	3-109	FIBERGLASS HULL	2-57
TEMPERATURE SENSORS	3-103	INSPECTION & CARE	2-57
THROTTLE BODY & INTAKE MANIFOLD	3-73	FLYWHEEL	6-78
THROTTLE POSITION SENSOR (TPS)	3-106	REMOVAL & INSTALLATION	6-78
TIMING SENSORS	3-100	FUEL	3-2
TROUBLESHOOTING	3-49	ALCOHOL-BLENDED FUELS	3-3
VAPOR SEPARATOR TANK (VST)	3-83	HIGH ALTITUDE OPERATION	3-3
VTEC OIL CONTROL VALVE	3-108	OCTANE RATING	3-2
WATER LEVEL SWITCH	3-109	RECOMMENDATIONS	3-3
ELECTRONIC TOOLS	1-23	STALE/CONTAMINATED FUEL	3-3
BATTERY CHARGERS	1-23	VAPOR PRESSURE	3-3
BATTERY TESTERS	1-23	FUEL FILTER	2-25
GAUGES	1-24	HIGH-PRESSURE	2-29
MULTI-METERS (DVOMS)	1-24	LOW-PRESSURE	2-25
EMISSION CONTROL LABEL	2-5	FUEL INJECTION BASICS	3-47
ENGINE BLOCK, CRANK & PISTONS	6-117	FUEL LINE CUT SOLENOID VALVE	3-109
CYLINDER BLOCK COMPONENT INSPECTION	6-118	SERVICING	3-109
CYLINDER RIDGE REMOVAL	6-117	FUEL LINES & FITTINGS	3-9
GENERAL INFORMATION & TIPS	6-117	SERVICE	3-10
ENGINE CONTROL MODULE (ECM)	3-102	TESTING	3-9
SERVICING	3-102	FUEL PRESSURE REGULATOR	3-100
ENGINE COVERS	2-6	DESCRIPTION & OPERATION	3-100
REMOVAL & INSTALLATION	2-6	REMOVAL & INSTALLATION	3-100
<b>ENGINE MAINTENANCE</b>	<b>2-6</b>	TESTING	3-100
ALTERNATOR DRIVE BELTS	2-51	FUEL PUMP	
ANODES (ZINCS)	2-42	CARBURETOR	3-42
BALANCER DRIVE BELT	2-52	EFI - HIGH PRESSURE FUEL	3-83
COOLING SYSTEM	2-20	EFI - LOW PRESSURE	3-81
ENGINE COVERS	2-6	FUEL PUMP - CARB	3-42
ENGINE OIL	2-13	DESCRIPTION & OPERATION	3-42
FUEL FILTER	2-25	OVERHAUL	3-45
FUEL/WATER SEPARATOR	2-31	REMOVAL & INSTALLATION	3-44
GEARCASE (LOWER UNIT) OIL	2-22	TESTING	3-43
JET DRIVE BEARING	2-34	FUEL PUMP- EFI (HIGH PRESSURE)	3-83
JET DRIVE IMPELLER	2-40	CLEANING & INSPECTION	3-96
LUBRICATION POINTS	2-32	DESCRIPTION & OPERATION	3-83
PROPELLER	2-35	DISCHARGE TEST	3-84
SWIVEL CASE LINER, BUSHING & WATER SEAL	2-49	ELECTRICAL TEST	3-83
TIMING BELT	2-43	PRESSURE/REGULATOR TEST	3-84
ENGINE OIL	2-13	REMOVAL & INSTALLATION	3-85
ENGINE OIL RECOMMENDATIONS	2-13	FUEL PUMP - EFI (LOW PRESSURE)	3-81

<p>DESCRIPTION &amp; OPERATION ..... 3-81</p> <p>REMOVAL &amp; INSTALLATION ..... 3-82</p> <p>TESTING ..... 3-82</p> <p>FUEL RAIL &amp; INJECTORS ..... 3-97</p> <p>DESCRIPTION &amp; OPERATION ..... 3-97</p> <p>REMOVAL &amp; INSTALLATION ..... 3-98</p> <p>TESTING ..... 3-97</p> <p><b>FUEL SYSTEM BASICS ..... 3-2</b></p> <p>FUEL ..... 3-2</p> <p>FUEL SYSTEM PRESSURIZATION ..... 3-5</p> <p>SERVICE CAUTIONS ..... 3-2</p> <p>FUEL SYSTEM PRESSURIZATION ..... 3-5</p> <p>PRESSURIZING THE FUEL SYSTEM ..... 3-6</p> <p>RELIEVING FUEL SYSTEM PRESSURE ..... 3-5</p> <p>FUEL TANK ..... 3-6</p> <p>SERVICE ..... 3-7</p> <p><b>FUEL TANK &amp; LINES ..... 3-6</b></p> <p>FUEL LINES &amp; FITTINGS ..... 3-9</p> <p>FUEL TANK ..... 3-6</p> <p>FUEL/WATER SEPARATOR ..... 2-31</p> <p><b>GAS ASSISTED TILT ..... 8-3</b></p> <p>GAS ASSIST TILT ASSEMBLY ..... 8-3</p> <p>GAS ASSIST TILT ASSEMBLY ..... 8-3</p> <p>DESCRIPTION &amp; OPERATION ..... 8-3</p> <p>DISPOSAL ..... 8-5</p> <p>REMOVAL &amp; INSTALLATION ..... 8-3</p> <p><b>GEARCASE ..... 7-2</b></p> <p>DESCRIPTION &amp; OPERATION ..... 7-2</p> <p>GEARCASE - BF2D ..... 7-7</p> <p>GEARCASE - BF5A ..... 7-10</p> <p>GEARCASE - BF8A ..... 7-15</p> <p>GEARCASE - BF8D/BF9.9D &amp; BF15D/BF20D ..... 7-18</p> <p>GEARCASE - BF15A ..... 7-22</p> <p>GEARCASE - 25-50 HP ..... 7-27</p> <p>GEARCASE - 75-225 HP ..... 7-40</p> <p>GEARCASE ASSEMBLY - BF2D ..... 7-7</p> <p>ASSEMBLY ..... 7-10</p> <p>CLEANING &amp; INSPECTION ..... 7-8</p> <p>DISASSEMBLY ..... 7-8</p> <p>REMOVAL &amp; INSTALLATION ..... 7-7</p> <p>GEARCASE ASSEMBLY - BF5A ..... 7-10</p> <p>ASSEMBLY ..... 7-14</p> <p>CLEANING &amp; INSPECTION ..... 7-12</p> <p>DISASSEMBLY ..... 7-11</p> <p>REMOVAL &amp; INSTALLATION ..... 7-10</p> <p>SHIMMING ..... 7-13</p> <p>GEARCASE ASSEMBLY - BF8A ..... 7-15</p> <p>ASSEMBLY ..... 7-18</p> <p>CLEANING &amp; INSPECTION ..... 7-17</p> <p>DISASSEMBLY ..... 7-15</p> <p>REMOVAL &amp; INSTALLATION ..... 7-15</p> <p>SHIMMING ..... 7-17</p> <p>GEARCASE ASSEMBLY - BF8D/BF9.9D &amp; BF15D/BF20D ..... 7-18</p> <p>ASSEMBLY ..... 7-21</p> <p>CLEANING &amp; INSPECTION ..... 7-20</p> <p>DISASSEMBLY ..... 7-19</p> <p>REMOVAL &amp; INSTALLATION ..... 7-18</p> <p>SHIMMING ..... 7-21</p> <p>GEARCASE ASSEMBLY - BF15A ..... 7-22</p> <p>ASSEMBLY ..... 7-26</p> <p>CLEANING &amp; INSPECTION ..... 7-25</p> <p>DISASSEMBLY ..... 7-23</p> <p>REMOVAL &amp; INSTALLATION ..... 7-22</p> <p>SHIMMING ..... 7-25</p> <p>GEARCASE ASSEMBLY - 25-50 HP ..... 7-27</p> <p>ASSEMBLY ..... 7-38</p> <p>CLEANING &amp; INSPECTION ..... 7-32</p> <p>DISASSEMBLY ..... 7-28</p> <p>REMOVAL &amp; INSTALLATION ..... 7-27</p> <p>SHIMMING ..... 7-32</p> <p>GEARCASE ASSEMBLY - 75-225 HP ..... 7-40</p> <p>ASSEMBLY ..... 7-54</p> <p>CLEANING &amp; INSPECTING ..... 7-47</p>	<p>DISASSEMBLY ..... 7-41</p> <p>REMOVAL &amp; INSTALLATION ..... 7-40</p> <p>SHIMMING ..... 7-59</p> <p>GEARCASE OIL ..... 2-22</p> <p>CHECKING LEVEL &amp; CONDITION ..... 2-23</p> <p>DRAINING &amp; FILLING ..... 2-24</p> <p>RECOMMENDATIONS ..... 2-23</p> <p><b>GENERAL INFORMATION ..... 2-2</b></p> <p>BEFORE/AFTER EACH USE ..... 2-5</p> <p>EMISSION CONTROL LABEL ..... 2-5</p> <p>MAINTENANCE COVERAGE ..... 2-2</p> <p>MAINTENANCE EQUALS SAFETY ..... 2-2</p> <p>OUTBOARDS ON SAIL BOATS ..... 2-2</p> <p>SERIAL NUMBER IDENTIFICATION ..... 2-3</p> <p><b>HAND REWIND STARTERS ..... 10-2</b></p> <p>BF2D ..... 10-3</p> <p>BF5A ..... 10-4</p> <p>BF8A ..... 10-6</p> <p>BF15A ..... 10-7</p> <p>BF8D/BF9.9D &amp; BF15D/BF20D ..... 10-9</p> <p>BF25A/BF30A &amp; BF25D/BF30D ..... 10-11</p> <p>DESCRIPTION &amp; OPERATION ..... 10-2</p> <p>TROUBLESHOOTING ..... 10-2</p> <p><b>HAND TOOLS ..... 1-19</b></p> <p>BREAKER BARS ..... 1-20</p> <p>HAMMERS ..... 1-22</p> <p>PLIERS ..... 1-21</p> <p>SCREWDRIVERS ..... 1-21</p> <p>SOCKET SETS ..... 1-19</p> <p>TORQUE WRENCHES ..... 1-20</p> <p>WRENCHES ..... 1-21</p> <p><b>HEAD &amp; VALVES ..... 6-112</b></p> <p>CHECKING FOR VALVE LEAKAGE ..... 6-112</p> <p>GENERAL INFORMATION ..... 6-112</p> <p>HEAD COMPONENT INSPECTION ..... 6-114</p> <p>REMOVING THE VALVES ..... 6-113</p> <p><b>HOW TO USE THIS MANUAL ..... 1-2</b></p> <p>AVOIDING COMMON MISTAKES ..... 1-3</p> <p>AVOIDING TROUBLE ..... 1-2</p> <p>CAN YOU DO IT? ..... 1-2</p> <p>DIRECTIONS &amp; LOCATIONS ..... 1-2</p> <p>MAINTENANCE OR REPAIR? ..... 1-2</p> <p>PROFESSIONAL HELP ..... 1-3</p> <p>PURCHASING PARTS ..... 1-3</p> <p>WHERE TO BEGIN ..... 1-2</p> <p><b>IDLE AIR CONTROL (IAC) VALVE ..... 3-107</b></p> <p>SERVICING ..... 3-107</p> <p><b>IGNITION COILS ..... 4-21</b></p> <p>DESCRIPTION &amp; OPERATION ..... 4-21</p> <p>REMOVAL &amp; INSTALLATION ..... 4-25</p> <p>TESTING ..... 4-22</p> <p><b>IGNITION MODULE/CDI UNIT ..... 4-29</b></p> <p>DESCRIPTION &amp; OPERATION ..... 4-29</p> <p>TESTING ..... 4-30</p> <p><b>IGNITION SYSTEMS ..... 4-8</b></p> <p>DESCRIPTION &amp; OPERATION ..... 4-9</p> <p>EXCITER COIL ..... 4-13</p> <p>IGNITION COILS ..... 4-21</p> <p>IGNITION MODULE/CDI UNIT ..... 4-29</p> <p>PULSER/TRIGGER COIL/CAMSHAFT POSITION SENSOR ..... 4-16</p> <p>TROUBLESHOOTING ..... 4-11</p> <p><b>INTAKE AIR BYPASS (IAB) CONTROL SOLENOID VALVE ..... 3-109</b></p> <p>SERVICING ..... 3-109</p> <p><b>INTAKE MANIFOLD ..... 3-73,6-44</b></p> <p>REMOVAL &amp; INSTALLATION ..... 3-73,6-44</p> <p><b>JET DRIVE ..... 7-72</b></p> <p>DESCRIPTION &amp; OPERATION ..... 7-72</p> <p>IMPELLER ..... 7-72</p> <p>JET DRIVE ADJUSTMENTS ..... 7-79</p> <p>JET DRIVE ASSEMBLY ..... 7-74</p> <p>JET DRIVE ADJUSTMENTS ..... 7-79</p> <p>GATE LINKAGE ..... 7-79</p> <p>TRIM ADJUSTMENT ..... 7-80</p>
--	---

# 10-18 MASTER INDEX

JET DRIVE ASSEMBLY	7-74	CLEANING & INSPECTION	8-17
ASSEMBLY	7-78	DISASSEMBLY	8-14
CLEANING & INSPECTION	7-75	REMOVAL & INSTALLATION	8-9
DISASSEMBLY	7-75	TESTING	8-8
REMOVAL & INSTALLATION	7-74	POWER TRIM/TILT MOTOR	8-18
JET DRIVE BEARING	2-34	OVERHAUL & INSPECTION	8-19
GREASE REPLACEMENT	2-35	REMOVAL & INSTALLATION	8-18
LUBRICATION	2-34	TESTING	8-18
RECOMMENDED LUBRICANT	2-34	POWER TRIM/TILT SWITCH	8-20
JET DRIVE IMPELLER	2-40	TESTING	8-20
IMPELLER CLEARANCE	2-41	<b>POWERHEAD</b>	<b>6-2</b>
INSPECTION	2-40	REMOVAL & INSTALLATION	6-2
REMOVAL, SHIMMING & INSTALLATION	7-72	POWERHEAD	6-2
KNOCK SENSOR	3-107	BALANCER CHAIN & ASSEMBLY	6-80
SERVICING	3-107	CAMSHAFT, BEARINGS & LIFTERS	6-72
LOWER UNIT OIL	2-22	CRANKSHAFT, PISTON(S) & BEARINGS	6-81
CHECKING LEVEL & CONDITION	2-23	CYLINDER HEAD	6-47
DRAINING & FILLING	2-24	FLYWHEEL	6-78
RECOMMENDATIONS	2-23	INTAKE MANIFOLD	6-44
LUBRICATION POINTS	2-32	POWERHEAD	6-2
BOAT	2-34	ROCKER ARMS/SHAFTS	6-31
MOTOR	2-32	TIMING BELT OR CHAIN	6-58
<b>LUBRICATION SYSTEM</b>	<b>5-2</b>	VALVE (ROCKER) COVER	6-31
DESCRIPTION & OPERATION	5-2	<b>POWERHEAD BREAK-IN</b>	<b>6-126</b>
OIL PRESSURE SWITCH & WARNING SYSTEM	5-11	BREAKING IN A POWERHEAD	6-126
OIL PRESSURE TEST	5-2	PROFESSIONAL HELP	1-3
OIL PUMP	5-3	PROPELLER	2-35
MAINTENANCE COVERAGE	2-2	GENERAL INFORMATION	2-35
MAINTENANCE EQUALS SAFETY	2-2	INSPECTION	2-37
MAINTENANCE OR REPAIR?	1-2	REMOVAL & INSTALLATION	2-38
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR	3-105	PULSER COIL	4-16
SERVICING	3-105	DESCRIPTION & OPERATION	4-16
<b>MANUAL TILT</b>	<b>8-3</b>	REMOVAL & INSTALLATION	4-18
DESCRIPTION & OPERATION	8-3	TESTING	4-16
SERVICING	8-2	PURCHASING PARTS	1-3
MANUALLY TILTING THE ENGINE	8-6	RECTIFIER	4-49
MEASURING TOOLS	1-25	REMOVAL & INSTALLATION	4-50
DEPTH GAUGES	1-26	TESTING	4-5-
DIAL INDICATORS	1-25	REGULATIONS FOR YOUR BOAT	1-4
MICROMETERS & CALIPERS	1-25	CAPACITY INFORMATION	1-4
TELESCOPING GAUGES	1-26	CERTIFICATE OF COMPLIANCE	1-4
O <sub>2</sub> SENSOR OR AIR/FUEL RATIO SENSOR	3-104	DOCUMENTING OF VESSELS	1-4
SERVICING	3-104	HULL IDENTIFICATION NUMBER	1-4
OAR/PADDLE	1-10	LENGTH OF BOATS	1-4
OIL PRESSURE SWITCH		NUMBERING OF VESSELS	1-4
SERVICE	4-77, 3-109	REGISTRATION OF BOATS	1-4
OIL PRESSURE SWITCH & WARNING SYSTEM	5-11	SALES & TRANSFERS	1-4
OIL PRESSURE TEST	5-2	VENTILATION	1-4
OIL PUMP	5-3	REGULATOR/RECTIFIER	4-50
REMOVAL, OVERHAUL & INSTALLATION	5-3	DESCRIPTION	4-50
OTHER COMMON TOOLS	1-22	REMOVAL & INSTALLATION	4-53
OUTBOARDS ON SAIL BOATS	2-2	TESTING	4-50
OVERHEAT THERMO-SWITCH/THERMO-SENSOR	4-75	<b>REMOTE CONTROL BOX</b>	<b>9-2</b>
SERVICE	4-75	DESCRIPTION & OPERATION	9-2
PERSONAL FLOTATION DEVICES	1-7	REMOTE CONTROL BOX ASSEMBLY	9-3
CARE OF LIFE JACKETS	1-8	REMOTE CONTROL CABLES	9-7
GENERAL CONSIDERATIONS	1-8	TROUBLESHOOTING	9-3
LEGAL REQUIREMENTS	1-8	REMOTE CONTROL BOX ASSEMBLY	9-3
<b>POWER TRIM &amp; TILT</b>	<b>8-5</b>	EXPLODED VIEWS	9-3
DESCRIPTION & OPERATION	8-5	REMOVAL & INSTALLATION	9-3
MANUALLY TILTING THE ENGINE	8-6	REMOTE CONTROL CABLES	9-7
TRIM ANGLE SENSOR	8-21	RIGGING/REPLACEMENT	9-7
TRIM/TILT ASSEMBLY	8-7	REQUIRED SAFETY EQUIPMENT	1-5
TRIM/TILT MOTOR	8-18	FIRE EXTINGUISHERS	1-5
TRIM/TILT SWITCH	8-20	PERSONAL FLOTATION DEVICES	1-7
TROUBLESHOOTING	8-6	SOUND PRODUCING DEVICES	1-8
POWER TRIM ANGLE SENSOR	8-21	TYPES OF FIRES	1-5
REMOVAL & INSTALLATION	8-22	VISUAL DISTRESS SIGNALS	1-8
TESTING	8-21	WARNING SYSTEM	1-6
POWER TRIM/TILT ASSEMBLY	8-7	RE-COMMISSIONING	2-115
ASSEMBLY	8-17	REMOVAL FROM STORAGE	2-115
BLEEDING THE SYSTEM	8-8	ROCKER ARMS/SHAFTS	6-31
CHECKING FLUID LEVEL	8-7		

REMOVAL & INSTALLATION . . . . .	6-31	TEST EQUIPMENT . . . . .	4-5
ROCKER COVER . . . . .	6-31	JUMPER WIRES . . . . .	4-5
REMOVAL & INSTALLATION . . . . .	6-31	MULTI-METERS . . . . .	4-6
<b>SAFETY IN SERVICE . . . . .</b>	<b>1-12</b>	TEST LIGHTS . . . . .	4-5
DO'S . . . . .	1-12	THERMOSTAT . . . . .	5-23
DON'TS . . . . .	1-12	REMOVAL & INSTALLATION . . . . .	5-24
SAFETY TOOLS . . . . .	1-16	THROTTLE BODY . . . . .	3-73
EYE & EAR PROTECTION . . . . .	1-16	REMOVAL & INSTALLATION . . . . .	3-73
WORK CLOTHES . . . . .	1-17	THROTTLE POSITION SENSOR (TPS) . . . . .	3-106
WORK GLOVES . . . . .	1-16	SERVICING . . . . .	3-106
SERIAL NUMBER IDENTIFICATION . . . . .	2-3	TILLER HANDLE . . . . .	9-8
<b>SHOP EQUIPMENT . . . . .</b>	<b>1-16</b>	REMOVAL & INSTALLATION . . . . .	9-8
CHEMICALS . . . . .	1-17	<b>TILLER HANDLE . . . . .</b>	<b>9-7</b>
SAFETY TOOLS . . . . .	1-16	DESCRIPTION & OPERATION . . . . .	9-7
SPARK PLUG WIRES . . . . .	2-65	TILLER HANDLE . . . . .	9-8
TESTING . . . . .	2-65	TROUBLESHOOTING . . . . .	9-7
SPARK PLUGS . . . . .	2-60	TIMING BELT . . . . .	2-43
HEAT RANGE . . . . .	2-61	ADJUSTMENT . . . . .	2-44
INSPECTION & GAPPING . . . . .	2-64	INSPECTION . . . . .	2-44
READING . . . . .	2-63	TIMING BELT OR CHAIN . . . . .	6-58
REMOVAL & INSTALLATION . . . . .	2-61	REMOVAL & INSTALLATION . . . . .	6-58
SPECIAL TOOLS . . . . .	1-23	TIMING SENSORS (CMP/CKP/PULSER COIL) . . . . .	3-100
<b>SPECIFICATIONS . . . . .</b>	<b>2-117</b>	SERVICING . . . . .	3-100
BOLT TORQUE - TYPICAL METRIC BOLT TORQUE VALUES . . . . .	1-28	<b>TIMING &amp; SYNCHRONIZATION . . . . .</b>	<b>2-82</b>
BOLT TORQUE - TYPICAL U.S. STANDARD BOLT TORQUE VALUES 1-28	1-28	CARBURETOR PILOT SCREW ADJUSTMENTS . . . . .	2-83
CAPACITIES . . . . .	2-119	BF2D MOTORS . . . . .	2-83
CARBURETOR . . . . .	3-46	BF5A MOTORS . . . . .	2-84
CONVERSION FACTORS . . . . .	1-27	BF8A MOTORS . . . . .	2-85
COOLING SYSTEM . . . . .	5-28	BF15A MOTORS . . . . .	2-86
EFI . . . . .	3-110	BF8D/BF9.9D & BF15D/BF20D . . . . .	2-88
ENGINE - 2D . . . . .	6-127	25-50 HP3-CYL MOTORS . . . . .	2-90
ENGINE - 5A . . . . .	6-128	BF75D/BF90D MOTORS . . . . .	2-96
ENGINE - 8A . . . . .	6-129	BF75A/BF90A MOTORS . . . . .	2-99
ENGINE - 8D/9.9D . . . . .	6-130	BF115A/BF130A MOTORS . . . . .	2-103
ENGINE - 15A . . . . .	6-132	BF135A/BF150A MOTORS . . . . .	2-105
ENGINE - 15D/BF20D . . . . .	6-133	BF200A/BF225A MOTORS . . . . .	2-108
ENGINE - 25A/BF30A . . . . .	6-134	<b>TOOLS . . . . .</b>	<b>1-18</b>
ENGINE - 25D/BF30D . . . . .	6-136	ELECTRONIC TOOLS . . . . .	1-23
ENGINE - 40A/BF50A . . . . .	6-137	HAND TOOLS . . . . .	1-19
ENGINE - 75D/BF90D . . . . .	6-139	MEASURING TOOLS . . . . .	1-25
ENGINE - 75A/BF90A . . . . .	6-140	OTHER COMMON TOOLS . . . . .	1-22
ENGINE - 115A/BF130A . . . . .	6-142	SPECIAL TOOLS . . . . .	1-23
ENGINE - 135A/BF150A . . . . .	6-144	TOOLS & SPARE PARTS . . . . .	1-12
ENGINE - 200A/BF225A . . . . .	6-145	TORQUE . . . . .	1-27
GENERAL ENGINE . . . . .	2-117	TRIGGER COIL . . . . .	4-16
IGNITION TESTING . . . . .	4-13	DESCRIPTION & OPERATION . . . . .	4-16
MAINTENANCE INTERVALS . . . . .	2-118	REMOVAL & INSTALLATION . . . . .	4-18
TUNE-UP . . . . .	2-120	TESTING . . . . .	4-16
STANDARD & METRIC MEASUREMENTS . . . . .	1-27	<b>TRIM/TILT SYSTEMS . . . . .</b>	<b>8-2</b>
STARTER MOTOR . . . . .	4-60	INTRODUCTION . . . . .	8-2
CLEANING & INSPECTION . . . . .	4-70	<b>TROUBLESHOOTING . . . . .</b>	<b>1-13</b>
DESCRIPTION & OPERATION . . . . .	4-60	BASIC OPERATING PRINCIPLES . . . . .	1-13
DISASSEMBLY & ASSEMBLY . . . . .	4-66	CHARGING CIRCUIT . . . . .	4-40
REMOVAL & INSTALLATION . . . . .	4-62	CARBURETOR . . . . .	3-14
TESTING . . . . .	4-60	COOLING SYSTEM EFFICIENCY . . . . .	5-14
STARTER MOTOR SOLENOID SWITCH/RELAY . . . . .	4-71	EFI . . . . .	3-49
REMOVAL & INSTALLATION . . . . .	4-72	ELECTRICAL SYSTEMS . . . . .	4-6
TESTING . . . . .	4-72	GEARCASE . . . . .	7-4
<b>STARTING CIRCUIT . . . . .</b>	<b>4-55</b>	HAND REWIND STARTERS . . . . .	10-2
DESCRIPTION & OPERATION . . . . .	4-55	IGNITION SYSTEM . . . . .	4-11
STARTER MOTOR . . . . .	4-60	POWER TRIM/TILT . . . . .	8-6
STARTER MOTOR SOLENOID SWITCH/RELAY . . . . .	4-71	REMOTE CONTROL . . . . .	9-3
TROUBLESHOOTING . . . . .	4-56	STARTING CIRCUIT . . . . .	4-56
<b>STORAGE . . . . .</b>	<b>2-113</b>	THERMOSTAT . . . . .	5-14
RE-COMMISSIONING . . . . .	2-115	TILLER HANDLE . . . . .	9-7
WINTERIZATION . . . . .	2-113	<b>TUNE-UP . . . . .</b>	<b>2-57</b>
SWIVEL CASE LINER, BUSHING & WATER SEAL . . . . .	2-49	COMPRESSION TESTS . . . . .	2-58
REMOVAL & INSTALLATION . . . . .	2-49	INTRODUCTION . . . . .	2-57
WATER SEAL . . . . .	2-51	SPARK PLUG WIRES . . . . .	2-65
TEMPERATURE SENSORS . . . . .	3-103	SPARK PLUGS . . . . .	2-60
SERVICING . . . . .	3-103	TUNE-UP SEQUENCE . . . . .	2-58
		TUNE-UP SEQUENCE . . . . .	2-58

# 10-20 MASTER INDEX

---

<b>UNDERSTANDING &amp; TROUBLESHOOTING ELECTRICAL SYSTEMS . . .</b>	<b>4-2</b>	DESCRIPTION & OPERATION . . . . .	4-74
BASIC ELECTRICAL THEORY . . . . .	4-2	OIL PRESSURE SWITCH . . . . .	4-77
ELECTRICAL COMPONENTS . . . . .	4-2	OVERHEAT THERMO-SWITCH/THERMO-SENSOR . . . . .	4-75
ELECTRICAL TESTING . . . . .	4-7	WARNING BUZZER . . . . .	4-78
PRECAUTIONS . . . . .	4-8	WARNING CIRCUITS . . . . .	4-74
TEST EQUIPMENT . . . . .	4-5	WARNING SYSTEM ALERTS . . . . .	4-75
TROUBLESHOOTING ELECTRICAL SYSTEMS . . . . .	4-6	WARNING SYSTEM ALERTS . . . . .	4-75
WIRE & CONNECTOR REPAIR . . . . .	4-8	WATER LEVEL SWITCH . . . . .	3-109
VALVE CLEARANCE . . . . .	2-65	SERVICING . . . . .	3-109
VALVE LASH ADJUSTMENT . . . . .	2-66	WATER PRESSURE RELIEF VALVE . . . . .	5-26
VALVE COVER . . . . .	6-31	WATER PUMP . . . . .	5-15
REMOVAL & INSTALLATION . . . . .	6-31	CLEANING & INSPECTION . . . . .	5-22
VALVE LASH ADJUSTMENT . . . . .	2-66	REMOVAL & INSTALLATION . . . . .	5-15
VAPOR SEPARATOR TANK (VST) . . . . .	3-83	WINTERIZATION . . . . .	2-113
CLEANING & INSPECTION . . . . .	3-96	GREAT ETHANOL DEBATE . . . . .	2-113
DESCRIPTION & OPERATION . . . . .	3-83	PREPPING FOR STORAGE . . . . .	2-113
DISCHARGE TEST . . . . .	3-84	STORAGE CHECKLIST . . . . .	2-114
ELECTRICAL TEST . . . . .	3-83	WHERE TO STORE . . . . .	2-113
PRESSURE/REGULATOR TEST . . . . .	3-84	WIRE & CONNECTOR REPAIR . . . . .	4-8
REMOVAL & INSTALLATION . . . . .	3-85	<b>WIRING DIAGRAMS . . . . .</b>	<b>4-92</b>
VHF-FM RADIO . . . . .	1-10	INDEX . . . . .	4-92
VTEC OIL CONTROL VALVE . . . . .	3-108	ZINCS . . . . .	2-42
SERVICING . . . . .	3-108	GENERAL INFORMATION . . . . .	2-42
WARNING BUZZER . . . . .	4-78	INSPECTION . . . . .	2-42
TESTING . . . . .	4-78	LOCATION . . . . .	2-42
WARNING CIRCUITS . . . . .	4-74	SERVICING . . . . .	2-43
<b>WARNING SYSTEM . . . . .</b>	<b>4-74</b>		