

HEADER




GPS Signal Strength
Flashing indicates no GPS fix.

Time and Date
12:13 PM
OCT 18
This data is provided by the GPS.

Humminbird Connection
Highlights when the i-Pilot controller is in communications with the Humminbird.
When there are no communications, the arrows turn gray.

State-of-Charge indicators for the remote battery and trolling motor.

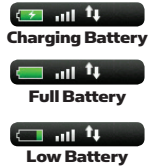

DASHBOARD



GPS Speed



Motor Speed




Cruise Control Target Speed



Navigation Mode

Spot-Lock Paused

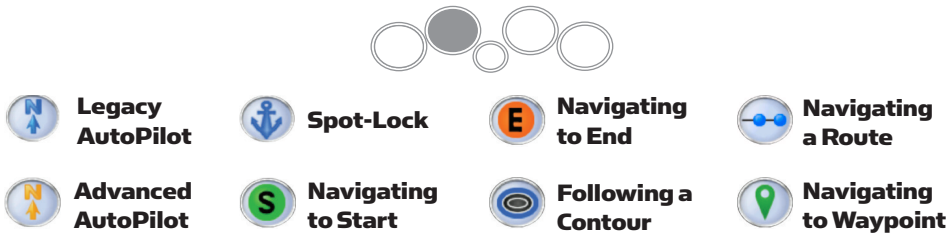

Legacy AutoPilot

Spot-Lock

Navigating to End

Navigating a Route

Advanced AutoPilot

Navigating to Start

Following a Contour

Navigating to Waypoint



Recording an iTrack

When the red dot is shown, it indicates that Link is currently recording an iTrack.



Cruise Control

When the icon is shown, the Cruise Control feature is enabled.



Prop Status

The states of the prop icon are:

- Prop icon is not on = prop is disabled.
- On steady but not rotating = prop is enabled but the prop speed is zero.
- Rotating = prop is enabled and speed is greater than zero.
- Blinking = prop is disabled but Link is in a mode of navigation and the user is being reminded to enable the prop.




High Speed Bypass

- When the rabbit icon appears above the left softkey, High Speed Bypass is ready to be used.
- When High Speed Bypass is active, the rabbit icon will appear in the dashboard and the revert icon will appear above the left softkey.



QUICK REFERENCE GUIDE

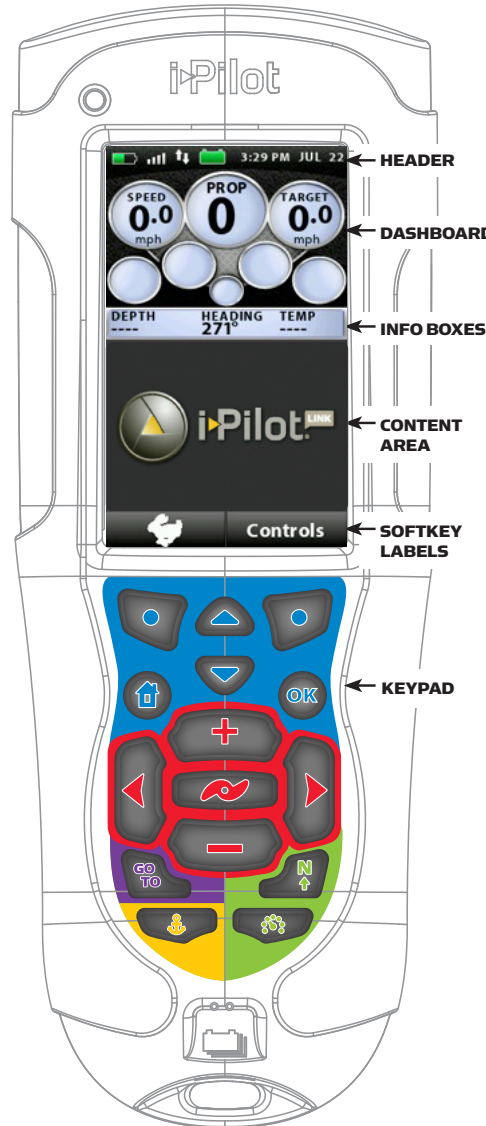

KEYPAD

MENU CONTROL KEYS

Left Softkey & Right Softkey
These keys change function based on mode of operation and which screen is presently displayed. The Softkey Labels at the bottom of the LCD indicate their current function.

Menu Up & Menu Down
Used to navigate the menus.

Home
Pressing this key will always bring up the Home Screen.

OK
Press to accept menu selections.

Remote power:

- Press and release to turn the remote on.
- Press and hold for 3 seconds to turn the remote off.

MANUAL CONTROL KEYS



NAVIGATION KEYS

GOTO
Opens the list of iTracks, Spot-Locks and Waypoints that are within navigable range. Also used to switch from the Home Screen to the Active Screen during i-Pilot navigation.

Spot-Lock
Press to enable Spot-Lock.

Press and hold to mark a Waypoint on the Humminbird (Spot-Lock will not engage).

Auto Pilot
Press to enable AutoPilot or Advanced AutoPilot. The default mode is selected through the Controls Menu on the remote.

Cruise Control
Press to bring up the Cruise Control Access screen. Target speed is adjusted using the + and - keys and accepted using the OK key.



OPERATING MODES

CRUISE CONTROL

ENGAGING CRUISE CONTROL

1. Press the **Cruise Control** key on the remote.
2. Press the Speed Up or Speed Down keys to adjust the target speed shown in the Target Gauge.
3. Press OK to accept the target speed and engage **Cruise Control**.

DISENGAGING CRUISE CONTROL

1. Press the **Cruise Control** key on the remote.
2. Press the softkey marked Cancel.

AUTOPILOT

ENGAGING AUTOPILOT

From the remote:

1. Press the **AutoPilot** key on the remote.

From the Humminbird:

1. Navigation X-Press Menu: Press the MENU key.
2. Select **AutoPilot** and press the RIGHT Cursor key.

ADJUSTING AUTOPILOT

From the remote:

1. Use the steering keys.

From the Humminbird:

1. Navigation X-Press Menu: Press the MENU key.
2. Select **AutoPilot** Adjust and press the RIGHT Cursor key.
3. Adjust: Press the RIGHT or LEFT Cursor keys.
4. Confirm: Press the CHECK/INFO key.

WAYPOINTS

MARK A WAYPOINT USING THE REMOTE

1. To save a Waypoint at the boat's position, press and hold the Spot-Lock key.

MARK A WAYPOINT USING THE HUMMINBIRD

1. To save a **Waypoint** at the boat's position, press the MARK key.
2. To save a **Waypoint** at the cursor position, use the 4-WAY Cursor Control key to move the active cursor to a position on the Chart View. Then, press the MARK key.

NAVIGATE TO A SAVED WAYPOINT USING THE REMOTE

1. Press the **GOTO** key followed by the Waypoints softkey.
2. Select a **Waypoint** from the list and press the OK key.

NAVIGATE TO A SAVED WAYPOINT USING THE HUMMINBIRD

1. From the Chart View, press the **GOTO** key.
2. Select a **Waypoint** from the list, and press the RIGHT Cursor key.

OR

1. Use the 4-WAY Cursor Control key to select a Waypoint or position on the chart.

2. Press the **GOTO** key.

DISENGAGE NAVIGATING TO A WAYPOINT FROM THE REMOTE

1. Switch to the **GOTO** Active Screen by pressing the **GOTO** key.
2. Press the Cancel Softkey.

OR

1. Press the Steer Left or Steer Right key.

DISENGAGE NAVIGATING TO A WAYPOINT FROM THE HUMMINBIRD

1. Navigation X-Press Menu: Press the MENU key.
2. Select Cancel i-Pilot Navigation, and press the RIGHT Cursor key.

SPOT-LOCK

MARK/ENGAGE SPOT-LOCK USING THE REMOTE

Mark a Spot-Lock and engage using the remote

1. Press the **Spot-Lock** key.
2. Save (optional): Press the Save Softkey.

MARK/ENGAGE SPOT-LOCK USING THE HUMMINBIRD

Mark a Spot-Lock at the cursor position

1. Use the 4-WAY Cursor Control key to move the cursor to a position on the chart.
2. Navigation X-Press Menu: Press the MENU key.
3. Select Mark **Spot-Lock**, and press the RIGHT Cursor key.
4. Press the EXIT key until the Navigation X-Press Menu is closed.

Engage Spot-Lock at the boat position

1. Navigation X-Press Menu: Press the MENU key.
2. Select **Spot-Lock** at Vessel, and press the RIGHT Cursor key. **Spot-Lock** will start immediately.
3. Save (optional): Press the MENU key. Select Save **Spot-Lock**, and press the RIGHT Cursor key.

Mark a Spot-Lock and start navigation

1. Use the 4-WAY Cursor Control key to move the cursor to a position on the chart.
2. Navigation X-Press Menu: Press the MENU key.
3. Select **Spot-Lock** at Cursor, and press the RIGHT Cursor key. Navigation will start automatically.

ENGAGE SPOT-LOCK AT A WAYPOINT POSITION

1. Use the 4-WAY Cursor Control key to move the cursor to a **Waypoint** on the chart.
2. Navigation X-Press Menu: Press the MENU key.
3. Select the **Waypoint** name > **Spot-Lock**.

NAVIGATE TO A SAVED SPOT-LOCK USING THE REMOTE

1. Press the **GOTO** key.
2. Select a **Spot-Lock** from the list and press the OK key.

NAVIGATE TO A SAVED SPOT-LOCK FROM THE HUMMINBIRD

1. Use the 4-WAY Cursor Control key to select a **Spot-Lock** icon on the chart.

2. Press the **GOTO** key.

OR

1. Press the **GOTO** key.
2. Select a **Spot-Lock** from the saved points list.
3. Press the RIGHT Cursor key.

DISENGAGE SPOT-LOCK FROM THE REMOTE

1. Switch to the **Spot-Lock** Active Screen by pressing the **Spot-Lock** key.
2. Press the Cancel Softkey.

OR

1. Press any manual control key (steering, prop speed, prop on/off).

DISENGAGE SPOT-LOCK FROM THE HUMMINBIRD

1. Navigation X-Press Menu: Press the MENU key.
2. Select Cancel i-Pilot Navigation, and press the RIGHT Cursor key.

ITRACKS

START RECORDING AN ITRACK

From the remote:

1. Home Screen > Controls > Record > OK.

From the Humminbird:

1. Main Menu: Press the MENU key twice.
2. Select the Accessories tab.
3. Select Record **iTrack**, and press the RIGHT Cursor key.
4. Press the EXIT key until the menu system is closed.

STOP RECORDING AN ITRACK

From the remote:

1. Record Active Screen > StopRec softkey > Save or Discard.

From the Humminbird:

1. Navigation X-Press Menu: Press the MENU key.
2. Select Stop Recording **iTrack**, and press the RIGHT Cursor key. Save Yes or No.

NAVIGATE AN ITRACK FROM THE REMOTE

1. Press the **GOTO** key followed by the **iTracks** softkey.
2. Select an **iTrack** from the list and press either the To Start or To End softkey.

NAVIGATE AN ITRACK FROM THE HUMMINBIRD

1. Use the 4-WAY Cursor Control key to select a Start Track icon, End Track icon, or a position on the **iTrack**.
2. Press the **GOTO** key.
3. Use the 4-WAY Cursor Control key to select one of the submenu actions: Navigate to Start; Navigate to End. OR
1. Press the **GOTO** key.
2. Select an **iTrack Start** or **iTrack End** from the **GOTO** list.

BACKTRACK

1. Humminbird Navigation X-Press Menu: Press the Menu key.

2. Select **BackTrack**.

3. Note that **BackTrack** will create and save an **iTrack** using up to the last 2 miles of the Current Track. It will also automatically engage navigation towards the End point of the **iTrack**.

ROUTES

CREATE A ROUTE ON THE HUMMINBIRD

1. In a Chart View, use the 4-WAY Cursor Control key to select a **Waypoint**, **Spot-Lock** or position on the chart view.
2. Press the **GOTO** key.
3. To add more points to the route, repeat steps 1 and 2.
4. Save (optional): Press the MENU key. Select Save Current Route and press the RIGHT Cursor key.

NAVIGATE A ROUTE FROM THE HUMMINBIRD

1. Main Menu: Press the MENU key twice.
2. Select the Nav tab.
3. Select **Waypoints**, **Routes**, **Tracks** and press the RIGHT Cursor key.
4. Use the 4-WAY Cursor Control key to select the route to be navigated and press the RIGHT Cursor key.
5. From the menu, use the 4-WAY Cursor Control key to select Travel, then select Forward or Reverse.

FOLLOW THE CONTOUR

ENGAGE FROM THE HUMMINBIRD:

1. Use the 4-WAY Cursor Control key to move the cursor to a LakeMaster contour line.
2. Press the **GOTO** key.
3. Using the 4-WAY Cursor Control key, perform the following selections:
 - Select Contour Offset to set the offset if desired.
 - Select a navigation direction.

SET THE CONTOUR OFFSET DURING NAVIGATION

1. Navigation X-Press Menu: Press the MENU key.
2. Select Contour Offset.
3. Press the RIGHT or LEFT Cursor keys to set the Offset.

HIGH SPEED BYPASS

ENGAGE HIGH SPEED BYPASS

1. Press the High Speed Bypass softkey on the home screen to set the motor speed to maximum. The rabbit icon will change to the revert icon.

DISENGAGE HIGH SPEED BYPASS

1. Press the Revert softkey to disengage High Speed Bypass and send you back to your previous speed.

OR

1. Press the Speed Down key to disengage the High Speed Bypass and lower your speed from the maximum speed.

HEADER

3:28 PM JUL 22

Indicateurs d'état de charge de la batterie de la télécommande et du propulseur électrique.



Batterie en Charge



Batterie à pleine Charge



Niveau de batterie Faible



Force du signal GPS

Un clignotement indique l'absence de position GPS

12:13 PM
OCT 18

Heure et Date

Ces données sont fournies par le GPS.



Connexion avec Humminbird

S'allume quand le contrôleur i-Pilot est en communication avec l'Humminbird

Quand il n'y a pas de communications, ces flèches passent en grisé.

TABLEAU DE BORD



Vitesse GPS



Vitesse Moteur



Vitesse Visée au Contrôle



Mode de Navigation



Verrouillage d'emplacement Suspendu



Autopilotage Traditionnel



Verrouillage d'emplacement



Navigation vers Arrivée



Navigation sur itinéraire



Autopilotage Avancé



Navigation vers Départ



Suivi d'un contour



Navigation vers point de jalonnement



Enregistrement d'un iTrack

Quand le point rouge est visible, il indique que le Link est en train d'enregistrer un iTrack.



Régulation de Vitesse

Quand l'icône est visible, la régulation de vitesse est activée.



Statut de Propulsion

Les états de propulsion, via l'icône Prop, sont:

- Éteinte = propulsion désactivée.
- Allumée, sans rotation = propulsion activée mais à vitesse nulle.
- Allumée, avec rotation = propulsion activée à vitesse non nulle.
- Clignotante = propulsion désactivée mais Link en mode de navigation, il est rappelé à l'utilisateur qu'il doit l'activer.




Dépassement à haute vitesse

- Appuyez sur Dépassement à Haute Vitesse pour atteindre la vitesse de pointe.
- Lorsque à la vitesse de pointe, appuyez sur Dépassement à Haute Vitesse pour revenir à la vitesse précédente.



QUICK REFERENCE GUIDE

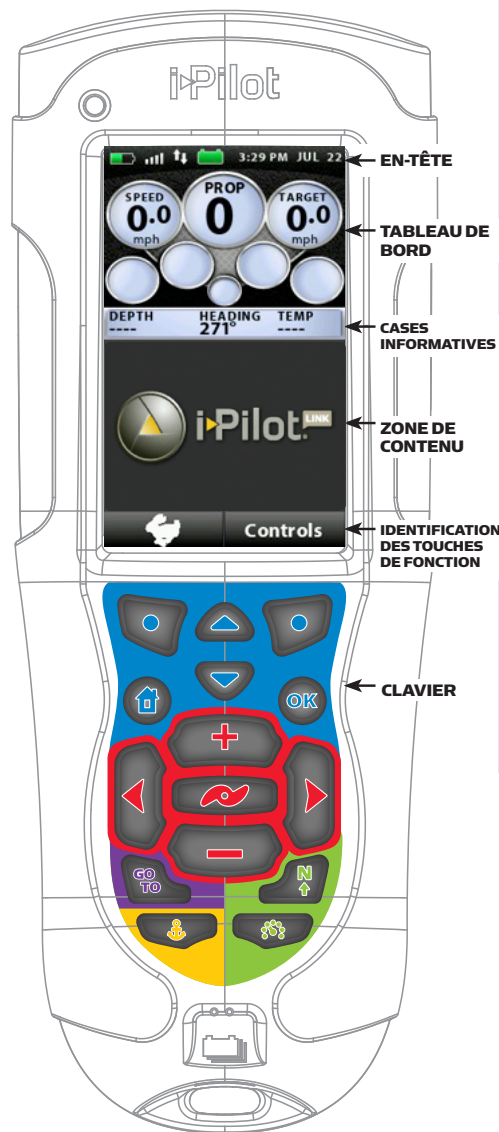

CLAVIER

TOUCHES DE COMMANDE DE MENUS



Touches de fonction de gauche et droite

Ces touches changent de fonctionnalité selon le mode de fonctionnement et quel écran est actuellement affiché. Les mentions d'identification des touches de fonction en bas de l'afficheur LCD signalent leur fonctionnalité en cours.



Flèches de montée et descente pour menu

Utilisés pour naviguer dans les menus.



Accueil

L'appui sur cette touche ramène toujours à l'écran d'accueil.



OK

L'appui sur cette touche envoie l'acceptation des sélections de menu.

Activation/désactivation de la télécommande:

- Appuyez puis relâchez pour mettre à la télécommande en marche.
- Appuyez et maintenez 3 secondes pour arrêter la télécommande.

TOUCHES DE COMMANDE MANUELLE



Accélération



Virage à gauche



Ralentissement



Virage à droite



M/A de propulsion

TOUCHES DE NAVIGATION



GOTO

Ouvre la liste des iTracks (itinéraires), Spot-Locks (verrouillages sur emplacement) et Waypoints (points de jalonnement) qui sont à portée de navigation.

S'utilise aussi pour commuter entre l'écran d'accueil et l'écran actif durant la navigation d'i-Pilot.



Verrouillage sur Emplacement

Appuyez pour valider Spot-Lock.

Appuyez et maintenez marquer un point d'itinéraire sur l'Humminbird (Spot-Lock ne s'activera pas).



Pilotage Automatique

Actionnez pour activer la fonction AutoPilot ou Advanced AutoPilot.

Le mode par défaut est sélectionné par le menu de commandes sur la télécommande.



Contrôle de Vitesse

Actionnez pour amener l'écran d'accès au contrôle de vitesse. La vitesse visée est déterminée en utilisant les touches + et - avec acceptation finale en utilisant la touche OK.

