


# RAM DOUBLE SUCTION CUP BASE ASSEMBLY INSTRUCTIONS



**PARTS INDEX:**

- A. DOUBLE SUCTION ADAPTER PLATE (QTY. 1)\*
- B. RAM™ TWIST-LOCK SUCTION CUP (QTY. 2)
- C. #10 X 3/4" SHEET METAL SCREW (QTY. 4)
- D. #8-32 X 1/2" MACHINE SCREW (QTY. 4)\*
- E. #8-32 THIN NYLOCK NUT (QTY. 4)\*

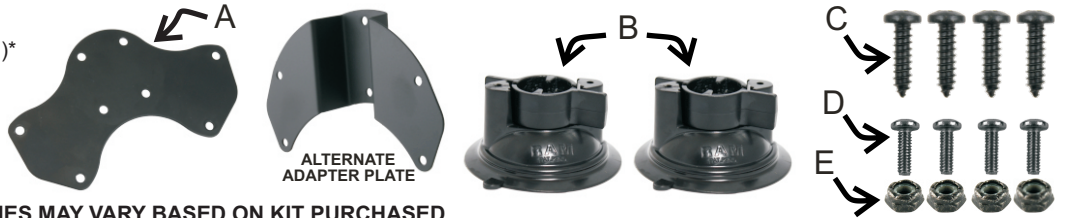

ASSEMBLE (A) ADAPTER PLATE WITH BOTH (B) SUCTION CUPS USING (C) SCREWS AS SHOWN BELOW. **DO NOT OVER-TIGHTEN SCREWS.**

ATTACH RAM BALL BASE TO (A) ADAPTER PLATE USING (D) SCREWS AND (E) NUTS. **THREAD ALL SCREWS AND NUTS BY HAND FIRST, THEN TIGHTEN USING PHILLIPS HEAD SCREWDRIVER AND ADJUSTABLE WRENCH.**

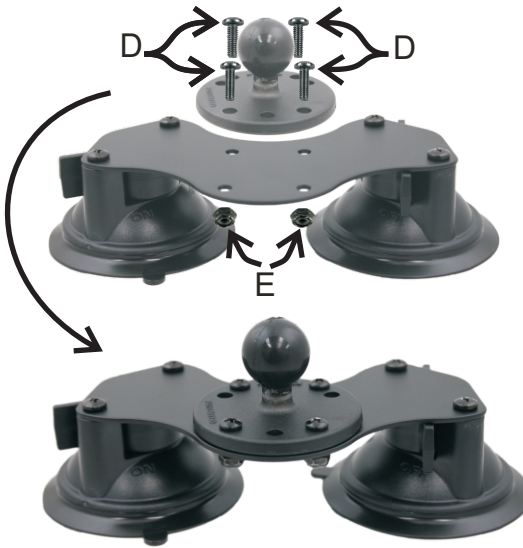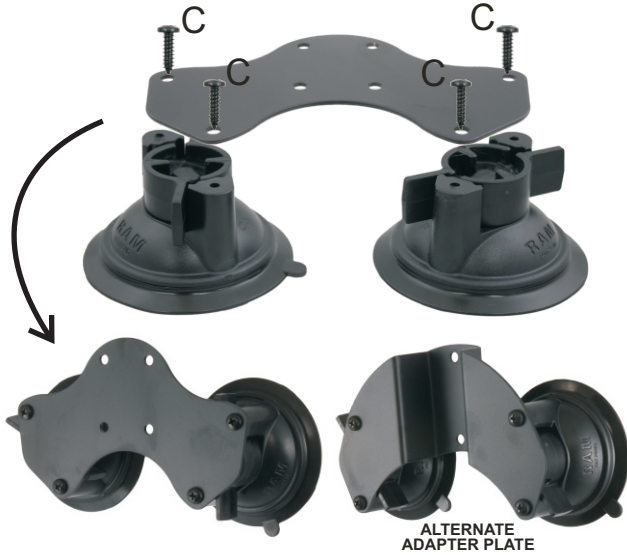

**BALL BASE NOT INCLUDED IN ALL KITS: RAM-B-202U**



FOR PROPER SUCTION, MAKE SURE SURFACE HAS NO CRACKS OR SCRATCHES, AND HAS BEEN THOROUGHLY CLEANED.



RMR-INS-189

National Products, Inc. 8410 Dallas Ave S. Seattle, WA 98108 206-763-8361 www.rammount.com

# RAM DOUBLE SUCTION CUP BASE ASSEMBLY INSTRUCTIONS



**PARTS INDEX:**

- A. DOUBLE SUCTION ADAPTER PLATE (QTY. 1)\*
- B. RAM™ TWIST-LOCK SUCTION CUP (QTY. 2)
- C. #10 X 3/4" SHEET METAL SCREW (QTY. 4)
- D. #8-32 X 1/2" MACHINE SCREW (QTY. 4)\*
- E. #8-32 THIN NYLOCK NUT (QTY. 4)\*



ASSEMBLE (A) ADAPTER PLATE WITH BOTH (B) SUCTION CUPS USING (C) SCREWS AS SHOWN BELOW. **DO NOT OVER-TIGHTEN SCREWS.**

ATTACH RAM BALL BASE TO (A) ADAPTER PLATE USING (D) SCREWS AND (E) NUTS. **THREAD ALL SCREWS AND NUTS BY HAND FIRST, THEN TIGHTEN USING PHILLIPS HEAD SCREWDRIVER AND ADJUSTABLE WRENCH.**

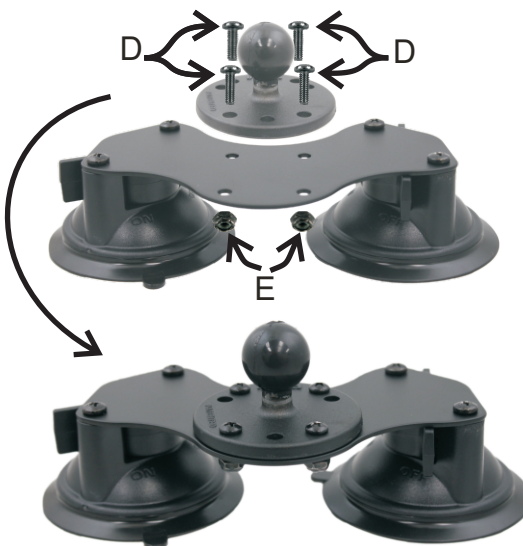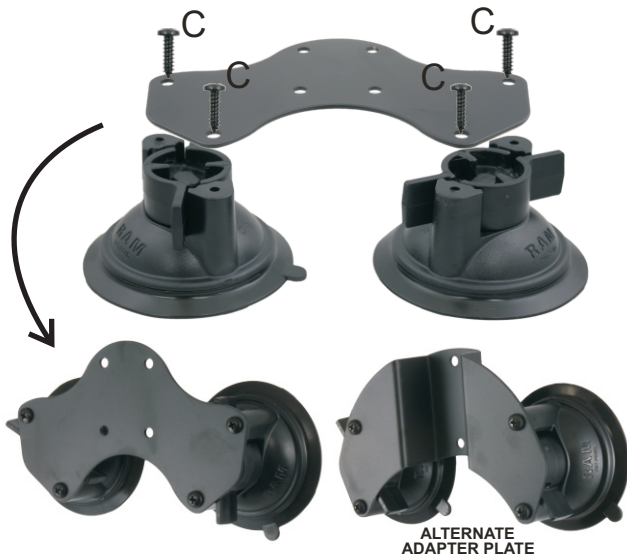

**BALL BASE NOT INCLUDED IN ALL KITS: RAM-B-202U**



FOR PROPER SUCTION, MAKE SURE SURFACE HAS NO CRACKS OR SCRATCHES, AND HAS BEEN THOROUGHLY CLEANED.



RMR-INS-189

National Products, Inc. 8410 Dallas Ave S. Seattle, WA 98108 206-763-8361 www.rammount.com