

## 4. Inventory Parts

Please review all parts included before proceeding. The following figure and table describe all parts included in the assembly. Review parts and ensure all parts are present before starting the installation procedure.

Components shown are per Controller. Dual Actuator systems will have two (2) times the components listed, and Quad Actuator systems will have four (4) times the components listed.

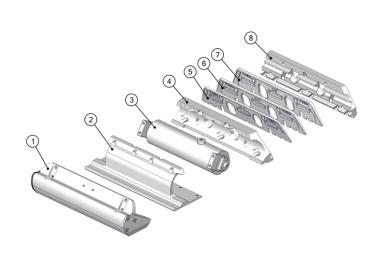



- 1. Blade
- 2. Seal Plate
- 3. Actuator
- 4. Actuator Plate
- 5. 3 Degree Wedge Plate
- 6. 4 Degree Wedge Plate
- 7. 5 Degree Wedge Plate
- 8. Transom Plate

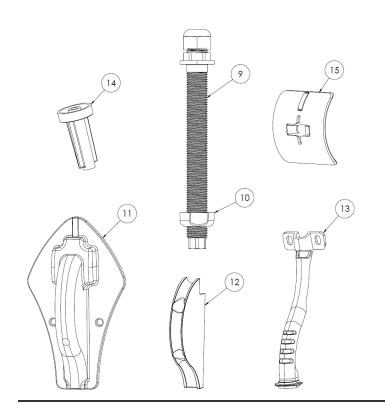

- 9. Cable Gland Tube
- 10. Cable Gland Nut
- 11. Outer Cable Guide
- 12. Inner Cable Guide
- 13. Cable Support Guide
- 14. Drill Guide Tube
- 15. Drill Guide Follower

Hardware counts below are given in the format: x[QUAD ACTUATOR] / [DUAL ACTUATOR]

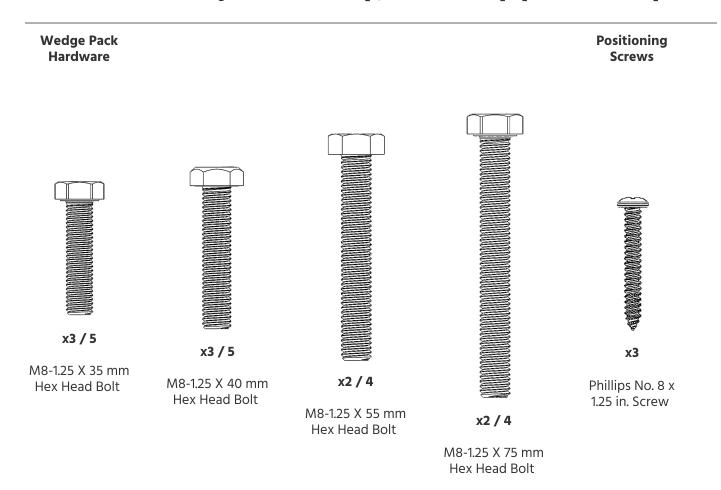

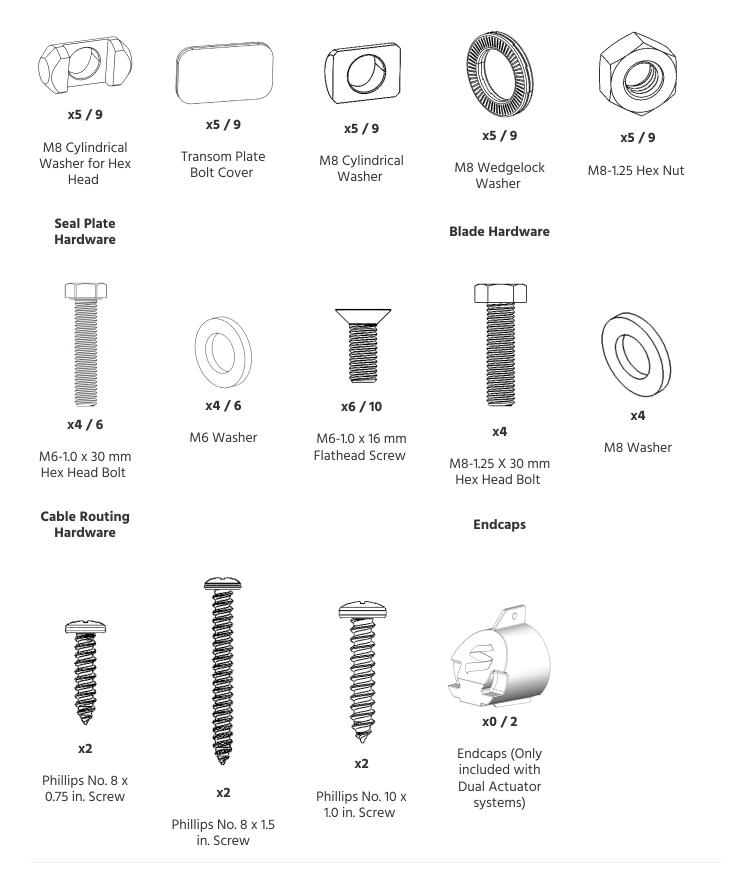

Note: Vibra-tite 122 threadlocker will also be included in the packaging.