


GARMIN®

JL AUDIO® M200 SPEAKERS

Installation Instructions


Installation

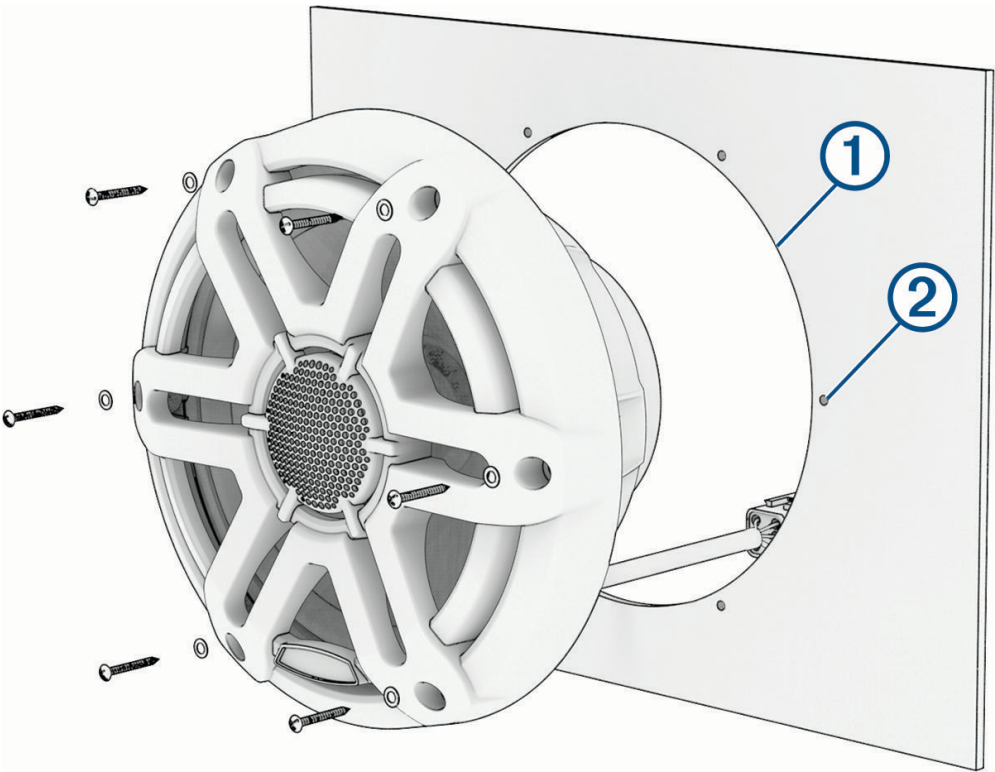

Hole Sizes

	6.5-inch model	7.7-inch model
①	127.5 mm (5.02 in.)	159 mm (6.26 in.)
②	2.78 mm (0.11 in.)	2.78 mm (0.11 in.)

Dimensions

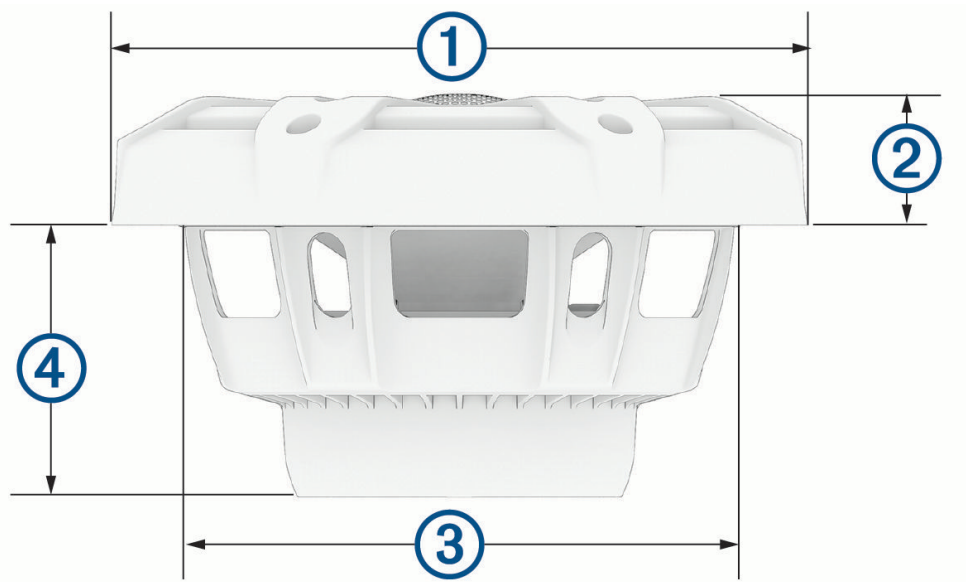

	6.5-inch model	7.7-inch model
①	175.7 mm (6.9 in.)	195.7 mm (7.7 in.)
②	32.8 mm (1.3 in.)	35.4 mm (1.4 in.)
③	126.9 mm (5.0 in.)	158.5 mm (6.2 in.)
④	72 mm (2.8 in.)	78 mm (3.1 in.)

⚠ **WARNING**

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

You must install this device securely according to these instructions. Failure to install this device in accordance with these instructions could result in serious personal injury, damage to the device and/or vessel, or poor product performance.

To avoid possible serious personal injury or damage to the device and the vessel, you must disconnect the power supply to the vessel's audio system before beginning to install the device.

The front of the speaker is protected from water ingress. The rear of the speaker, including all connected components and wires, is not waterproof and must be protected against moisture exposure. Moisture exposure to the rear of the speaker can lead to speaker component failure which can cause a fire resulting in property damage, serious personal injury, or death.

Continuous exposure to sound pressure levels over 100 dBA may cause permanent hearing loss. The volume is typically too loud if you cannot hear people speaking around you. Limit the amount of time you listen at high volume. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked.

The product contains magnets that may interfere with medical devices. Consult your physician and medical device manufacturer with questions.

Installation Caution

⚠ **CAUTION**

To avoid possible personal injury, always wear safety goggles, ear protection, and a dust mask when drilling, cutting, or sanding.

Installation Notices

NOTICE

The product contains magnets that may cause damage to some electronic devices. Use caution using the product near electronic devices.

When drilling or cutting, always check what is on the opposite side of the surface to avoid damaging the vessel.

It is strongly recommended that you have your audio system installed by a professional installer to ensure optimum performance.

Using certain LED colors on the speakers, such as red and green, may violate the laws, regulations, and standards related to the use and/or operation of marine navigation lights. It is the user's responsibility to comply with any such applicable laws, regulations, and standards. Garmin® is not responsible for any fines, penalties, citations, or damages that may be incurred due to any such lack of compliance.


When mounting the speaker in an area exposed to weather or water, you must mount the speaker on a vertical surface. If you mount the speaker on a horizontal surface facing up, water can gather in and around the speaker, causing damage over time.

If you intend to mount the speakers outside the boat, you must mount them in a location well above the waterline, where they are not submerged or damaged by docks, pilings, or other pieces of equipment. When mounted correctly, these speakers are rated for protection from the front of the speaker. Water exposure and damage to the rear of the speaker voids the warranty. This includes situations when the speakers are mounted in an enclosure, especially if they are exposed to wash down. Using an enclosure with a port or vent exposed to the outside environment may allow water to collect and damage the speaker.

You must turn off the audio system before making any connections to the source unit, amplifier, or speakers. Failure to do so could result in permanent damage to the audio system.

You should protect all terminals and connections from grounding and from each other. Failure to do so could result in permanent damage to the audio system and void the product warranty.

Speaker Connections

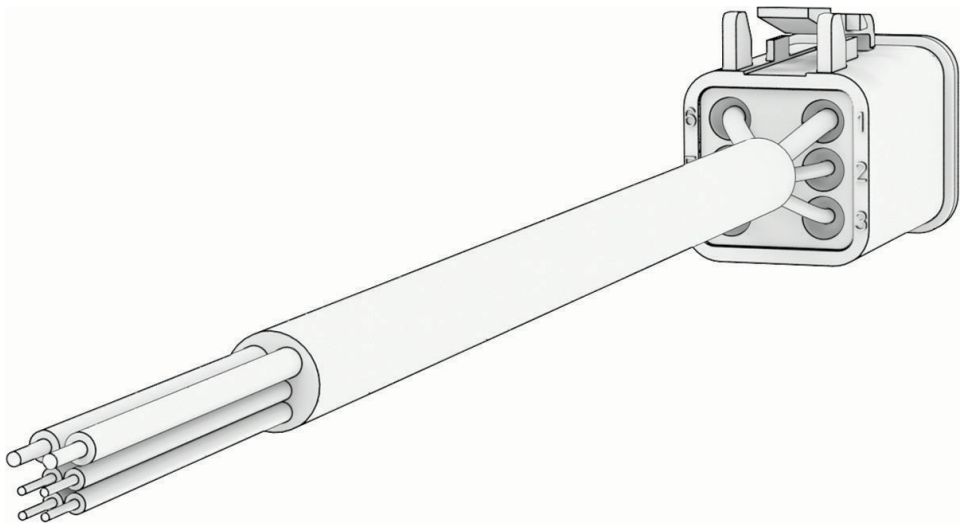

Number	Color	Purpose
①	Black	16 AWG speaker wire
②	Brown	RGB light wire
③	Green	RGB light wire
④	Red	RGB light wire
⑤	Blue	RGB light wire
⑥	Red	16 AWG speaker wire

LED Wiring

NOTICE

Using certain LED colors on the speakers, such as red and green, may violate the laws, regulations, and standards related to the use and/or operation of marine navigation lights. It is the user's responsibility to comply with any such applicable laws, regulations, and standards. Garmin® is not responsible for any fines, penalties, citations, or damages that may be incurred due to any such lack of compliance.

It is recommended to install a Garmin Spectra™ lighting controller module with these speakers to turn the LEDs on and off, change the colors, and create lighting effects. See garmin.com for more information.

You must use the provided wiring harnesses when connecting the LED wires to a Garmin Spectra lighting controller module or power source.

NOTE: LEDs are not available on all models.

LED Fuse Installation

⚠ WARNING

You must install an inline fast-blow fuse on the positive wire at the power-source end of the LED cable for each speaker to protect the LEDs and the speaker from excessive electrical current. Failure to install a fuse could cause a fire resulting in property damage, serious personal injury, or death.

- The fuse must be installed in a fuse holder intended for marine use.
- The fuse must be installed on the positive wire on the power-source end of the LED cable.
- The fuse must be installed for use with any power source, including a lighting controller.
- Always use a fuse of the correct amperage rating and type for your speaker model.

Speaker	Fast-blow Fuse Rating
6.5 in. model	500 mA
7.7 in. model	500 mA

Connecting the LED Wires Directly to Power

If you choose not to install a remote control to turn the LEDs on and off, change the color, and create lighting effects, you can choose a static LED color by connecting specific LED color wires to negative ground (-). You can splice the LED ground wire or a combination of ground wires to customize the LED output color beyond red, green, or blue.

You must connect all 12 Vdc wiring for the LEDs to a fuse at the power-source end of the cable. You should connect the LED brown positive (+) power wire to a 12 Vdc power source through an isolator switch or circuit breaker to turn the LEDs on and off. You can use the same isolator or circuit breaker controlling the power supply to your stereo, which allows you to turn the LEDs and the stereo on and off at the same time. The fuse must be installed between the LED cable and the isolator switch or circuit breaker.

You should use 20 AWG (0.5 through 0.75 mm²) or thicker wire to connect the LEDs to the power source.

- 1 Route the positive power (+) and negative ground (-) wires from the LED connections to the 12 Vdc power source.
- 2 Connect the LED ground wire or the combination of ground wires, according to the preferred LED color, to negative ground (-).

LED Color	LED Wire Color
Red	Red wire
Green	Green wire
Blue	Blue wire
Yellow	Combined red and green wires
Magenta	Combined red and blue wires
Cyan	Combined blue and green wires
White	Combined red, green, and blue wires

- 3 Connect the brown positive (+) wire of the LED cable to the positive (+) 12 Vdc power source through the appropriate fuse ([LED Fuse Installation, page 4](#)) and an isolator switch or circuit breaker.

Specifications

	6.5-inch Model	7.7-inch Model
Speaker type	Coaxial	
Continuous power handling (RMS)	50 W	60 W
Sensitivity (SPL @ 1 W/1 m)	87 dB	88 dB
Frequency Response (+/- 3 dB)	55 Hz to 20 KHz	45 Hz to 20 KHz
Nominal impedance	4 ohms	
Recommended amplifier power	30 to 100 W per channel	40 to 120 W per channel
LED lighting	Yes: RGB (select sport models only)	
LED supply voltage	10 to 14.4 Vdc	
LED load current @ 14.4 Vdc (Max.)	140 mA (select sport models only)	
Cone material	Injection-molded, mica-filled polypropylene	
Tweeter type	Silk dome	
Tweeter size	1 in. (25 mm)	
Compass-safe distance	175 cm (RGB lighted model), 185 cm (Non-RGB model)	205 cm
Water Resistance	IPX6	

© 2026 Garmin Ltd. or its subsidiaries
Garmin®, the Garmin logo, and JL Audio® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. These trademarks may not be used without the express permission of Garmin.
船用揚聲器
船用扬声器
MN: A0P3512, A0P3515, A0P3516, A0P3517, A0P3513, A0P3518