
# SEAVIEW// ELEVATE YOUR ELECTRONICS

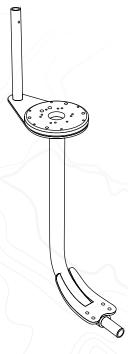

# INSTALLATION INSTRUCTIONS

For Seaview Light Bars:


LTB-SF, LTB-SF2

Refer to website for most up to date instructions and videos.


WWW.SEAVIEWGLOBAL.COM

### **PARTS INCLUDED**


#### LTB-SF PARTS

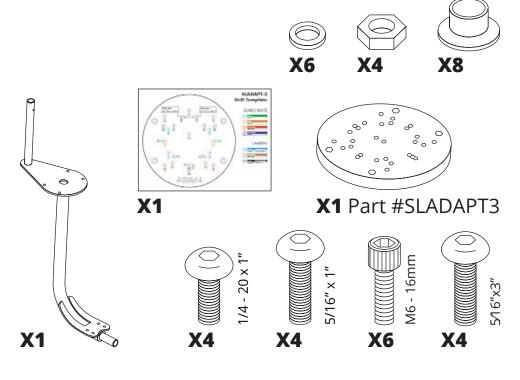


#### LTB-SF2 PARTS

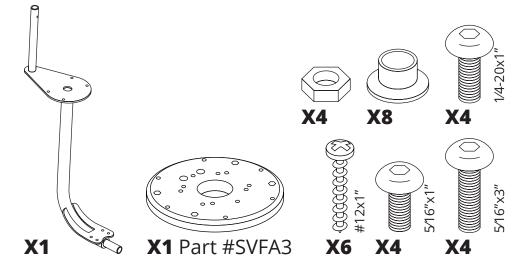


### **TOOLS NEEDED**

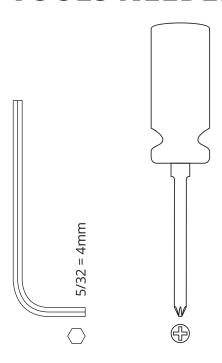

Install your light, adapter or box onto the light bar by following the instructions that came with the optional accessory.

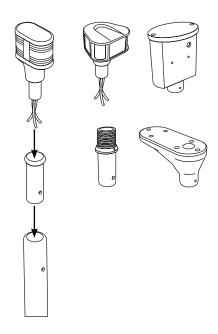


Insert the four nuts into the adapter plate. This has most likely been done for you.

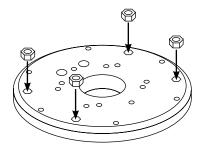


Using a philips head screwdriver screw in the six #12x1" screws to secure the camera to the adapter plate.

(For #LTB-SF2 only)

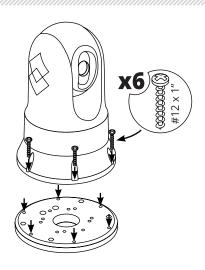


3**B** 

Secure the camera or search light assembly to the light bar using the four 1/4-20x1" bolts and nylon shoulder washers.

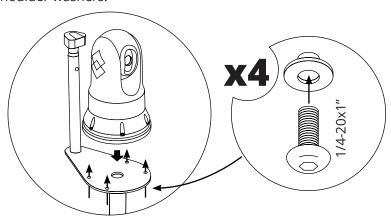


**4**A

Using a philips head screwdriver screw in the six M6 - 16mm bolts to secure the camera to the adapter plate. (For #LTB-SF only)

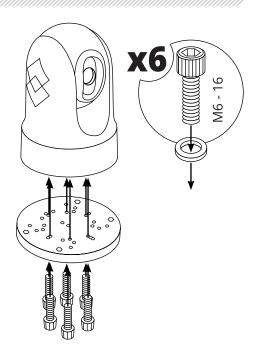




Secure the camera or search light assembly to the light bar using the four 1/4-20x1" bolts and nylon shoulder washers.

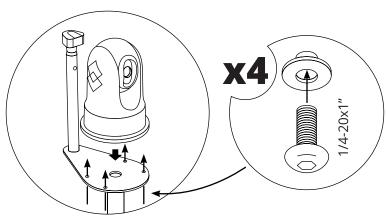


5

Insert the light bar into the light bar hole located on the back of the Seaview mount.

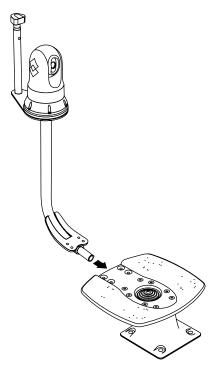

**6**A

Using the four 5/16x1" bolts and nylon shoulder washers, secure the light bar by bolting it to the top plate.

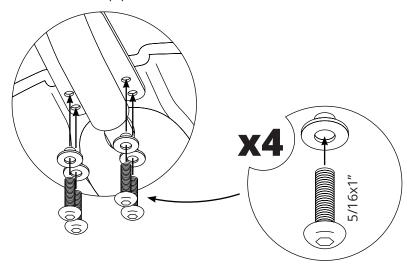



When using the Seaview #SP1-MOD or #SP2-MOD Spreader Kits use the 5/16x3" bolts.

## SEAVIEV// ELEVATE YOUR ELECTRONICS

**SEAVIEW**//

Tel: 800-655-7922 www.seaviewglobal.com

**EUROPEAN OFFICE** 

Tel: +33 4 94 53 27 70 www.seaviewprogress.com