



BeeDe Electrical Instrument Company, Inc.
 88 Village Street, Penacook, NH 03303
 Phone: (603) 753-6362 FAX: (603) 753-6201
 www.beede.com
 An ISO-9001 Certified Company

- AGRICULTURAL
- AUTOMOTIVE
- INDUSTRIAL
- MARINE
- TRUCK
- BUS

WARRANTY

BeeDe Electrical Instrument Co., Inc. warrants all instruments and accessories free from all defects in workmanship and materials on gauges that are less than three (3) years old or have been in service fewer than two (2) years and, at no charge, will replace or repair at BeeDe's option all instruments that fail. Contact BeeDe for complete details.

2" NexSysLink® CAN Display Serial Data Bus Instrument Installation Instructions

WARNING

Improper installation may damage the instrument and/or cause injury to the installer. If you have installation questions, please contact the factory. Disconnect battery cables before installing the instrument. Check for obstructions behind dash panel such as wires and hoses before cutting the mounting hole for the instrument.

DESCRIPTION

This NexSysLink® serial data bus instrument functions as a stand-alone or Master Node Instrument depending upon factory configuration and directly reads Controller Area Network (CAN) system messages. This instrument supports SAE J1939 protocol.

MOUNTING

Recommended dash hole size: 2.125±.015 in (53.98±0.38 mm) DIA. Secure the instrument into dashboard with mounting "J" clamp and Kep nuts. If dashboard thickness exceeds clamp grip range, clamp legs may be shortened. Position instrument in dash board prior to tightening clamp nuts to recommended torque. Maximum recommended tightening torque for all hardware: 6 lb-in (0.68 N-m). Caution, over tightening mounting hardware may damage the instrument.

MAINTENANCE


Periodically check and torque all hardware per mounting specifications. Clean glass with a soft, damp, clean cloth.

USER MANUAL

A complete operation manual for this product is available at www.beede.com.

THANK YOU!

Thank you for purchasing a BeeDe instrument. Our instruments are made for you in the U.S.A. Visit our WEB site at www.beede.com or contact customer service for information on this or other BeeDe Instruments.

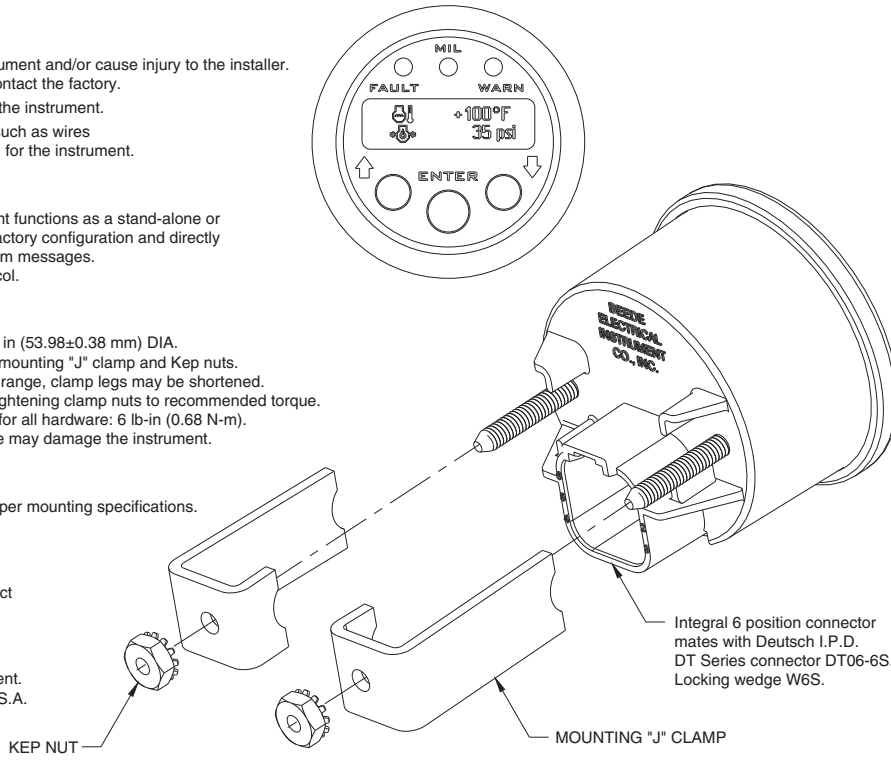


Stand-Alone Configuration Connections

6 Pin Connector Wiring Table	
Pin Number	Connection Name
1	Battery +
2	Ground
3	Switched Output
4	Lamp (B+)
5	CAN-H
6	CAN-L

Master Node Configuration Connections

6 Pin Connector Wiring Table	
Pin Number	Connection Name
1	Battery +
2	Ground
3	Serial Data
4	Switched Output
5	CAN-H
6	CAN-L

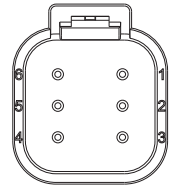

6 Pin Connector Detail

548942 REV B
11.02.11



BeeDe Electrical Instrument Company, Inc.
 88 Village Street, Penacook, NH 03303
 Phone: (603) 753-6362 FAX: (603) 753-6201
 www.beede.com
 An ISO-9001 Certified Company

- AGRICULTURAL
- AUTOMOTIVE
- INDUSTRIAL
- MARINE
- TRUCK
- BUS

WARRANTY

BeeDe Electrical Instrument Co., Inc. warrants all instruments and accessories free from all defects in workmanship and materials on gauges that are less than three (3) years old or have been in service fewer than two (2) years and, at no charge, will replace or repair at BeeDe's option all instruments that fail. Contact BeeDe for complete details.

2" NexSysLink® CAN Display Serial Data Bus Instrument Installation Instructions

WARNING

Improper installation may damage the instrument and/or cause injury to the installer. If you have installation questions, please contact the factory. Disconnect battery cables before installing the instrument. Check for obstructions behind dash panel such as wires and hoses before cutting the mounting hole for the instrument.

DESCRIPTION

This NexSysLink® serial data bus instrument functions as a stand-alone or Master Node Instrument depending upon factory configuration and directly reads Controller Area Network (CAN) system messages. This instrument supports SAE J1939 protocol.

MOUNTING

Recommended dash hole size: 2.125±.015 in (53.98±0.38 mm) DIA. Secure the instrument into dashboard with mounting "J" clamp and Kep nuts. If dashboard thickness exceeds clamp grip range, clamp legs may be shortened. Position instrument in dash board prior to tightening clamp nuts to recommended torque. Maximum recommended tightening torque for all hardware: 6 lb-in (0.68 N-m). Caution, over tightening mounting hardware may damage the instrument.

MAINTENANCE


Periodically check and torque all hardware per mounting specifications. Clean glass with a soft, damp, clean cloth.

USER MANUAL

A complete operation manual for this product is available at www.beede.com.

THANK YOU!

Thank you for purchasing a BeeDe instrument. Our instruments are made for you in the U.S.A. Visit our WEB site at www.beede.com or contact customer service for information on this or other BeeDe Instruments.

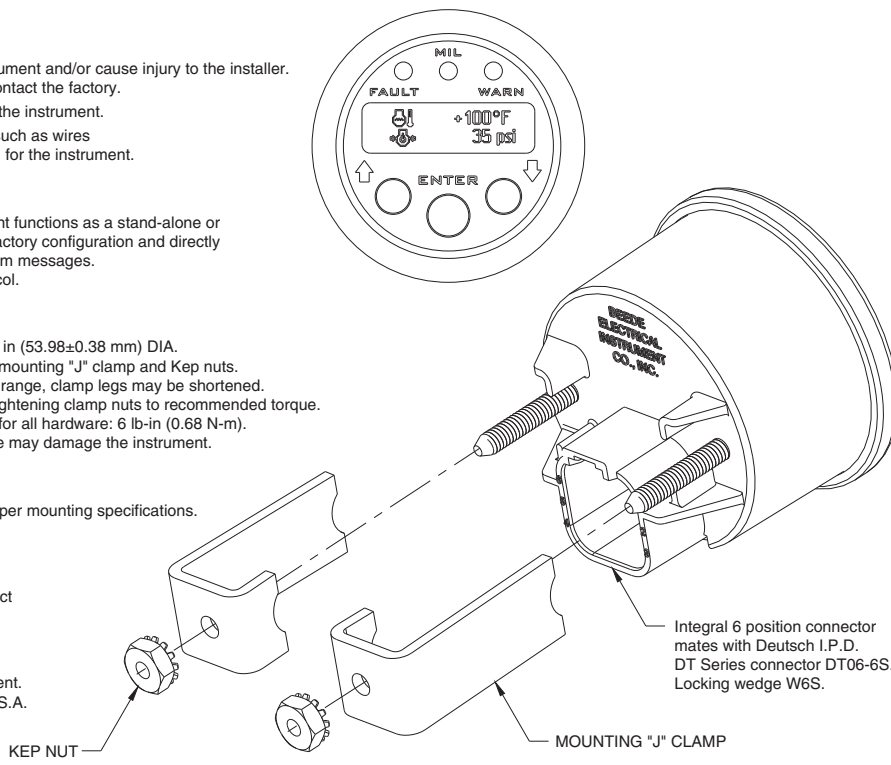


Stand-Alone Configuration Connections

6 Pin Connector Wiring Table	
Pin Number	Connection Name
1	Battery +
2	Ground
3	Switched Output
4	Lamp (B+)
5	CAN-H
6	CAN-L

Master Node Configuration Connections

6 Pin Connector Wiring Table	
Pin Number	Connection Name
1	Battery +
2	Ground
3	Serial Data
4	Switched Output
5	CAN-H
6	CAN-L

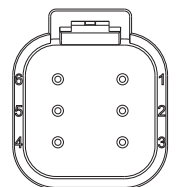

6 Pin Connector Detail

548942 REV B
11.02.11