Install Transducer in Tank Supplied

Installation Supplement: *In-Hull 1kW Transducer*

Models: M260, M265LH, M265LM

CAUTION: Install the transducer in the tank supplied. Although tanks may look alike, some dimensions may differ. If you want to mount the transducer in a previously installed tank, replace the UPPER section. Failure to install the transducer in the proper tank may result in the corners of the transducer and/or tank breaking.

Replacing Upper Section of Tank

CAUTION: Do not over-tighten the socket-head cap screws to avoid cracking the tank.

- 1. Disassemble the new tank supplied with the transducer. Using the Allen wrench included, remove the four socket-head cap screws, lock washers, and flat washers (see Figure 1). Set them aside. (To remove the Allen wrench from the handle of the transducer, use a blade screwdriver.)
- Using the Allen wrench supplied, remove the four socket-head cap screws, lock washers, and flat washers from the previously installed tank. Save them as spares. Discard the upper section of the tank.
- 3. Be sure that the gasket is in place around the opening of the lower section of the tank. Fasten the new upper tank to the previously installed lower section to form a complete unit. Use the four socket-head cap screws, lock washers, and flat washers. Lightly tighten the socket-head cap screws that hold the two sections of the tank together with a force not exceeding 50 in.-lb. **Do not over-tighten**. After use, replace the Allen wrench in the recess in the transducer.
- 4. Follow the installation instructions that came with the transducer, starting with "Installing the Transducer" on page 4.

Replacement Parts

Obtain parts from your instrument manufacturer or marine dealer.

 Gemeco
 Tel:
 803-693-0777

 (USA)
 Fax:
 803-693-0477

 email:
 sales@gemeco.com

 Airmar EMEA
 Tel:
 +33.(0)2.23.52.06.48

 (Europe, Middle East, Africa)
 Fax:
 +33.(0)2.23.52.06.49

email: sales@airmar-emea.com



