



Intrepid Water Bottle with Pioneer Purifier Instructions for Use

Removing Pioneer Purifier from Pioneer Housing

1. To remove the purifier element from the Pioneer housing squeeze the Pioneer housing opposite of the cut away area at open end of the housing. By squeezing the Pioneer housing in this location the housing is made a bit oblong allowing the purifier element to be removed as the two tabs at the open end of the housing will move out/away allowing purifier element to be removed.
2. Grab the Pioneer purifier element in the cut away area of Pioneer housing and pull the purifier element out of the housing.

Installing Pioneer Purifier Element in Pioneer Straw

1. Remove plastic wrapping from the Pioneer purifier element.
2. Do not puncture, slice, or crush Pioneer purifier element!
3. Squeeze the Pioneer housing opposite of the cut away area at open end of the housing.
4. As a result, the housing will allow the purifier element to be installed. (The two tabs at the open end of the housing will move out/away allowing purifier element to be installed).
5. Insert and push Pioneer replacement purifier element into housing making sure both o-rings are fully seated in housing hose barb end.
6. RapidPure Pioneer purifier is now ready for use!



RapidPure, Inc.

737 Quentin Ave. S. • Lakeland, MN 55043
Ph: 612.940.9946 • Fax: 651.490.3450
sales@RapidPureUSA.com • RapidPureUSA.com

GET CONNECTED! Log on to our website to learn more about our products and service. Products patented. Visit RapidPureUSA.com for information.

Meets EPA & NSF guidelines
with 99.9999% reduction of
bacteria and viruses and 99.9980%
reduction of protozoa and cysts.

Made in a
WQA Gold Seal
Certified facility.



Assembled in an
ISO9001
Certified
Facility