

DSL[®]

HYDRO



OWNER'S MANUAL

NXL850.40 / NXL900.60
NXL1100.10 / NXL1000.80

WE LIKE IT LOUD

Where You Headed?

Thank you for choosing **DS18 NXL** marine amps! Your choice of **DS18 NXL** Marine amps indicates a desire for high quality music reproduction. **DS18 NXL** marine amps brings to you over four decades of car audio expertise. So whether you are a daily driving music lover, or a serious car audio competitor, **DS18 NXL** marine amps have the product for you!

To take full advantage of the **DS18 NXL** marine amps gear you have just purchased, please read and follow the instructions in this manual. As with all of our products, professional installation by an authorized **DS18 NXL** marine amps dealer is highly recommended! Otherwise, the performance of your new gear may not be satisfactory. In addition to the installation services and expertise offered by an authorized **DS18 NXL** marine amps dealer, the warranty of this product may be extended when installed by an authorized **DS18 NXL** marine amps dealer. Be sure to ask your authorized **DS18 NXL** marine amps dealer about whether your product may qualify for an extended warranty.

You're Headed in the Right Direction with **DS18 NXL** marine amps!

INTRODUCTION

The **DS18 NXL** marine amplifiers offer high quality audio reproduction for the audiophile and the everyday listener alike. All models feature fully variable crossovers with 12 dB per octave slopes, allowing you the ability to tailor the sound to best fit the speakers and your listening preferences.

Fully Variable Crossovers Fully variable crossovers promote installation ease and save the cost of outboard crossovers. Additionally, they may be used in conjunction with outboard passive or active crossovers, depending on the complexity required by the system. The 12 dB per octave slope offers steep roll-off above or below the selected frequency.

Protection Circuitry Against Overload, Short Circuit, Thermal, and Reverse Polarity. These Protection features are designed to protect the amplifier from misuse, as well as from common causes of amplifier failure.

INSTALLATION

Professional installation by an authorized **DS18 NXL** marine amps dealer is highly recommended! Otherwise, the performance of your new gear may not be satisfactory. In the event that you decide to do your own installation, please read and follow this manual very carefully. Failure to do so may compromise the integrity of this product, your automobile, and possibly void the product warranty.

Select a location that will provide adequate ventilation for the amplifier. Avoid mounting the amplifier with the fins facing down. The fins should be facing up, either vertically or horizontally. Secure the amplifier with the screws provided.


WARRANTY!

Before securing the amplifier, inspect the mounting location carefully to ensure that you do not drill into or damage any electrical, hydraulic, fluid, or fuel lines.

Input Section (Waterproof RCAs Harness)


Because of the wide range of head unit output configurations all **DS18 NXL** marine amps have an adjustable input sensitivity of "Gain". The gain is not a volume or a power limiting control like a throttle. It makes the amp more sensitive to input from the stereo, with the gain up the amp will reach full output at a lower volume setting on the deck. At higher gain settings the amp also becomes more more sensitive to noise from the car's electrical system. Try to run the gain at the lowest setting possible for you system.

There is no correct gain setting. Because speakers require different power demands to reach the same output, the gains most often need to be used to compensate for these differences. If you tried to set all the gains at half way you would probably find the system didn't sound very good. Using good judgment and listening carefully to each speaker is still the best way to tune a system.

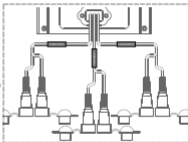

Top Crossover controls

A crossover is a device that removes unwanted frequencies from a speaker or amplifier. A tweeter can easily be destroyed by bass notes if they are not filtered out. Likewise a subwoofer will not sound natural if it is playing midrange notes. A crossover removes these sounds from the speaker. As you might guess, careful adjustment is needed to ensure that all the speakers are playing the right sounds and that you are left with no "holes" or low spots in the frequency response.

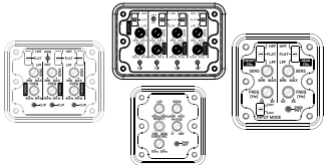

BASS BOOST

DS18 NXL1100.1D marine amps amplifiers have an adjustable bass boost. Begin your adjustments at low volume. If you do not hear any improvement then woofer does not need any BASS BOOST. The Low Pass Filter[LPF] must be switched on for the bass boost to activate. Use Bass Boost carefully. The demands on power output are tremendous. Try to minimize the use by changing woofer position or the enclosure size.




DS18

Speaker outputs

This amplifier is a multi channel amplifier design meaning it has more than one channel of speaker outputs. It is equipped with a harness over-mold. Connect this carefully and neatly; strip your wire back and twist the exposed leads and use a insulated waterproof marine butt connector. If the wires ever come in contact with each other the amplifier will go into protection mode.

Know your total ohm load before you make any connections.

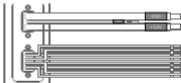

Installation Instructions

1. Before you start, disconnect the negative cable from the car battery. Tape up the end so it is isolated from the battery.
2. Run an appropriate gauge wire from the battery to the amplifier. Plan this part of the installation carefully, this cable will carry very high current. If it should short to the body and it is not properly fused it could catch fire.
3. Connect the power wire to the battery using a fuse capable of the total current load of all amplifiers connected **Don't install the fuse yet.** Wait until the end, locate the fuse as close as possible to the battery. If the fuse is further that 18 inches (wire length) from the battery you should reevaluate the wire and fuse placement.
4. Find the closest clear metal area to the amp for a ground, sand, grind or scrape all paint and undercoating from the body and screw the ground securely in place.

It is advisable to test the ground with an ohmmeter between the ground cable and the negative battery cable to insure a good low resistance connection. Some alloys used in modern cars do not offer the best ground. If you believe this is the case - first consult with the vehicle manufacturer.

5. Run the speaker wire to the speakers. It is advised that you leave some extra wire at this point. You can fix it later.
6. If you haven't done so already, mount the amp now.
7. Connect the power and ground to the amplifier.
Only after this step - you should install the fuse at the battery.
8. Connect the remote wire from the head unit to the amplifier.
Now is a good time to turn on the amp for the first time. Make sure it turns on properly and does not go into protection mode.

9. Connect the speaker wires to the amp and speakers (make sure the amp is off first). Make sure the polarity(+add-)is correct.
10. Connect the RCA to the amp.
11. Double check the amplifier controls at this time. Make sure everything is set correctly for your system.
12. Now you're ready to play it for the first time. It is best to leave the gain all the way down at first. Start with the head unit volume low and work your way up.
13. Now you can tune the amp. Take your time and make only one adjustment at a time. It may take some time to get the system fully adjusted. During this time the amp is drawing current from the battery. You should check the battery voltage from time to time and recharge it if it gets low. that's it. You're done. Now have fun!



SPECIFICATIONS

	NXL850.4D	NXL900.6D	NXL1000.8D	NXL1100.1D
Output @ 4 ohm	200W RMS	160W RMS	130W RMS	1100W RMS
Output @ 2 ohm	300W RMS	240W RMS	200W RMS	900W RMS
Output @ 4 ohm (Bridged)	500W RMS	400W RMS	360W RMS	600W RMS
Waterproof level	IPX65	IPX65	IPX65	IPX65
Harmonic Distortion	0.07%	0.07%	0.07%	0.07%
Sensitivity	>95dB	>95dB	>95dB	>95dB
Gain Range	0.2-5V	0.2-5V	0.2-5V	0.2-5V
Crossover Range	40Hz-3KHz	40Hz-3KHz	40Hz-3KHz	40Hz-3KHz
Frequency Range	20-20KHz	20-20KHz	20-20KHz	20-20KHz
Bass Boost	N/A	N/A	N/A	0-18dB
Dimensions (LxWxH)	295x125x42	295x125x42	320x125x42	265x125x42


#WELIKEITLOUD     DS18.COM

NXL850.4D INSTALLATION

Latest Full Range Class-D Amplifier with High Performance Circuit Design

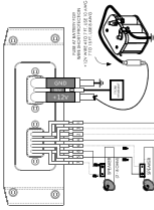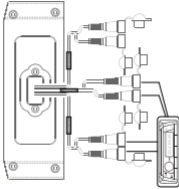

Bridge Mode:

 


SPEAKER WIRES COLOR CODE

1	FR+	Grey	5	RR+	Purple
2	FR-	Grey/Black Stripe	6	RR-	Purple/Black Stripe
3	FL+	White/Black Stripe	7	RL+	Green/Black Stripe
4	FL-	White	8	RL-	Green



NXL1100.1D INSTALLATION

Class-D Monoblock Amplifier with High Performance Circuit Design

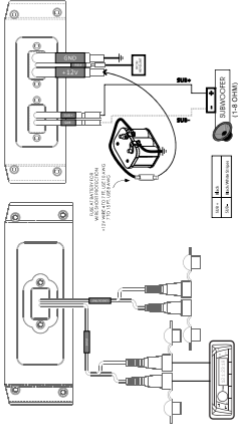

NXL1000.8D INSTALLATION

Latest Full Range Class-D Amplifier with High Performance Circuit Design

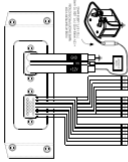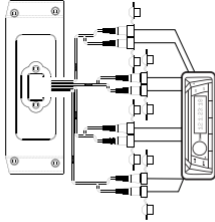

Pin	WIRE COLOR	WIRE USAGE
1	CH1+	10# (White)
9	CH1-	10# (Black/Black)
2	CH2+	10# (Grey)
10	CH2-	10# (Grey/Black)
3	CH3+	10# (Green)
11	CH3-	10# (Green/Black)
4	CH4+	10# (Purple)
12	CH4-	10# (Purple/Black)
5	CH5+	10# (White)
13	CH5-	10# (White/Black)
6	CH6+	10# (Grey)
14	CH6-	10# (Grey/Black)
7	CH7+	10# (Green)
15	CH7-	10# (Green/Black)
8	CH8+	10# (Purple)
16	CH8-	10# (Purple/Black)

WIRE COLOR: 1-4 (GREEN) (4-8 (BLACK) (8-16)



WARRANTY

Should your amplifier require service please consult with the dealer from which it was purchased, or contact DS18 Audio (local) Dealer.

Do not attempt to return your amplifier directly to us without first calling for a Return Authorization Number. Units received without an accompanying Return Authorization Number will be processed more slowly. Additionally, you must include a copy of your purchase receipt from an authorized dealer for consideration of in-warranty service; otherwise repair charges will apply. Units received without a receipt will be held for 30 days, allowing us time to contact you and obtain a copy of the receipt. After 30 days, all units will be returned without repair.

DS18.COM



#WELIKEITLOUD    