


■ Rear panel— Main unit

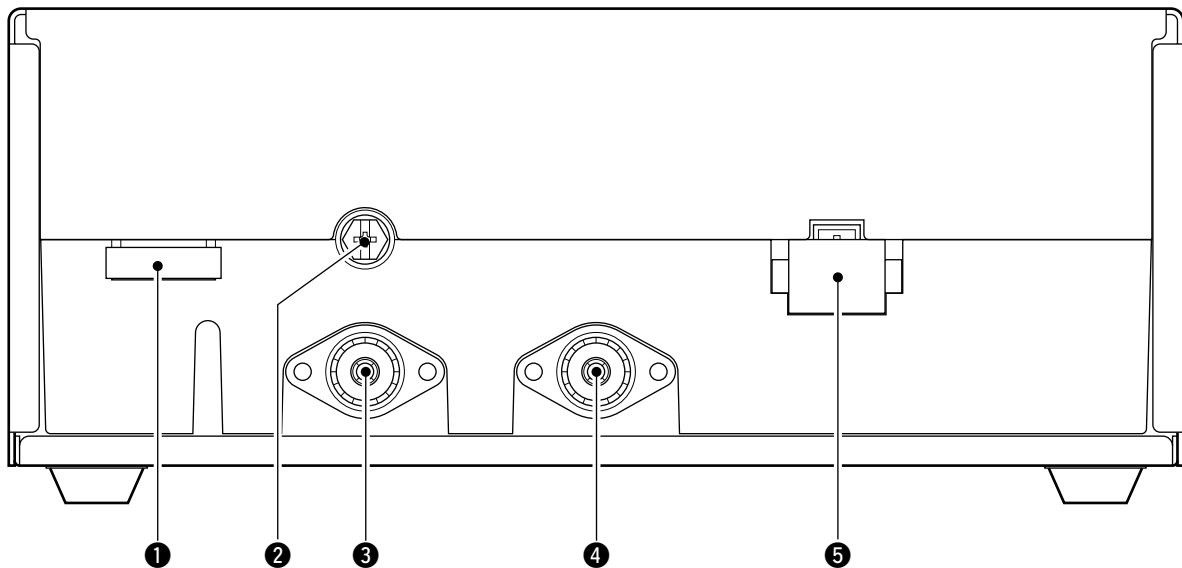


- 1 TUNER CONTROL SOCKET** (pgs. 54, 56, 61)
Connects a control cable to an optional antenna tuner.
A female connector kit is supplied for external antenna tuner connection.
- 2 GROUND TERMINAL**
IMPORTANT! Connects a ship's (or vehicle's) ground. See pages 55 and 63–65 for details.
- 3 ANTENNA CONNECTOR 1** (pgs. 54, 56)
Connects a 50 Ω HF band antenna via a 50 Ω matched coaxial cable with a PL-259 plug for both transmit and receive operation.

- 4 ANTENNA CONNECTOR 2** (pgs. 54, 56)
Connects a 50 Ω HF band antenna via a 50 Ω matched coaxial cable with a PL-259 plug for DSC receiver.
- 5 DC POWER SOCKET** (p. 54, 61)
Accepts 13.6 V DC through the supplied DC power cable.

✓ For detailed “ANTENNA AND GROUNDING CONSIDERATIONS,” see pages 63 to 65.

■ Microphone (HM-135)

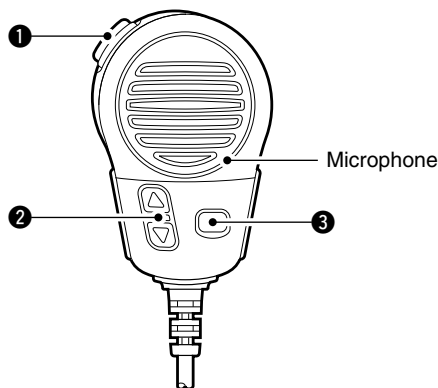

- 1 PTT SWITCH [PTT]**
Push and hold to transmit; release to receive.
- 2 UP/DOWN SWITCHES [▲]/[▼]**
Push either switch to change the operating channel, frequency, etc.
- 3 USER PROGRAMMABLE SWITCH [P]**
Push to activate or deactivate a function, selected in initial set mode (p. 51).