

CONTENTS

1

GENERAL INFORMATION, SAFETY AND TOOLS

HOW TO USE THIS MANUAL	1-2
BOATING SAFETY	1-4
BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
SAFETY IN SERVICE	1-12
TROUBLESHOOTING	1-13
SHOP EQUIPMENT	1-16
TOOLS	1-18
FASTENERS, MEASUREMENT, AND CONVERSIONS	1-26
SPECIFICATIONS	1-27

2

MAINTENANCE & TUNE-UP

GENERAL INFORMATION	2-2
LUBRICATION SERVICE	2-4
ENGINE MAINTENANCE	2-8
BOAT MAINTENANCE	2-19
TUNE-UP	2-22
TIMING AND SYNCHRONIZATION	2-33
STORAGE	2-37
CLEARING A SUBMERGED MOTOR	2-40
SPECIFICATIONS	2-41

3

FUEL SYSTEM

CARBURETED FUEL SYSTEMS	3-2
FUEL TANK & LINES	3-9
CARBURETORS	3-13

4

IGNITION & ELECTRICAL SYSTEMS

UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS	4-2
IGNITION SYSTEMS	
TROUBLESHOOTING	
FLYWHEEL MAGNETO IGNITION SYSTEMS	4-11
LOW TENSION FLYWHEEL MAGNETO IGNITION SYSTEMS	4-21
TYPE I CAPACITOR DISCHARGE (CD) IGNITION SYSTEM (WITH TIMER BASE)	4-28
TYPE II CAPACITOR DISCHARGE (CD) IGNITION SYSTEM (WITH SENSOR COIL)	4-34
GENERATOR CHARGING CIRCUIT	4-45
CHARGING SYSTEMS	
BATTERY	4-53
STARTING SYSTEM	4-55
ELECTRICAL ACCESSORIES (GAUGES, LIGHTS, HORNS AND SWITCHES)	4-67
SPECIFICATIONS	4-70
WIRING DIAGRAMS	4-72

5

LUBRICATION & COOLING

LUBRICATION SYSTEMS	5-2
VARIABLE RATIO OILING (VRO) SYSTEM	5-2
ACCUMIX (AUTOBLEND) OILING SYSTEM	5-6
COOLING SYSTEM	5-7

CONTENTS

POWERHEAD SPECIFICATIONS 6-2
6-34

POWERHEAD

6

LOWER UNIT - GEARCASE BASICS 7-2
LOWER UNIT (NON-SHIFTING) 7-11
LOWER UNIT (SHIFT W/NO-DISCONNECT) 7-15
LOWER UNIT (MECHANICAL SHIFT, W/SPLIT GEARCASE, 6 HP & 9.5-25 HP) 7-26
LOWER UNIT (MECHANICAL SHIFT, SOLID GEARCASE, (PROPELLER EXHAUST) 7-44
LOWER UNIT (MECHANICAL SHIFT, PROPELLER EXHAUST - CERTAIN 20-35 HP MODELS) 7-54
LOWER UNIT (MECHANICAL SHIFT, SLIDING CLUTCH DOG) 7-94

LOWER UNIT

7

TRIM/TILT SYSTEMS 8-2

TRIM & TILT

8

HYDRO-ELECTRIC/MECHANICAL SHIFT REMOTE CONTROLS 9-2
LATE-MODEL MECHANICAL SHIFT REMOTE CONTROLS 9-20

REMOTE CONTROLS

9

HAND REWIND STARTER 10-2
TYPE I STARTER - CYLINDER W/ PINION GEAR (5-8 HP) 10-3
TYPE II STARTER - CYLINDER W/ PINION GEAR (9.5 HP) 10-9
TYPE III STARTER - COIL SPRING W/ SWING ARM VERTICAL MOUNT (VARIOUS 4/4.5 HP) STARTER 10-13
TYPE IV STARTER - COIL SPRING W/ SLIDING GEAR ARM HORIZONTAL MOUNT (9.9/15 HP) STARTER 10-17
TYPE V STARTER - MOUNTED ATOP FLYWHEEL W/NO RETURN SPRINGS (1971-76 AND 1981-85 40 HP) 10-23
TYPE VI STARTER - MOUNTED ATOP FLYWHEEL WITH 1 OR 2 NYLON PAWLS (VARIOUS 2-35 HP MODELS) 10-28
TYPE VII STARTER - MOUNTED ATOP FLYWHEEL W/LARGE PAWL PLATE (1986-89 40 HP) STARTER 10-32
SPECIFICATIONS 10-34

HAND REWIND STARTER

10

MASTER INDEX 10-35

MASTER INDEX

ACCUMIX (AUTOBLEND) OILING SYSTEM.....	5-6	TIMING	4-34
DESCRIPTION & OPERATION.....	5-6	TROUBLESHOOTING.....	4-29
GENERAL MAINTENANCE.....	5-6	CAPACITOR DISCHARGE (CD) IGNITION (W/SENSOR COIL).....	4-34
OIL RESERVOIR CANISTER.....	5-6	ARMATURE PLATE.....	4-42
TROUBLESHOOTING.....	5-6	CHARGE OR SENSOR COIL.....	4-43
ALTERNATOR CHARGING CIRCUIT.....	4-51	DESCRIPTION & OPERATION.....	4-34
DESCRIPTION & OPERATION.....	4-51	FLYWHEEL.....	4-42
DIODE.....	4-53	IDENTIFICATION.....	4-34
GENERAL INFORMATION.....	4-51	POWER PACK.....	4-44
STATOR.....	4-53	TIMING.....	4-45
TROUBLESHOOTING.....	4-51	TROUBLESHOOTING.....	4-36
ANCHORS.....	1-10	CARBURETED FUEL SYSTEMS.....	3-2
ANODES (ZINCS).....	2-17	DESCRIPTION & OPERATION.....	3-2
INSPECTION.....	2-18	GENERAL INFORMATION.....	3-2
SERVICING.....	2-19	PRESSURIZATION.....	3-4
ARMATURE PLATE.....		SERVICE CAUTIONS.....	3-4
CD IGNITION SYSTEM (W/SENSOR COIL).....	4-42	TROUBLESHOOTING.....	3-5
FLYWHEEL MAGNETO IGNITION.....	4-17	CARBURETOR - TYPE I.....	3-14
LOW TENSION FLYWHEEL MAGNETO IGNITION.....	4-26	DISASSEMBLY & ASSEMBLY.....	3-16
AVOIDING MISTAKES.....	1-3	REMOVAL, INSTALLATION & ADJUSTMENT.....	3-15
AVOIDING TROUBLE.....	1-2	CARBURETOR - TYPE I (LATE MODEL) - 5-8 HP (164CC).....	3-19
BAILING DEVICES.....	1-10	CLEANING & INSPECTION.....	3-22
BASIC ELECTRICAL THEORY.....	4-2	OVERHAUL.....	3-20
HOW DOES ELECTRICITY WORK.....	4-2	REMOVAL & INSTALLATION.....	3-19
OHMS LAW.....	4-2	CARBURETOR - TYPE II.....	3-23
WHERE TO START.....	4-2	DISASSEMBLY & ASSEMBLY.....	3-24
BASIC OPERATING PRINCIPLES.....	1-13	REMOVAL, INSTALLATION & ADJUSTMENT.....	3-23
COMBUSTION.....	1-16	CARBURETOR - TYPE III.....	3-27
UNDERSTANDING ENGINE OPERATION.....	1-13	DISASSEMBLY & ASSEMBLY.....	3-30
2-STROKE MOTORS.....	1-13	REMOVAL & INSTALLATION.....	3-27
4-STROKE MOTORS.....	1-15	CARBURETOR - TYPE IV.....	3-31
BATTERY.....		DISASSEMBLY & ASSEMBLY.....	3-34
CONSTRUCTION.....	4-54	REMOVAL, INSTALLATION & ADJUSTMENT.....	3-32
DUAL BATTERY INSTALLATION.....	4-55	CARBURETOR INSTALLATIONS.....	3-13
JUMPER CABLES.....	4-54	TYPE I.....	3-13
LOCATION.....	4-54	TYPE II.....	3-13
MAINTENANCE.....	2-19	TYPE III.....	3-14
MARINE.....	4-53	TYPE IV.....	3-14
RATINGS.....	4-54	CARBURETORS.....	3-13
SERVICE.....	4-54	CARBURETOR INSTALLATIONS.....	3-13
STORAGE.....	4-55	ELECTRIC FUEL PRIMER.....	3-40
TESTING.....	2-20	FUEL PUMP.....	3-36
BEFORE/AFTER EACH USE.....	2-3	GENERAL INFORMATION.....	3-13
VISUALLY INSPECTING THE BOAT AND MOTOR.....	2-3	MANUAL FUEL PRIMER.....	3-39
BOAT MAINTENANCE.....	2-19	TYPE I CARBURETOR.....	3-14
BATTERIES.....	2-19	TYPE I CARBURETORS (LATE MODEL) - 5-8 HP (164CC).....	3-19
FIBERGLASS HULL.....	2-21	TYPE II CARBURETOR.....	3-23
BOATING EQUIPMENT.....	1-10	TYPE III CARBURETOR.....	3-27
ANCHORS.....	1-10	TYPE IV CARBURETOR.....	3-31
BAILING DEVICES.....	1-10	CENTERING PIN.....	6-12
COMPASS.....	1-10	REMOVAL.....	6-12
FIRST AID KIT.....	1-10	CHARGE OR SENSOR COIL - TYPE II.....	
OAR/PADDLE.....	1-10	REMOVAL & INSTALLATION.....	4-43
TOOLS & SPARE PARTS.....	1-12	CHARGING CIRCUIT (ALTERNATOR).....	4-51
VHF-FM RADIO.....	1-10	DESCRIPTION & OPERATION.....	4-51
BOATING SAFETY.....	1-4	DIODE.....	4-53
COURTESY MARINE EXAMINATIONS.....	1-10	GENERAL INFORMATION.....	4-51
REGULATIONS FOR YOUR BOAT.....	1-4	STATOR.....	4-53
REQUIRED SAFETY EQUIPMENT.....	1-5	TROUBLESHOOTING.....	4-51
BOTTOM SEAL.....	6-11	CHARGING CIRCUIT (GENERATOR).....	4-45
INSPECTION.....	6-11	DESCRIPTION & OPERATION.....	4-45
REMOVAL & INSTALLATION.....	6-11	GENERAL INFORMATION.....	4-45
BREAK-IN & THE VRO SYSTEM.....	5-2	GENERATOR.....	4-47
BREAKER POINTS/CONDENSER.....		TROUBLESHOOTING.....	4-46
FLYWHEEL MAGNETO IGNITION.....	4-15	VOLTAGE REGULATOR.....	4-47
LOW TENSION FLYWHEEL MAGNETO IGNITION.....	4-24	CHARGING SYSTEMS.....	
BYPASS COVER.....	6-8	ALTERNATOR.....	4-51
REMOVAL & INSTALLATION.....	6-8	GENERATOR.....	4-45
CAN YOU DO IT?.....	1-2	CHEMICALS.....	1-17
CAPACITOR DISCHARGE (CD) IGNITION (W/TIMER BASE).....	4-28	CLEANERS.....	1-18
DESCRIPTION & OPERATION.....	4-28	LUBRICANTS & PENETRANTS.....	1-17
IDENTIFICATION.....	4-28	SEALANTS.....	1-17
POWER PACK.....	4-33	TYPES OF CHEMICALS.....	1-17
STATOR & CHARGE COIL.....	4-32	CHOKE CIRCUIT.....	4-70
TIMER BASE & SENSOR ASSEMBLY.....	4-32	CLEARING A SUBMERGED MOTOR.....	2-40

10-36 MASTER INDEX

COIL		
FLYWHEEL MAGNETO IGNITION	4-19	
COMPASS	1-10	
INSTALLATION	1-11	
PRECAUTIONS	1-11	
SELECTION	1-10	
COMPRESSION CHECK	2-24	
CONCEALED SIDE MOUNT REMOTE UNITS	9-26	
DISASSEMBLING & ASSEMBLING THE HOUSING	9-28	
OVERHAUL	9-26	
REPLACING THE TRIM/TILT SWITCH	9-26	
CONNECTING RODS	6-14	
CLEANING, INSPECTION & SERVICE	6-21	
DISASSEMBLY & ASSEMBLY	6-18	
REMOVAL & INSTALLATION	6-14	
CONTROL CABLES	9-32	
RIGGING	9-32	
COOLING SYSTEM		
DESCRIPTION & OPERATION	5-7	
FLUSHING THE COOLING SYSTEM	2-9	
GENERAL INFORMATION	5-7	
THERMOSTAT (AND PRESSURE RELIEF VALVE)	5-10	
TROUBLESHOOTING	5-8	
WATER PUMP	5-11	
COOLING SYSTEM MAINTENANCE	2-32	
WATER PUMP CHECK	2-32	
COURTESY MARINE EXAMINATIONS	1-10	
CRANKCASE COVER	6-13	
REMOVAL & INSTALLATION	6-13	
CRANKCASE SIDE BOLTS	6-12	
REMOVAL & INSTALLATION	6-12	
CRANKSHAFT & BEARING	6-23	
CLEANING & INSPECTION	6-28	
CRANKSHAFT & BEARING ASSEMBLY	6-27	
INSTALLATION	6-24	
REMOVAL & DISASSEMBLY	6-23	
CYLINDER BLOCK	6-28	
HONING PROCEDURES	6-29	
SERVICE	6-28	
CYLINDER HEAD	6-5	
REMOVAL & SERVICE	6-5	
DE-CARBONING THE PISTONS	2-23	
DESCRIPTION & OPERATION		
ACCUMIX SYSTEM	5-6	
CARBURETORS	3-2	
COOLING SYSTEM	5-7	
FLYWHEEL MAGNETO IGNITION	4-11	
LOWER UNIT - ELECTRIC SHIFT, 2 SOLENOIDS	7-67	
LOWER UNIT - MECHANICAL SHIFT, HYDRAULIC ASSIST	7-81	
LOWER UNIT - MECHANICAL SHIFT, PROPELLER EXHAUST	7-54	
LOWER UNIT - MECHANICAL SHIFT, SLIDING CLUTCH DOG	7-94	
LOWER UNIT - MECHANICAL SHIFT, SLIDING CLUTCH DOG	7-94	
LOWER UNIT - MECHANICAL SHIFT, SOLID GEARCASE, PROPELLER EXHAUST	7-44	
LOWER UNIT - MECHANICAL SHIFT, W/SPLIT GEARCASE (EARLY 40 HP)	7-36	
LOWER UNIT - NON-SHIFTING	7-11	
LOWER UNIT - SHIFT W/NO DISCONNECT	7-15	
LUBRICATION SYSTEM	5-2	
POWER TRIM/TILT	8-2	
REMOTE CONTROLS - EARLY MODEL	9-2	
REMOTE CONTROLS - LATE MODEL	9-20	
REMOTE CONTROLS - ELECTRIC GEAR BOXES (EVINRUDE)	9-10	
REMOTE CONTROLS - SINGLE LEVER REMOTE CONTROL		
SHIFT BOX	9-13	
STARTING SYSTEM	4-55	
VRO SYSTEM	5-2	
DIODE	4-53	
REPLACEMENT	4-53	
DIRECTIONS & LOCATIONS	1-2	
DOUBLE-LEVER SHIFT BOX	9-3	
ASSEMBLY & INSTALLATION	9-5	
CLEANING & INSPECTION	9-5	
REMOVAL & DISASSEMBLY	9-4	
TROUBLESHOOTING	9-3	
DUAL HANDLE SURFACE MOUNT REMOTE (SINGLE MOTORS)	9-25	
OVERHAUL	9-25	
ELECTRIC FUEL PRIMER	3-40	
DISASSEMBLY & ASSEMBLY	3-43	
REMOVAL & INSTALLATION	3-42	
TESTING	3-40	
ELECTRIC GEAR BOXES (EVINRUDE)	9-10	
DESCRIPTION & OPERATION	9-10	
SHIFT SWITCH REMOVAL & INSTALLATION	9-12	
SHIFTER ADJUSTMENT	9-13	
THROTTLE CABLE REMOVAL & INSTALLATION	9-12	
TROUBLESHOOTING	9-10	
ELECTRIC GEAR BOXES & SINGLE LEVER CONTROLS (JOHNSON)	9-6	
REMOTE CONTROL CABLE - INSTALLATION	9-10	
SHIFT BOX DISASSEMBLY & ASSEMBLY	9-8	
STARTER LOCKOUT SWITCH ADJUSTMENT	9-10	
TROUBLESHOOTING	9-6	
ELECTRIC STARTER MOTOR PINION	2-5	
LUBRICATION	2-5	
RECOMMENDED LUBRICANT	2-5	
ELECTRICAL ACCESSORIES (GAUGES, LIGHTS, HORNS AND SWITCHES)	4-67	
CHOKE CIRCUIT	4-70	
FUEL GAUGE	4-68	
GENERAL INFORMATION	4-67	
HORNS	4-69	
TACHOMETER	4-69	
TEMPERATURE GAUGE AND/OR WARNING LIGHT	4-67	
ELECTRICAL COMPONENTS	4-2	
GROUND	4-3	
LOAD	4-4	
POWER SOURCE	4-2	
PROTECTIVE DEVICES	4-3	
SWITCHES & RELAYS	4-4	
WIRING & HARNESSSES	4-4	
ELECTRONIC TOOLS	1-23	
BATTERY CHARGERS	1-23	
BATTERY TESTERS	1-23	
GAUGES	1-24	
MULTI-METERS (DVOMS)	1-23	
ENGINE COVER LATCHES	2-5	
LUBRICATION	2-5	
RECOMMENDED LUBRICANT	2-5	
ENGINE COVERS	2-8	
REMOVAL & INSTALLATION	2-8	
ENGINE IDENTIFICATION	2-2	
ENGINE SERIAL NUMBERS	2-2	
ENGINE MAINTENANCE	2-8	
ANODES (ZINCS)	2-17	
COOLING SYSTEM	2-9	
ENGINE COVERS	2-8	
FUEL FILTER	2-14	
LOWER UNIT (GEARCASE) OIL	2-11	
PROPELLER	2-17	
2-STROKE ENGINE OIL	2-10	
EXHAUST COVER	6-8	
CLEANING	6-10	
REMOVAL & INSTALLATION	6-8	
EXPLODED VIEWS (POWERHEAD)	6-31	
1-CYLINDER	6-31	
4 HP (1971-77)	6-31	
2.5 & 4 HP (1978 & LATER)	6-32	
4.5 HP (1980-85) & 7.5 HP (1980-83)	6-32	
6 HP (1971 & LATER) & 8 HP (1984 & LATER)	6-33	
9.5 HP (1971-73)	6-33	
9.9/15 HP (1974 & LATER) - CRANKSHAFT & PISTON	6-34	
9.9/15 HP (1974 & LATER) - CYLINDER HEAD & CRANKCASE	6-34	
20 HP (1971-73, 1981 & LATER) - CRANKSHAFT & PISTON	6-35	
25 HP (1971 & LATER) & 35 HP (1976-84)	6-35	
40 HP (1971-76, 1981-82)	6-36	
40 HP (1983 & LATER), 48, 50 (1971 & LATER), 55 (1976-83) AND 60 HP (1980-85)	6-36	
FASTENERS, MEASUREMENTS & CONVERSIONS	1-26	
BOLTS, NUTS & OTHER THREADED RETAINERS	1-26	

STANDARD & METRIC MEASUREMENTS	1-26	CHECKING THE COMMUTATOR BAR	4-49
TORQUE	1-26	CLEANING & INSPECTION	4-48
FIBERGLASS HULL	2-21	REMOVAL & DISASSEMBLY	4-47
INSPECTION & CARE	2-21	TESTING THE ARMATURE	4-49
FIRE EXTINGUISHERS	1-6	TESTING THE FIELD HOUSING	4-49
CARE AND TREATMENT	1-6	GENERATOR CHARGING CIRCUIT	4-45
CONTENTS OF EXTINGUISHERS	1-6	DESCRIPTION & OPERATION	4-45
FIRE EXTINGUISHER APPROVAL	1-6	GENERAL INFORMATION	4-45
LEGAL REQUIREMENTS FOR EXTINGUISHERS	1-6	GENERATOR	4-47
USING A FIRE EXTINGUISHER	1-6	TROUBLESHOOTING	4-46
FIRST AID KIT	1-10	VOLTAGE REGULATOR	4-47
FLYWHEEL		HAND REWIND STARTER	10-2
CD IGNITION SYSTEM (W/SENSOR COIL)	4-42	EMERGENCY STARTING	10-2
FLYWHEEL MAGNETO IGNITION	4-13	GENERAL INFORMATION	10-2
LOW TENSION FLYWHEEL MAGNETO IGNITION	4-23	DESIGN 1	10-2
FLYWHEEL MAGNETO IGNITION SYSTEMS	4-11	DESIGN 2	10-2
ARMATURE PLATE	4-17	DESIGN 3	10-2
BREAKER POINTS/CONDENSER	5-15	OPERATION	10-2
COIL	4-19	HAND TOOLS	1-19
DESCRIPTION & OPERATION	4-11	BREAKER BARS	1-20
FLYWHEEL	4-13	HAMMERS	1-22
IDENTIFICATION	4-11	PLIERS	1-21
TOP SEAL	4-18	SCREWDRIVERS	1-21
TROUBLESHOOTING	4-11	SOCKET SETS	1-19
WICK	4-21	TORQUE WRENCHES	1-20
FUEL FILTER	2-14	WRENCHES	1-21
SERVICING	2-15	HORNS	4-69
FUEL GAUGE	4-68	HOW TO USE THIS MANUAL	1-2
HOOKUP	4-68	AVOIDING THE MOST COMMON MISTAKES	1-3
TROUBLESHOOTING	4-68	AVOIDING TROUBLE	1-2
FUEL LINES & FITTINGS	3-11	CAN YOU DO IT?	1-2
SERVICE	3-12	DIRECTIONS & LOCATIONS	1-2
TESTING	3-11	MAINTENANCE OR REPAIR?	1-2
FUEL PRIMER		PROFESSIONAL HELP	1-3
ELECTRIC	3-40	PURCHASING PARTS	1-3
MANUAL	3-39	WHERE TO BEGIN	1-2
FUEL PUMP	3-36	IGNITION & ELECTRICAL SYSTEM MAINTENANCE	2-30
OVERHAUL	3-38	INSPECTION	2-30
REMOVAL & INSTALLATION	3-37	IGNITION SYSTEMS	4-8
TESTING	3-36	CAPACITOR DISCHARGE (CD) - W/SENSOR COIL	4-34
FUEL SYSTEM MAINTENANCE	2-30	CAPACITOR DISCHARGE (CD) - W/TIMER BASE	4-28
CARBURETOR ADJUSTMENTS	2-30	COIL POLARITY CHECK	4-9
FUEL & FUEL TANKS	2-32	FLYWHEEL MAGNETO	4-11
FUEL PUMPS	2-32	IGNITION WIRING HARNESS	4-9
FUEL SYSTEM PRESSURIZATION	3-4	INTRODUCTION & IDENTIFICATION	4-8
PRESSURIZING THE FUEL SYSTEM - CHECKING FOR LEAKS	3-4	LOW TENSION FLYWHEEL MAGNETO	4-21
FUEL SYSTEM SERVICE CAUTIONS	3-4	SPARK PLUG EVALUATION	4-8
FUEL SYSTEM TROUBLESHOOTING	3-5	TROUBLESHOOTING	4-10
CHOKE PROBLEMS	3-6	LINKAGE, CABLES AND SHAFTS (SHIFT, CARBURETOR AND/OR	
ENGINE SURGE	3-8	THROTTLE SHAFT)	2-6
EXCESSIVE FUEL CONSUMPTION	3-8	LUBRICATION	2-6
FUEL LINE TESTING	3-7	RECOMMENDED LUBRICANT	2-6
FUEL PROBLEMS	3-5	LOW TENSION FLYWHEEL MAGNETO IGNITION SYSTEMS	4-21
FUEL PUMP TESTING	3-7	ARMATURE PLATE	4-26
ROUGH ENGINE IDLE	3-8	BREAKER POINTS/CONDENSER/DRIVER COIL	4-24
TROUBLESHOOTING	3-8	DESCRIPTION & OPERATION	4-21
FUEL TANK	3-9	FLYWHEEL	4-23
SERVICE	3-10	IDENTIFICATION	4-21
FUEL TANK & LINES	3-9	TOP SEAL	4-27
FUEL LINES & FITTINGS	3-11	TROUBLESHOOTING	4-22
FUEL TANK	3-9	LOWER UNIT	
GENERAL INFORMATION	3-9	ELECTRIC SHIFT, 2 SOLENOIDS	7-67
GENERAL INFORMATION (WHAT EVERYONE SHOULD		GEARCASE BASICS	7-2
KNOW ABOUT MAINTENANCE)	2-2	MECHANICAL SHIFT, HYDRAULIC ASSIST	7-81
BEFORE/AFTER EACH USE	2-3	MECHANICAL SHIFT, HYDRAULIC ASSIST	7-81
ENGINE IDENTIFICATION	2-2	MECHANICAL SHIFT, PROPELLER EXHAUST	7-54
MAINTENANCE COVERAGE IN THIS MANUAL	2-2	MECHANICAL SHIFT, SLIDING CLUTCH DOG	7-94
MAINTENANCE EQUALS SAFETY	2-2	MECHANICAL SHIFT, SOLID GEARCASE, PROPELLER EXHAUST	7-44
OUTBOARDS ON SAIL BOATS	2-2	MECHANICAL SHIFT, W/SPLIT GEARCASE (6 HP & 9.5-25 HP)	7-27
GEARCASE OIL	7-8	MECHANICAL SHIFT, W/SPLIT GEARCASE (EARLY 40 HP)	7-36
CHECKING OIL LEVEL & CONDITION	7-8	NON-SHIFTING	7-11
DRAINING & FILLING	7-10	SHIFT W/NO-DISCONNECT	7-15
OIL RECOMMENDATIONS	7-8	LOWER UNIT (GEARCASE) OIL	
GENERATOR	4-47	CHECKING OIL LEVEL & CONDITION	2-12, 7-8
ASSEMBLY & INSTALLATION	4-50	DRAINING & FILLING	2-13, 7-10

10-38 MASTER INDEX

GENERAL INFORMATION	2-11	TROUBLESHOOTING	7-36
OIL RECOMMENDATIONS	2-12, 7-8	WATER PUMP	7-42
LOWER UNIT - GEARCASE BASICS	7-2	REMOVAL & INSTALLATION	7-42
GENERAL INFORMATION	7-2	LOWER UNIT - NON-SHIFTING	7-11
LOWER UNIT (GEARCASE) OIL	7-8	DESCRIPTION & OPERATION	7-11
MAINTENANCE & SERVICE	7-2	LOWER UNIT	7-11
PROPELLER	7-3	CLEANING & INSPECTION	7-14
LOWER UNIT - ELECTRIC SHIFT, 2 SOLENOIDS	7-67	DISASSEMBLY & ASSEMBLY	7-12
DESCRIPTION & OPERATION	7-67	REMOVAL & INSTALLATION	7-11
LOWER UNIT	7-69	TROUBLESHOOTING	7-11
ASSEMBLY	7-76	WATER PUMP	7-14
CLEANING & INSPECTION	7-76	REMOVAL & INSTALLATION	7-14
DISASSEMBLY	7-72	LOWER UNIT - SHIFT W/NO DISCONNECT	7-15
REMOVAL & INSTALLATION	7-69	DESCRIPTION & OPERATION	7-15
TROUBLESHOOTING	7-68	LOWER UNIT	7-15
WATER PUMP	7-70	ASSEMBLY	7-20
REMOVAL & INSTALLATION	7-70	CLEANING & INSPECTION	7-20
LOWER UNIT - MECHANICAL SHIFT, HYDRAULIC ASSIST	7-81	DISASSEMBLY	7-17
DESCRIPTION & OPERATION	7-81	REMOVAL & INSTALLATION	7-15
LOWER UNIT	7-83	TROUBLESHOOTING	7-15
ASSEMBLY	7-88	WATER PUMP	7-24
CLEANING & INSPECTION	7-87	REMOVAL & INSTALLATION	7-24
DISASSEMBLY	7-84	LUBRICATION SERVICE	2-4
REMOVAL & INSTALLATION	7-83	ELECTRIC STARTER MOTOR PINION	2-5
TROUBLESHOOTING	7-81	ENGINE COVER LATCHES	2-5
WATER PUMP	7-93	GENERAL INFORMATION	2-4
REMOVAL & INSTALLATION	7-93	LINKAGE, CABLES AND SHAFTS	
LOWER UNIT - MECHANICAL SHIFT, PROPELLER EXHAUST	7-54	(SHIFT, CARBURETOR AND/OR THROTTLE SHAFT)	2-6
DESCRIPTION & OPERATION	7-54	POWER TRIM/TILT RESERVOIR	2-5
LOWER UNIT	7-55	STEERING ARM (CABLE RAM/TILLER ARM)	2-6
ASSEMBLY	7-61	SWIVEL BRACKET AND TILT SUPPORT	2-7
CLEANING & INSPECTION	7-60	TILT TUBE ASSEMBLY	2-8
DISASSEMBLY	7-57	LUBRICATION SYSTEMS	5-2
REMOVAL & INSTALLATION	7-55	DESCRIPTION & OPERATION	5-2
TROUBLESHOOTING	7-54	MAIN BEARING BOLTS	6-12
WATER PUMP	7-66	REMOVAL & INSTALLATION	6-12
REMOVAL & INSTALLATION	7-66	MAINTENANCE COVERAGE IN THIS MANUAL	2-2
LOWER UNIT - MECHANICAL SHIFT, SLIDING CLUTCH DOG	7-94	MAINTENANCE EQUALS SAFETY	2-2
DESCRIPTION & OPERATION	7-94	MAINTENANCE OR REPAIR?	1-2
LOWER UNIT	7-96	MANUAL FUEL PRIMER	3-39
ASSEMBLY	7-100	ASSEMBLY & INSTALLATION	3-40
CLEANING & INSPECTION	7-100	CLEANING & INSPECTION	3-40
DISASSEMBLY	7-96	GENERAL INFORMATION	3-39
REMOVAL & INSTALLATION	7-96	REMOVAL & DISASSEMBLY	3-39
TROUBLESHOOTING	7-94	TESTING	3-39
WATER PUMP	7-103	MEASURING TOOLS	1-24
REMOVAL & INSTALLATION	7-103	CALIPERS	1-24
LOWER UNIT - MECHANICAL SHIFT, SOLID GEARCASE, PROPELLER EXHAUST	7-44	DEPTH GAUGES	1-26
DESCRIPTION & OPERATION	7-44	DIAL INDICATORS	1-25
LOWER UNIT	7-46	MICROMETERS	1-24
CLEANING & INSPECTION	7-49	TELESCOPING GAUGES	1-26
ASSEMBLY	7-50	OAR/PADDLE	1-10
DISASSEMBLY	7-46	OIL RESERVOIR CANISTER	5-6
REMOVAL & INSTALLATION	7-46	SERVICE	5-6
TROUBLESHOOTING	7-44	OTHER COMMON TOOLS	1-22
WATER PUMP	7-53	OUTBOARDS ON SAIL BOATS	2-2
REMOVAL & INSTALLATION	7-53	PERSONAL FLOTATION DEVICES	1-7
LOWER UNIT - MECHANICAL SHIFT, W/SPLIT GEARCASE (6 HP & 9.5-25 HP)	7-26	CARE OF LIFE JACKETS	1-8
LOWER UNIT	7-29	GENERAL CONSIDERATIONS	1-8
CLEANING & INSPECTION	7-34	LEGAL REQUIREMENTS	1-8
DISASSEMBLY & ASSEMBLY	7-31	TYPE I PFDS	1-7
REMOVAL & INSTALLATION	7-29	TYPE II PFDS	1-7
SHIFT ROD DISCONNECT	7-27	TYPE III PFDS	1-7
TROUBLESHOOTING	7-27	TYPE IV PFDS	1-7
WATER PUMP	7-35	TYPE V PFDS	1-7
REMOVAL & INSTALLATION	7-35	PISTONS & RINGS	6-14
LOWER UNIT - MECHANICAL SHIFT, W/SPLIT GEARCASE (EARLY 40 HP)	7-36	CLEANING, INSPECTION & SERVICE	6-21
DESCRIPTION & OPERATION	7-36	DISASSEMBLY & ASSEMBLY	6-18
LOWER UNIT	7-36	REMOVAL & INSTALLATION	6-14
CLEANING & INSPECTION	7-41	POWER PACK	
DISASSEMBLY & ASSEMBLY	7-38	CD IGNITION SYSTEM (W/SENSOR COIL)	4-44
REMOVAL & INSTALLATION	7-36	CD IGNITION SYSTEM (W/TIMER BASE)	4-33
		POWER TRIM/TILT RESERVOIR	
		FLUID LEVEL/CONDITION	2-6, 8-2
		RECOMMENDED LUBRICANT	2-5, 8-2

POWERHEAD	6-2	DOUBLE-LEVER SHIFT BOX.....	9-3
INTRODUCTION.....	6-2	ELECTRIC GEAR BOXES & SINGLE LEVER CONTROLS (JOHNSON).....	9-6
REBUILDING TIPS.....	6-4	ELECTRIC GEAR BOXES (EVINRUDE).....	9-10
THEORY OF OPERATION.....	6-2	GENERAL INFORMATION.....	9-2
POWERHEAD BREAK-IN	6-30	SHIFT/THROTTLE CABLES.....	9-18
POWERHEAD OVERHAUL	6-4	SINGLE LEVER REMOTE CONTROL SHIFT BOX.....	9-13
BOTTOM SEAL.....	6-11	REMOTE CONTROLS - LATE-MODEL MECHANICAL SHIFT	9-20
BYPASS COVER.....	6-8	CONCEALED SIDE MOUNT REMOTE UNITS.....	9-26
CENTERING PIN.....	6-12	DESCRIPTION & OPERATION.....	9-20
CONNECTING RODS.....	6-14	DUAL HANDLE SURFACE MOUNT REMOTE UNITS	
CRANKCASE COVER.....	6-13	FOR SINGLE MOTORS.....	9-25
CRANKCASE SIDE BOLTS.....	6-12	INTRODUCTION.....	9-20
CRANKSHAFT & BEARING.....	6-23	PRE-WIRED BINNACLE MOUNT REMOTE UNITS.....	9-28
CYLINDER BLOCK.....	6-28	SMALL MOTOR STANDARD SURFACE REMOTE UNITS.....	9-24
CYLINDER HEAD.....	6-5	STANDARD SURFACE MOUNT REMOTE UNITS.....	9-21
EXHAUST COVER.....	6-8	REQUIRED SAFETY EQUIPMENT	1-5
MAIN BEARING BOLTS.....	6-12	FIRE EXTINGUISHERS.....	1-6
PISTONS.....	6-14	MINIMUM REQUIREMENTS.....	1-5
PRELIMINARY WORK.....	6-4	PERSONAL FLOTATION DEVICES.....	1-7
REED VALVES.....	6-6	SCOUND PRODUCING DEVICES.....	1-8
RINGS.....	6-14	TYPES OF FIRES.....	1-5
TOP SEAL.....	6-10	VISUAL DISTRESS SIGNALS.....	1-8
POWERHEAD REBUILDING - PRELIMINARY WORK	6-4	WARNING SYSTEM.....	1-7
PRE-WIRED BINNACLE MOUNT REMOTE UNITS	9-28	SAFETY IN SERVICE	1-12
OVERHAUL.....	9-28	DONT'S.....	1-12
PRESSURE RELIEF VALVE	5-10	DO'S.....	1-12
REMOVAL & INSTALLATION.....	5-10	SAFETY TOOLS	1-16
TESTING.....	5-10	EYE & EAR PROTECTION.....	1-16
PROFESSIONAL HELP	1-3	WORK CLOTHES.....	1-17
PROPELLER		WORK GLOVES.....	1-16
CLEARING THE FISH LINE TRAP.....	7-4	SHIFT CABLES	9-18
FROZEN PROPELLER.....	7-7	FITTING CABLES TO THE MOTOR	
INSPECTION.....	2-17, 7-4	(ALL EXC. SINGLE LEVER REMOTE).....	9-18
REMOVAL & INSTALLATION.....	2-17, 7-4	INSTALLING THE SHIFT CABLE END.....	9-18
CASTELLATED NUT RETAINED PROPS.....	7-5	INSTALLING THE THROTTLE CABLE END.....	9-19
KEEPER RETAINED PROPS.....	7-5	SHOP EQUIPMENT	1-16
SHEAR PIN PROPS.....	7-4	SAFETY TOOLS.....	1-16
PURCHASING PARTS	1-3	CHEMICALS.....	1-17
RE-COMMISSIONING	2-39	SINGLE LEVER REMOTE CONTROL SHIFT BOX	9-13
REMOVAL FROM STORAGE.....	2-39	DESCRIPTION & OPERATION.....	9-13
REBUILDING TIPS	6-4	SHIFT BOX DISASSEMBLY & ASSEMBLY.....	9-17
REED VALVES	6-6	SHIFT/THROTTLE CABLE REMOVAL & INSTALLATION.....	9-14
ACTUAL OPERATION.....	6-6	TROUBLESHOOTING.....	9-14
ADJUSTMENT.....	6-7	SMALL MOTOR STANDARD SURFACE REMOTE UNITS	9-24
BROKEN REED.....	6-6	OVERHAUL.....	9-24
CLEANING & SERVICING.....	6-7	SPARK PLUG WIRES	2-28
DESCRIPTION & OPERATION.....	6-6	REMOVAL & INSTALLATION.....	2-29
REED BOX INSTALLATION.....	6-8	TESTING.....	2-28
REED DESIGNS.....	6-6	SPARK PLUGS	2-25
REED STOPS.....	6-6	HEAT RANGE.....	2-25
REED-TO-REED BOX CHECK.....	6-7	INSPECTION & GAPPING.....	2-27
V-TYPE REED BOXES.....	6-6	READING PLUGS.....	2-27
REGULATIONS FOR YOUR BOAT	1-4	REMOVAL & INSTALLATION.....	2-26
CAPACITY INFORMATION.....	1-4	SPECIAL TOOLS	1-23
CERTIFICATE OF COMPLIANCE.....	1-5	SPECIFICATIONS	2-41
DOCUMENTING OF VESSELS.....	1-4	CONDENSER.....	4-71
HULL IDENTIFICATION NUMBER.....	1-4	CONVERSION FACTORS.....	1-27
LENGTH OF BOATS.....	1-4	GENERATOR.....	4-70
NUMBERING OF VESSELS.....	1-4	GEARCASE OIL CAPACITIES.....	2-48
REGISTRATION OF BOATS.....	1-4	GENERAL ENGINE & TUNE-UP.....	2-41
SALES & TRANSFERS.....	1-4	GENERAL ENGINE & TUNE-UP NOTES.....	2-48
VENTILATION.....	1-5	GENERATOR.....	4-70
VENTILATION SYSTEMS.....	1-5	LUBRICATION CHART.....	2-50
REMOTE CONTROLS		MAINTENANCE INTERVALS.....	2-50
CONCEALED SIDE MOUNT REMOTE UNITS.....	9-26	OIL/FUEL MIXTURE RATIOS.....	2-49
DOUBLE-LEVER SHIFT BOX.....	9-3	POWERHEAD REBUILDING.....	6-37
DUAL HANDLE SURFACE MOUNT REMOTE (SINGLE MOTORS).....	9-25	REGULATOR.....	4-70
ELECTRIC GEAR BOXES (EVINRUDE).....	9-10	SPARK PLUG DIAGNOSIS.....	2-49
ELECTRIC GEAR BOXES & SINGLE LEVER CONTROLS (JOHNSON).....	9-6	STARTER MOTOR.....	4-70
PRE-WIRED BINNACLE MOUNT REMOTE UNITS.....	9-28	STARTER ROPE.....	10-34
SINGLE LEVER REMOTE CONTROL SHIFT BOX.....	9-13	TORQUE.....	4-71
SMALL MOTOR STANDARD SURFACE REMOTE UNITS.....	9-24	TORQUE.....	6-38
STANDARD SURFACE MOUNT REMOTE UNITS.....	9-21	TORQUE SPECIFICATIONS & TYPICAL TORQUE VALUES.....	1-28
REMOTE CONTROLS - HYDRO-ELECTRIC/MECHANICAL SHIFT	9-2	STANDARD SURFACE MOUNT REMOTE UNITS	9-21
DESCRIPTION & OPERATION.....	9-2	OVERHAUL.....	9-21

10-40 MASTER INDEX

STARTER (TYPE I) - CYLINDER W/ PINION GEAR (5-8 HP)	10-3	TACHOMETER	4-69
STARTER	10-4	TEMPERATURE GAUGE AND/OR WARNING LIGHT	4-67
ASSEMBLY & INSTALLATION	10-6	CHECKING	4-67
CLEANING & INSPECTION	10-6	THERMOMELT STICKS	4-68
REMOVAL & DISASSEMBLY	10-4	WARNING LIGHTS	4-67
STARTER ROPE	10-3	TEST EQUIPMENT	4-4
REPLACEMENT	10-3	JUMPER WIRES	4-4
STARTER (TYPE II) - CYLINDER W/ PINION GEAR	10-9	MULTI-METERS	4-5
STARTER	10-10	TEST LIGHTS	4-5
ASSEMBLY & INSTALLATION	10-12	TROUBLESHOOTING	4-4
CLEANING & INSPECTION	10-11	THEORY OF OPERATION	6-2
REMOVAL & DISASSEMBLY	10-10	ACTUAL OPERATION	6-4
STARTER ROPE	10-9	CROSS FUEL FLOW PRINCIPLE	6-4
REPLACEMENT	10-9	INTAKE/EXHAUST	6-3
STARTER (TYPE III) - COIL SPRING W/ SWING ARM	10-13	LOOP SCAVENGING	6-4
VERTICAL MOUNT	10-13	LUBRICATION	6-3
STARTER	10-13	POWER STROKE	6-3
ADJUSTMENT	10-16	PHYSICAL LAWS	6-3
ASSEMBLY & INSTALLATION	10-14	SUMMARY	6-4
CLEANING & INSPECTION	10-13	TIMING	6-4
REMOVAL & DISASSEMBLY	10-13	THERMOSTAT	5-10
STARTER (TYPE IV) - COIL SPRING W/ SLIDING	10-17	REMOVAL & INSTALLATION	5-10
GEAR ARM HORIZONTAL MOUNT	10-17	TESTING	5-10
STARTER	10-17	THROTTLE CABLES	9-18
ADJUSTMENT	10-18	FITTING CABLES TO THE MOTOR	
DISASSEMBLY & ASSEMBLY	10-18	(ALL EXC. SINGLE LEVER REMOTE)	9-18
REMOVAL & INSTALLATION	10-17	INSTALLING THE SHIFT CABLE END	9-18
STARTER ROPE	10-21	INSTALLING THE THROTTLE CABLE END	9-19
REPLACEMENT	10-21	TILT TUBE ASSEMBLY	2-8
STARTER (TYPE V) - MOUNTED ATOP FLYWHEEL	10-23	LUBRICATION	2-8
W/NO RETURN SPRINGS	10-23	RECOMMENDED LUBRICANT	2-8
STARTER	10-23	TIMER BASE & SENSOR ASSEMBLY - TYPE I	4-32
ASSEMBLY & INSTALLATION	10-25	REPLACEMENT	4-32
CLEANING & INSPECTION	10-24	TIMING & SYNCHRONIZATION	2-33
REMOVAL & DISASSEMBLY	10-23	GENERAL INFORMATION	2-33
ROPE INSTALLATION	10-26	SYNCHRONIZATION	2-33
STARTER (TYPE VI) - MOUNTED ATOP FLYWHEEL	10-28	TIMING	2-33
WITH 1 OR 2 NYLON PAWLS	10-28	TOOLS	1-18
HAND STARTER TIMING	10-28	ELECTRONIC TOOLS	1-23
STARTER	10-28	HAND TOOLS	1-19
ASSEMBLY & INSTALLATION	10-30	MEASURING TOOLS	1-24
CLEANING & INSPECTION	10-30	OTHER COMMON TOOLS	1-22
REMOVAL & DISASSEMBLY	10-28	SPECIAL TOOLS	1-23
STARTER (TYPE VII) - MOUNTED ATOP FLYWHEEL	10-32	TOOLS & SPARE PARTS	1-12
W/LARGE PAWL PLATE	10-32	TOP SEAL	
STARTER	10-32	FLYWHEEL MAGNETO IGNITION	4-18
CLEANING & INSPECTION	10-33	LOW TENSION FLYWHEEL MAGNETO IGNITION	4-27
ASSEMBLY & INSTALLATION	10-33	TOP SEAL	6-10
REMOVAL & DISASSEMBLY	10-32	REMOVAL & INSTALLATION	6-10
STARTER MOTOR	4-57	TRIM/TILT ASSEMBLY	8-3
ARMATURE TESTING	4-64	REMOVAL & INSTALLATION	8-3
CLEANING & INSPECTION	4-66	TRIM/TILT MOTOR	8-4
DISASSEMBLY & ASSEMBLY	4-60	ASSEMBLY	8-6
DRIVE GEAR REPLACEMENT	4-58	CLEANING & INSPECTION	8-4
REMOVAL & INSTALLATION	4-57	BRUSH REPLACEMENT	8-4
TESTING	4-58	CHECKING END HEAD BUSHINGS	8-5
STARTING SYSTEM	4-55	CHECKING FIELD COILS	8-5
DESCRIPTION & OPERATION	4-55	CHECKING FOR A GROUNDED ARMATURE	8-5
STARTER MOTOR	4-57	CHECKING FOR A SHORTED ARMATURE	8-5
TROUBLESHOOTING	4-56	DISASSEMBLY	8-4
STATOR	4-53	TESTING	8-4
REPLACEMENT	4-53	TRIM/TILT SYSTEMS	8-2
STATOR & CHARGE COIL - TYPE I	4-32	DESCRIPTION & OPERATION	8-2
REPLACEMENT	4-32	POWER TRIM/TILT RESERVOIR	8-2
STEERING ARM (CABLE RAM/TILLER ARM)	2-6	TRIM/TILT ASSEMBLY	8-3
LUBRICATION	2-7	TRIM/TILT MOTOR	8-4
RECOMMENDED LUBRICANT	2-6	TROUBLESHOOTING	8-3
STORAGE (WHAT TO DO BEFORE AND AFTER)	2-37	TROUBLESHOOTING	
RE-COMMISSIONING	2-39	ACCUMIX (AUTOBLEND) OILING SYSTEM	5-6
WINTERIZATION	2-37	ALTERNATOR	4-51
SWIVEL BRACKET & TILT SUPPORT	2-7	BASIC OPERATING PRINCIPLES	1-13
LUBRICATION	2-7	CARBURETOR	3-5
RECOMMENDED LUBRICANT	2-7	CD IGNITION SYSTEM (W/SENSOR COIL)	4-36
SYNCHRONIZATION (ALL MOTORS)	2-33	CD IGNITION SYSTEM (W/TIMER BASE)	4-29
PRIMARY PICK-UP ADJUSTMENTS & LOCATIONS	2-33	COOLING SYSTEM	5-8

ELECTRICAL SYSTEMS.....	4-6	VARIABLE RATIO OILING (VRO) SYSTEM	5-2
FLYWHEEL MAGNETO IGNITION	4-11	BREAK-IN AND THE VRO SYSTEM	5-2
FUEL GAUGE	4-68	CHECKING & SERVICING	5-2
FUEL SYSTEM	3-5	DESCRIPTION	5-2
GENERATOR	4-46	TROUBLESHOOTING.....	5-2
IGNITION SYSTEM.....	4-10	VHF-FM RADIO.....	1-10
LOW TENSION FLYWHEEL MAGNETO IGNITION.....	4-21	VOLTAGE REGULATOR	
LOWER UNIT - ELECTRIC SHIFT, 2 SOLENOIDS	7-68	GENERATOR	4-47
LOWER UNIT - MECHANICAL SHIFT, HYDRAULIC ASSIST	7-81	VRO SERVICE.....	5-2
LOWER UNIT - MECHANICAL SHIFT, PROPELLER EXHAUST.....	7-54	CHECKING FUEL & OIL CIRCUITS	5-3
LOWER UNIT - MECHANICAL SHIFT, SLIDING CLUTCH DOG.....	7-94	CLEANING THE VACUUM PULSE HOSE	5-3
LOWER UNIT - MECHANICAL SHIFT, SLIDING CLUTCH DOG.....	7-94	ENGINE MOUNTED FUEL FILTER	5-4
LOWER UNIT - MECHANICAL SHIFT, SOLID GEARCASE, PROPELLER EXHAUST.....	7-44	FUEL LINE VACUUM TEST	5-5
LOWER UNIT - MECHANICAL SHIFT, W/SPLIT GEARCASE (6 HP & 9.5-25 HP).....	7-27	VACUUM HOSE CHECK.....	5-4
LOWER UNIT - MECHANICAL SHIFT, W/SPLIT GEARCASE (EARLY 40 HP).....	7-36	VRO PUMP SERVICE.....	5-3
LOWER UNIT - NON-SHIFTING.....	7-11	WARNING HORN CHECK	5-3
LOWER UNIT - SHIFT W/NO DISCONNECT.....	7-15	WATER PUMP	5-11
REMOTE CONTROLS - SINGLE LEVER REMOTE CONTROL SHIFT BOX.....	9-14	REMOVAL	5-11
REED VALVES	6-6	INSPECTION & OVERHAUL	5-14
REMOTE CONTROLS - DOUBLE-LEVER SHIFT BOX.....	9-3	INSTALLATION	5-12
REMOTE CONTROLS - ELECTRIC GEAR BOXES (EVINRUDE)	9-10	ELECTRIC, HYDRAULIC & MECHANICAL SHIFT GEAR CASES (50 HP & LARGER MOTORS AND 1976 & LATER 40 HP)	5-13
REMOTE CONTROLS - ELECTRIC GEAR BOXES & SINGLE LEVER CONTROLS (JOHNSON).....	9-6	MANUAL SHIFT GEAR CASES (1971-79 6.0 HP, 1971-73 9.5-20 HP, 1971- 85 25 HP).....	5-12
STARTING SYSTEM.....	4-56	MANUAL SHIFT GEAR CASES (40 HP TO 1976)	5-13
TEST EQUIPMENT.....	4-4	NO SHIFT GEAR CASES	5-12
TRIM/TILT	8-3	PROPELLER EXHAUST MECHANICAL SHIFT GEAR CASES (1974 & LATER 9.9/15 HP)	5-13
VRO SYSTEM	5-2	PROPELLER EXHAUST MECHANICAL SHIFT GEAR CASES (1981 & LATER 20/30 HP, 1986 & LATER 25 HP & 1976-84 35 HP).....	5-13
TUNE-UP	2-22	SHIFT, NO DISCONNECT GEAR CASES.....	5-12
COMPRESSION CHECK	2-24	WICK	4-21
COOLING SYSTEM MAINTENANCE.....	2-32	REPLACEMENT	4-21
DE-CARBONING THE PISTONS	2-23	WINTERIZATION.....	2-37
FUEL SYSTEM MAINTENANCE.....	2-30	PREPPING FOR STORAGE.....	2-37
IGNITION & ELECTRICAL SYSTEM MAINTENANCE.....	2-30	STORAGE CHECKLIST (PREPARING THE BOAT AND MOTOR)	2-38
INTRODUCTION.....	2-22	WHERE TO STORE YOUR BOAT AND MOTOR	2-37
SPARK PLUG WIRES	2-28	WIRE & CONNECTOR REPAIR	4-8
SPARK PLUGS	2-25	WIRING DIAGRAMS.....	4-72
TUNE-UP SEQUENCE	2-22	INDEX	4-72
TUNE-UP SEQUENCE	2-22	ZINCS (ANODES)	2-17
UNDERSTANDING & TROUBLESHOOTING ELECTRICAL SYSTEMS ...	4-2	INSPECTION.....	2-18
BASIC ELECTRICAL THEORY.....	4-2	SERVICING.....	2-19
ELECTRICAL COMPONENTS	4-2	2-STROKE ENGINE OIL	2-10
ELECTRICAL TESTING	4-6	FILLING.....	2-10
PRECAUTIONS.....	4-8	FUEL:OIL RATIO.....	2-10
TEST EQUIPMENT	4-4	OIL INJECTION.....	2-11
TROUBLESHOOTING.....	4-6	OIL RECOMMENDATIONS.....	2-10
WIRE & CONNECTOR REPAIR.....	4-8	PRE-MIX	2-11