

# CONTENTS

---

## 1

### GENERAL INFORMATION, SAFETY AND TOOLS

HOW TO USE THIS MANUAL	1-2
BOATING SAFETY	1-4
BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
SAFETY IN SERVICE	1-12
TROUBLESHOOTING	1-13
SHOP EQUIPMENT	1-17
TOOLS	1-19
FASTENERS, MEASUREMENT, AND CONVERSIONS SPECIFICATIONS	1-27 1-28

---

## 2

### MAINTENANCE AND TUNE-UP

GENERAL INFORMATION	2-2
LUBRICATION	2-4
ENGINE MAINTENANCE	2-9
BOAT MAINTENANCE	2-29
TUNE-UP	2-32
TIMING & SYNCHRONIZATION	2-41
STORAGE	2-75
CLEARING A SUBMERGED MOTOR	2-78
SPECIFICATIONS	2-80

---

## 3

### FUEL SYSTEM

FUEL & COMBUSTION BASICS	3-2
FUEL TANK & LINES	3-7
CARBURETED FUEL SYSTEM	3-12
ELECTRONIC FUEL INJECTION (EFI)	3-43
OPTIMAX DIRECT FUEL INJECTION (DFI)	3-71
FUEL/OIL ROUTING DIAGRAMS (EFI)	3-106
AIR/FUEL ROUTING DIAGRAMS	3-107
SPECIFICATIONS	3-111

---

## 4

### IGNITION & ELECTRICAL SYSTEMS

UNDERSTANDING & TROUBLESHOOTING	
ELECTRICAL SYSTEMS	4-2
IGNITION SYSTEMS	4-8
CHARGING CIRCUIT	4-37
SPECIFICATIONS	
STARTER CIRCUIT	4-48
ELECTRICAL SWITCH/SOLENOID SERVICE	4-58
WIRING DIAGRAMS	4-61

---

## 5

### COOLING & LUBRICATION

OIL INJECTION SYSTEM	5-2
COOLING SYSTEM	5-11
WARNING SYSTEMS	5-31
COOLING SYSTEM FLOW SCHEMATICS	5-41
SPECIFICATIONS	5-44

# CONTENTS

POWERHEAD MECHANICAL 6-2  
POWERHEAD RECONDITIONING 6-57  
POWERHEAD BREAK-IN 6-69  
SPECIFICATION CHARTS 6-70

## POWERHEAD

# 6

LOWER UNIT 7-2  
JET DRIVE 7-88

## LOWER UNIT

# 7

MECHANICAL TILT (UNASSISTED) 8-2  
GAS ASSIST TILT SYSTEM 8-6  
POWER TILT/TRIM - SMALL MOTOR SINGLE RAM INTEGRAL 8-10  
POWER TILT/TRIM - MID-RANGE MOTOR SINGLE RAM INTEGRAL 8-14  
POWER TILT/TRIM SYSTEM - 3 RAM INTEGRAL 8-23

## TRIM AND TILT

# 8

REMOTE CONTROLS - MECHANICAL UNITS 9-2  
REMOTE CONTROLS - DIGITAL THROTTLE & SHIFT (DTS) UNITS 9-11  
TILLER HANDLE 9-16  
REMOTE CONTROL WIRING 9-22

## REMOTE CONTROL

# 9

HAND REWIND STARTER 10-2

## HAND REWIND STARTER

# 10

MASTER INDEX 10-15

## MASTER INDEX

<p>ADDITIONAL REMOTE UNITS - MECHANICAL ..... 9-6  EXPLODED VIEWS ..... 9-6</p> <p>AIR COMPRESSOR - DFI ..... 3-75  AIR/FUEL PRESSURE TESTING ..... 3-75  DESCRIPTION &amp; OPERATION ..... 3-75  OVERHAUL ..... 3-80  REMOVAL &amp; INSTALLATION ..... 3-78</p> <p>AIR FILTER (OPTIMAX AIR COMPRESSOR) ..... 2-27  REMOVAL &amp; INSTALLATION ..... 2-27</p> <p>AIR PRESSURE REGULATOR - DFI ..... 3-81  DESCRIPTION &amp; OPERATION ..... 3-81  REMOVAL &amp; INSTALLATION ..... 3-82  TESTING ..... 3-81</p> <p>AIR TEMPERATURE SENSOR (ATS) - EFI ..... 3-56  DESCRIPTION &amp; OPERATION ..... 3-56  REMOVAL &amp; INSTALLATION ..... 3-56  TESTING ..... 3-56</p> <p><b>AIR/FUEL ROUTING DIAGRAMS ..... 3-107</b>  1.5L OPTIMAX ..... 3-107  2.5L OPTIMAX ..... 3-108  3.0L OPTIMAX (THRU 2002) ..... 3-109  3.0L OPTIMAX (2003 &amp; LATER) ..... 3-110</p> <p>ALTERNATOR (EXTERNAL) ..... 4-42  DESCRIPTION &amp; OPERATION ..... 4-42  REMOVAL &amp; INSTALLATION ..... 4-44  TESTING ..... 4-43</p> <p>ANODES ..... 2-24  INSPECTION ..... 2-25  SERVICING ..... 2-25</p> <p>BASIC ELECTRICAL THEORY ..... 4-2  HOW DOES ELECTRICITY WORK ..... 4-2  OHM'S LAW ..... 4-2</p> <p>BATTERY  CHARGERS ..... 4-42  CHARGING PRECAUTIONS ..... 4-41  CONSTRUCTION ..... 4-41  LOCATION ..... 4-41  MAINTENANCE ..... 2-29  MARINE BATTERIES ..... 4-40  RATINGS ..... 4-41  REPLACING CABLES ..... 4-42  STORAGE ..... 2-31  TESTING ..... 2-30</p> <p><b>BOAT MAINTENANCE ..... 2-29</b>  BATTERIES ..... 2-29  FIBERGLASS HULL ..... 2-31  INTERIOR ..... 2-32</p> <p><b>BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED) ... 1-10</b>  ANCHORS ..... 1-10  BAILING DEVICES ..... 1-10  COMPASS ..... 1-10  FIRST AID KIT ..... 1-10  OAR/PADDLE ..... 1-10  TOOLS AND SPARE PARTS ..... 1-12  VHF-FM RADIO ..... 1-10</p> <p><b>BOATING SAFETY ..... 1-4</b>  COURTESY MARINE EXAMINATIONS ..... 1-10  REGULATIONS FOR YOUR BOAT ..... 1-4  REQUIRED SAFETY EQUIPMENT ..... 1-5</p> <p><b>CARBURETED FUEL SYSTEM ..... 3-12</b>  DESCRIPTION &amp; OPERATION ..... 3-12  ENRICHENER SYSTEMS ..... 3-39  FUEL PUMP ..... 3-35  TROUBLESHOOTING ..... 3-15</p>	<p>2.5/3.3 HP MODELS ..... 3-18  CLEANING &amp; INSPECTION ..... 3-20  OVERHAUL ..... 3-18  REMOVAL &amp; INSTALLATION ..... 3-18</p> <p>4/5 HP MODELS ..... 3-20  CLEANING &amp; INSPECTION ..... 3-22  OVERHAUL ..... 3-21  REMOVAL &amp; INSTALLATION ..... 3-20</p> <p>6/8, 9.9/10/15 &amp; 20/20 JET/25 HP MODELS ..... 3-23  CLEANING &amp; INSPECTION ..... 3-26  OVERHAUL ..... 3-24  REMOVAL &amp; INSTALLATION ..... 3-23</p> <p>30/40 HP 2-CYL MODELS ..... 3-27  CLEANING &amp; INSPECTION ..... 3-29  OVERHAUL ..... 3-28  REMOVAL &amp; INSTALLATION ..... 3-27</p> <p>40-125 HP 3 &amp; 4-CYL MODELS ..... 3-30  OVERHAUL ..... 3-31  REMOVAL &amp; INSTALLATION ..... 3-30</p> <p>150/200 HP (2.5L) V6 MODELS ..... 3-32  CLEANING &amp; INSPECTION ..... 3-35  OVERHAUL ..... 3-33  REMOVAL &amp; INSTALLATION ..... 3-32</p> <p><b>CHARGING CIRCUIT ..... 4-37</b>  ALTERNATOR (EXTERNAL) ..... 4-42  BATTERY ..... 4-40  DESCRIPTION &amp; OPERATION ..... 4-37  RECTIFIER ..... 4-45  REGULATOR/RECTIFIER ..... 4-47  SERVICE PRECAUTIONS ..... 4-37  SPECIFICATIONS ..... 4-39  STATOR/BATTERY CHARGE COIL (UNDER FLYWHEEL) ..... 4-42  TROUBLESHOOTING ..... 4-38</p> <p><b>CLEARING A SUBMERGED MOTOR. .... 2-78</b></p> <p>COMMANDER SIDE MOUNT REMOTE CONTROL BOX - MECHANICAL .. 9-2  ASSEMBLY ..... 9-5  CLEANING &amp; INSPECTION ..... 9-5  DESCRIPTION &amp; OPERATION ..... 9-2  DISASSEMBLY ..... 9-3  REMOVAL &amp; INSTALLATION ..... 9-2  TROUBLESHOOTING ..... 9-2</p> <p>COMPRESSION TESTING ..... 2-33  LEAK TESTING ..... 2-34  LOW COMPRESSION ..... 2-34  TUNE-UP COMPRESSION CHECK ..... 2-33</p> <p>CONTROL CABLES ..... 9-20  REMOVAL &amp; INSTALLATION ..... 9-20</p> <p><b>COOLING SYSTEM ..... 5-11</b>  DESCRIPTION &amp; OPERATION ..... 5-12  FLUSHING JET DRIVES ..... 2-12  FLUSHING THE COOLING SYSTEM ..... 2-10  THERMOSTAT ..... 5-15  TROUBLESHOOTING ..... 5-12  WATER PUMP ..... 5-19</p> <p><b>COOLING SYSTEM FLOW SCHEMATICS ..... 5-41</b></p> <p>CRANKSHAFT POSITION SENSOR (CPS)  DESCRIPTION &amp; OPERATION ..... 4-27  DFI ..... 3-85  EFI ..... 3-58  REMOVAL &amp; INSTALLATION ..... 4-27  TESTING ..... 4-27</p> <p>DESCRIPTION &amp; OPERATION  AIR COMPRESSOR - DFI ..... 3-75  AIR PRESSURE REGULATOR - DFI ..... 3-81  AIR TEMPERATURE SENSOR (ATS) - EFI ..... 3-56</p>
---	--

# 10-16 MASTER INDEX

ALTERNATOR	4-42
CARBURETOR	3-12
CHARGING CIRCUIT	4-37
COMMANDER SIDE MOUNT REMOTE	9-2
COOLING SYSTEM	5-11
CRANKSHAFT POSITION SENSOR (CPS)	4-27
DETONATION (KNOCK) SENSOR & MODULE - EFI	3-59
DIGITAL THROTTLE & SHIFT	9-11
DIRECT INJECTOR - DFI	3-89
EFI	3-43
ELECTRIC FUEL PUMP - DFI	3-97
ELECTRIC FUEL PUMP - EFI	3-65
ELECTRONIC CONTROL MODULE (ECM/PCM) - DFI	3-88
ELECTRONIC CONTROL MODULE (ECM/PCM) - EFI	3-60
ELECTRONIC IGNITION SYSTEMS	4-10
ENGINE TEMPERATURE SENSORS (ETS) - EFI	3-54
FUEL INJECTOR - DFI	3-91
FUEL INJECTORS, FUEL RAIL & INTAKE MANIFOLD - EFI	3-45
FUEL PRESSURE REGULATOR - DFI	3-92
FUEL PRESSURE REGULATOR - EFI	3-69
FUEL (AND AIR) RAIL - DFI	3-99
GAS ASSIST TILT SYSTEM	8-6
HAND REWIND STARTER	10-2
IGNITION COILS	4-28
IGNITION MODULE (CD UNIT/CDM)	4-31
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR - DFI	3-86
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR - EFI	3-57
MECHANICAL FUEL PUMP - DFI	3-93
MECHANICAL FUEL PUMP - EFI	3-61
MECHANICAL TILT (UNASSISTED)	8-2
OIL INJECTION SYSTEM	5-2
OIL LEVEL SENSOR (SWITCH)	5-40
OPTIMAX DFI	3-71
PTT - SMALL MOTOR, SINGLE RAM INTEGRAL	8-10
PTT - MID-RANGE MOTOR, SINGLE RAM INTEGRAL	8-14
PTT - 3 RAM INTEGRAL	8-23
RECTIFIER	4-45
SHIFT INTERRUPT SWITCH - DFI	3-87
STARTER MOTOR	4-52
STARTER MOTOR CIRCUITS	4-48
STARTER RELAY/SOLENOID	4-50
STATOR/BATTERY CHARGE COIL (UNDER FLYWHEEL)	4-42
STATOR/CHARGE COIL	4-22
TEMPERATURE SENSORS - DFI	3-82
TEMPERATURE SWITCH (WARNING SYSTEM)	5-38
THROTTLE POSITION SENSOR (TPS) - DFI	3-85
THROTTLE POSITION SENSOR (TPS) - EFI	3-58
TILLER HANDLE	9-16
TRACKER VALVE (V6 ONLY) - DFI	3-100
TRIGGER COILS	4-25
VAPOR SEPARATOR - DFI	3-101
VAPOR SEPARATOR TANK (VST) - EFI	3-66
WATER SENSOR - EFI	3-60
DETONATION (KNOCK) SENSOR & MODULE - EFI	3-59
DESCRIPTION & OPERATION	3-59
TESTING	3-60
DIGITAL REMOTE UNITS - DTS	9-14
EXPLODED VIEWS	9-14
DIRECT INJECTOR - DFI	3-89
DESCRIPTION & OPERATION	3-89
REMOVAL & INSTALLATION	3-90
TESTING	3-90
DRIVE BELT	2-25
INSPECTION	2-25
REMOVAL & INSTALLATION	2-26

ELECTRIC FUEL PUMP(S)	
DFI	3-97
DESCRIPTION & OPERATION	3-97
REMOVAL & INSTALLATION	3-98
TESTING	3-97
EFI	3-65
DESCRIPTION & OPERATION	3-65
REMOVAL & INSTALLATION	3-66
TESTING	3-65
ELECTRICAL COMPONENTS	4-2
GROUND	4-3
LOAD	4-4
POWER SOURCE	4-2
PROTECTIVE DEVICES	4-3
SWITCHES & RELAYS	4-3
WIRING & HARNESSSES	4-4
<b>ELECTRICAL SWITCH/SOLENOID SERVICE</b>	<b>4-59</b>
IGNITION KEYSWITCH	4-59
KILL SWITCH	4-60
NEUTRAL SAFETY SWITCH	4-60
START BUTTON	4-60
ELECTRICAL SYSTEM CHECKS	2-40
BATTERY	2-40
INTERNAL WIRING HARNESS	3-40
STARTER MOTOR	3-40
ELECTRICAL TESTING	4-6
OPEN CIRCUITS	4-6
RESISTANCE	4-6
SHORT CIRCUITS	4-7
VOLTAGE	4-6
VOLTAGE DROP	4-6
ELECTRONIC CONTROL MODULE (ECM/PCM)	
DFI	3-88
DESCRIPTION & OPERATION	3-88
REMOVAL & INSTALLATION	3-89
EFI	3-60
DESCRIPTION & OPERATION	3-60
REMOVAL & INSTALLATION	3-61
<b>ELECTRONIC FUEL INJECTION (EFI)</b>	<b>3-43</b>
AIR TEMPERATURE SENSOR (ATS)	3-56
CRANKSHAFT POSITION SENSOR (CPS)	3-58
DESCRIPTION & OPERATION	3-43
DETONATION (KNOCK) SENSOR & MODULE	3-59
ELECTRIC FUEL PUMP	3-65
ELECTRONIC/ENGINE CONTROL MODULE (ECM)	3-60
ENGINE TEMPERATURE SENSORS (ETS)	3-54
FUEL INJECTORS, FUEL RAIL & INTAKE MANIFOLD	3-45
FUEL PRESSURE REGULATOR	3-69
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR	3-57
MECHANICAL FUEL PUMP	3-61
THROTTLE POSITION SENSOR (TPS)	3-58
TROUBLESHOOTING	3-43
VAPOR SEPARATOR TANK (VST) ASSEMBLY	3-66
WATER SENSOR	3-60
ELECTRONIC IGNITION SYSTEMS	4-8
COMPONENT TESTING	4-13
DESCRIPTION & OPERATION	4-10
SYSTEM TYPES & COMPONENTS	4-8
TROUBLESHOOTING	4-11
ELECTRONIC SHIFT CONTROL (ESC) - DTS	9-12
ACTUATOR ADJUSTMENT	9-13
SHIFT ACTUATOR REMOVAL & INSTALLATION	9-12
SHIFT OVERRIDE PROCEDURE	9-13
ELECTRONIC THROTTLE CONTROL (ETC) - DTS	9-13
REMOVAL & INSTALLATION	9-13

ENGINE & SERIAL NUMBER IDENTIFICATION .....	2-2	EFI .....	3-69
ENGINE COVERS .....	2-9	DESCRIPTION & OPERATION .....	3-69
REMOVAL & INSTALLATION .....	2-9	REMOVAL & INSTALLATION .....	3-70
<b>ENGINE MAINTENANCE .....</b>	<b>2-9</b>	TESTING .....	3-70
AIR FILTER (OPTIMAX) .....	2-27	FUEL PUMP - CARB .....	3-35
ANODES (ZINCS) .....	2-24	OVERHAUL .....	3-38
COOLING SYSTEM .....	2-10	REMOVAL & INSTALLATION .....	3-37
DRIVE BELT .....	2-25	TESTING .....	3-35
ENGINE COVERS .....	2-9	FUEL PUMP(S)	
FUEL FILTER/FUEL WATER SEPARATOR .....	2-13	ELECTRIC	
JET DRIVE IMPELLER .....	2-23	DFI .....	3-97
OIL FILTER (INLINE FILTER) .....	2-28	EFI .....	3-65
PROPELLER .....	2-16	MECHANICAL	
2-STROKE OIL .....	2-12	CARB .....	3-35
ENGINE TEMPERATURE SENSORS (ETS) - EFI .....	3-54	DFI .....	3-93
DESCRIPTION & OPERATION .....	3-54	EFI .....	3-61
REMOVAL & INSTALLATION .....	3-56	FUEL SYSTEM CHECKS .....	2-41
TESTING .....	3-54	FUEL INSPECTION .....	2-41
ENRICHENER SYSTEMS - CARB .....	3-39	FUEL TANK .....	3-7
DESCRIPTION & OPERATION .....	3-39	SERVICE .....	3-7
FUEL PRIMER HOSE ROUTING DIAGRAMS .....	3-40	<b>FUEL TANK &amp; LINES .....</b>	<b>3-7</b>
TESTING THE ELECTRIC PRIMER .....	3-40	FUEL LINES & FITTINGS .....	3-9
THERMAL AIR VALVE CIRCUIT .....	3-40	FUEL TANK .....	3-7
EXHAUST GASES .....	7-3	<b>FUEL/OIL ROUTING DIAGRAMS (EFI) .....</b>	<b>3-106</b>
<b>FASTENERS, MEASUREMENTS AND CONVERSIONS .....</b>	<b>1-27</b>	2.5L EFI MOTORS (2002 & LATER) .....	3-106
BOLTS, NUTS AND OTHER THREADED RETAINERS .....	1-27	3.0L EFI MOTORS (2002 & LATER) .....	3-106
STANDARD AND METRIC MEASUREMENTS .....	1-27	GAS ASSIST DAMPER .....	8-6
TORQUE .....	1-27	OVERHAUL (55-90 HP ONLY) .....	8-8
FIBERGLASS HULL .....	2-31	REMOVAL & INSTALLATION .....	8-6
INSPECTION & CARE .....	2-31	TESTING .....	8-6
FLYWHEEL .....	4-18	<b>GAS ASSIST TILT SYSTEM .....</b>	<b>8-6</b>
REMOVAL & INSTALLATION .....	4-18	DESCRIPTION & OPERATION .....	8-6
<b>FUEL &amp; COMBUSTION BASICS .....</b>	<b>3-2</b>	GAS ASSIST DAMPER .....	8-6
COMBUSTION .....	3-6	INTRODUCTION .....	8-6
FUEL .....	3-2	GEARCASE - 2.5/3.3 HP MODELS (NON-SHIFTING) .....	7-4
FUEL SYSTEM PRESSURIZATION .....	3-4	ASSEMBLY .....	7-7
FUEL SYSTEM SERVICE CAUTIONS .....	3-2	CLEANING & INSPECTION .....	7-7
FUEL (AND AIR) RAIL - DFI .....	3-99	DISASSEMBLY .....	7-4
DESCRIPTION & OPERATION .....	3-99	REMOVAL & INSTALLATION .....	7-4
REMOVAL & INSTALLATION .....	3-99	SHIMMING .....	7-7
FUEL FILTER/FUEL WATER SEPARATOR .....	2-13	GEARCASE - 2.5/3.3 HP AND 4/5/6 HP MODELS (SHIFTING) .....	7-8
RELEASING FUEL SYSTEM PRESSURE .....	2-14	ASSEMBLY .....	7-12
SERVICE .....	2-15	CLEANING & INSPECTION .....	7-12
FUEL INJECTOR - DFI .....	3-91	DISASSEMBLY .....	7-9
DESCRIPTION & OPERATION .....	3-91	REMOVAL & INSTALLATION .....	7-8
REMOVAL & INSTALLATION .....	3-91	SHIMMING .....	7-16
TESTING .....	3-91	GEARCASE - 6-25 HP MODELS .....	7-16
FUEL INJECTORS, FUEL RAIL & INTAKE MANIFOLD - EFI .....	3-45	ASSEMBLY .....	7-20
CLEANING & INSPECTION .....	3-53	CLEANING & INSPECTION .....	7-20
DESCRIPTION & OPERATION .....	3-45	DISASSEMBLY .....	7-18
REMOVAL & INSTALLATION .....	3-47	REMOVAL & INSTALLATION .....	7-16
TESTING THE INJECTORS .....	3-46	SHIMMING .....	7-26
FUEL PRESSURE REGULATOR - EFI .....	3-69	GEARCASE - 30/40 HP (2-CYL) & 40/50 HP (3-CYL) MODELS .....	7-26
DESCRIPTION & OPERATION .....	3-69	ASSEMBLY .....	7-30
REMOVAL & INSTALLATION .....	3-70	CLEANING & INSPECTION .....	7-30
TESTING .....	3-70	DISASSEMBLY .....	7-27
FUEL LINES & FITTINGS .....	3-9	REMOVAL & INSTALLATION .....	7-26
SERVICE .....	3-11	SHIMMING .....	7-34
TESTING .....	3-9	GEARCASE - 55/60 (3-CYL) NON-BIGFOOT, 60 HP BIGFOOT	
FUEL PRESSURE REGULATOR		AND 75-125 HP MODELS .....	7-34
DFI .....	3-92	ASSEMBLY .....	7-44
DESCRIPTION & OPERATION .....	3-92	CLEANING & INSPECTION .....	7-40
REMOVAL & INSTALLATION .....	3-92	DISASSEMBLY .....	7-36
TESTING .....	3-92	REMOVAL & INSTALLATION .....	7-35
		SHIMMING .....	7-48

# 10-18 MASTER INDEX

GEARCASE - 135-200 HP (2.5L) V6 MODELS . . . . .	7-51	<b>IGNITION SYSTEM</b> . . . . .	<b>2-39</b>
ASSEMBLY . . . . .	7-56	INSPECTION . . . . .	2-39
CLEANING & INSPECTION . . . . .	7-56	IGNITION SYSTEMS . . . . .	4-8
DISASSEMBLY . . . . .	7-52	CRANKSHAFT POSITION SENSOR (CPS) . . . . .	4-27
REMOVAL & INSTALLATION . . . . .	7-51	DIAGNOSTIC CHARTS . . . . .	4-13
SHIMMING . . . . .	7-62	ELECTRONIC IGNITION SYSTEMS . . . . .	4-8
GEARCASE - 200-250 HP (3.0L) V6 MODELS . . . . .	7-65	FLYWHEEL . . . . .	4-18
ASSEMBLY . . . . .	7-73	GENERAL INFORMATION . . . . .	4-8
CLEANING & INSPECTION . . . . .	7-70	IGNITION COILS . . . . .	4-28
DISASSEMBLY . . . . .	7-66	IGNITION MODULE (CD UNIT/CDM) . . . . .	4-31
REMOVAL & INSTALLATION . . . . .	7-65	SPECIFICATIONS . . . . .	4-36
SHIMMING . . . . .	7-76	STATOR/CHARGE COIL . . . . .	4-22
GEARCASE REPAIR & OVERHAUL TIPS . . . . .	7-3	TRIGGER COILS . . . . .	4-25
<b>GENERAL INFORMATION</b> . . . . .	<b>2-2</b>	<b>JET DRIVE</b> . . . . .	<b>7-79</b>
BEFORE/AFTER EACH USE . . . . .	2-3	ADJUSTMENTS . . . . .	7-86
ENGINE & SERIAL NUMBER IDENTIFICATION . . . . .	2-2	ASSEMBLY . . . . .	7-84
MAINTENANCE COVERAGE . . . . .	2-2	BEARING CARRIER OVERHAUL . . . . .	7-81
MAINTENANCE EQUALS SAFETY . . . . .	2-2	CLEANING & INSPECTION . . . . .	7-82
OUTBOARDS ON SAIL BOATS . . . . .	2-2	DESCRIPTION & OPERATION . . . . .	7-79
<b>HAND REWIND STARTER</b> . . . . .	<b>10-2</b>	DRIVE AND/OR IMPELLER REMOVAL . . . . .	7-80
DESCRIPTION & OPERATION . . . . .	10-2	DRIVE AND/OR IMPELLER INSTALLATION . . . . .	7-84
TROUBLESHOOTING . . . . .	10-2	DRIVE UNIT DISASSEMBLY . . . . .	7-81
2.5/3.3 HP MODELS . . . . .	10-2	JET DRIVE BEARING . . . . .	2-8
ASSEMBLY & INSTALLATION . . . . .	10-3	JET DRIVE IMPELLER . . . . .	2-23
CLEANING & INSPECTION . . . . .	10-2	JET DRIVE ADJUSTMENTS . . . . .	7-86
REMOVAL & DISASSEMBLY . . . . .	10-2	GATE LINKAGE ADJUSTMENTS . . . . .	7-86
4/5 HP MODELS . . . . .	10-4	JET DRIVE BEARING . . . . .	2-8
ASSEMBLY & INSTALLATION . . . . .	10-6	BEARING LUBRICATION . . . . .	2-8
CLEANING & INSPECTION . . . . .	10-6	GREASE REPLACEMENT . . . . .	2-8
REMOVAL & DISASSEMBLY . . . . .	10-4	RECOMMENDED LUBRICANT . . . . .	2-8
6-25 HP MODELS . . . . .	10-8	JET DRIVE IMPELLER . . . . .	2-23
ASSEMBLY . . . . .	10-11	CHECKING CLEARANCE . . . . .	2-23
CLEANING & INSPECTION . . . . .	10-10	INSPECTION . . . . .	2-23
DISASSEMBLY . . . . .	10-10	KILL SWITCH . . . . .	4-60
REMOVAL & ROPE REPLACEMENT . . . . .	10-8	TESTING . . . . .	4-60
ROPE REPLACEMENT & INSTALLATION . . . . .	10-11	KNOCK SENSOR & MODULE - EFI . . . . .	3-59
30 HP & LARGER MODELS . . . . .	10-11	DESCRIPTION & OPERATION . . . . .	3-59
ASSEMBLY & INSTALLATION . . . . .	10-14	TESTING . . . . .	3-60
CLEANING & INSPECTION . . . . .	10-14	<b>LOWER UNIT</b> . . . . .	
REMOVAL & DISASSEMBLY . . . . .	10-11	2.5/3.3 HP MODELS (NON-SHIFTING) . . . . .	7-4
<b>HOW TO USE THIS MANUAL</b> . . . . .	<b>1-2</b>	2.5/3.3 HP AND 4/5/6 HP MODELS (SHIFTING) . . . . .	7-8
AVOIDING COMMON MISTAKES . . . . .	1-2	6-25 HP MODELS . . . . .	7-16
AVOIDING TROUBLE . . . . .	1-2	30/40 HP (2-CYL) & 40/50 HP (3-CYL) MODELS . . . . .	7-26
CAN YOU DO IT? . . . . .	1-2	55/60 (3-CYL) NON-BIGFOOT, 60 HP BIGFOOT AND	
DIRECTIONS AND LOCATIONS . . . . .	1-2	75-125 HP MODELS . . . . .	7-34
MAINTENANCE OR REPAIR? . . . . .	1-2	135-200 HP (2.5L) V6 MODELS . . . . .	7-51
PROFESSIONAL HELP . . . . .	1-2	200-250 HP (3.0L) V6 MODELS . . . . .	7-65
PURCHASING PARTS . . . . .	1-2	DRAINING & FILLING . . . . .	2-7
WHERE TO BEGIN . . . . .	1-2	EXHAUST GASES . . . . .	7-3
IGNITION COILS . . . . .	4-28	GEARCASE REPAIR & OVERHAUL TIPS . . . . .	7-3
DESCRIPTION & OPERATION . . . . .	4-28	GENERAL INFORMATION . . . . .	7-2
REMOVAL & INSTALLATION . . . . .	4-30	LEVEL & CONDITION . . . . .	2-7
TESTING . . . . .	4-28	RECOMMENDATIONS . . . . .	2-6
IGNITION DIAGNOSTIC CHARTS . . . . .	4-13	SHIFTING PRINCIPLES . . . . .	7-2
2-CYL . . . . .	4-13	TROUBLESHOOTING . . . . .	7-3
3- 4- & 6- CYL W/CDM IGNITIONS . . . . .	4-14	LUBRICATING THE MOTOR . . . . .	2-5
2002 & LATER EFI 6-CYL W/BATTERY DRIVEN IGNITIONS . . . . .	4-16	<b>LUBRICATION</b> . . . . .	<b>2-4</b>
OPTIMAX . . . . .	4-17	ABOUT LUBRICATION . . . . .	2-4
IGNITION KEYSWITCH . . . . .	4-59	JET DRIVE BEARING . . . . .	2-8
TESTING . . . . .	4-59	LOWER UNIT . . . . .	2-6
IGNITION MODULE (CD UNIT/CDM) . . . . .	4-31	LUBRICATING THE MOTOR . . . . .	2-5
DESCRIPTION & OPERATION . . . . .	4-31	LUBRICATION INSIDE THE BOAT . . . . .	2-5
REMOVAL & INSTALLATION . . . . .	4-33	POWER TRIM/TILT RESERVOIR . . . . .	2-9
TESTING . . . . .	4-32	LUBRICATION INSIDE THE BOAT . . . . .	2-5

<p><b>MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR</b></p> <ul style="list-style-type: none"> <li>DFI ..... 3-86               <ul style="list-style-type: none"> <li>DESCRIPTION &amp; OPERATION ..... 3-86</li> <li>REMOVAL &amp; INSTALLATION ..... 3-87</li> <li>TESTING ..... 3-87</li> </ul> </li> <li>EFI ..... 3-57               <ul style="list-style-type: none"> <li>DESCRIPTION &amp; OPERATION ..... 3-57</li> <li>REMOVAL &amp; INSTALLATION ..... 3-58</li> <li>TESTING ..... 3-57</li> </ul> </li> </ul> <p><b>MECHANICAL FUEL PUMP</b></p> <ul style="list-style-type: none"> <li>DFI ..... 3-93               <ul style="list-style-type: none"> <li>DESCRIPTION &amp; OPERATION ..... 3-93</li> <li>TESTING ..... 3-93</li> <li>OVERHAUL ..... 3-96</li> <li>REMOVAL &amp; INSTALLATION ..... 3-95</li> <li>TESTING ..... 3-93</li> </ul> </li> <li>EFI ..... 3-61               <ul style="list-style-type: none"> <li>DESCRIPTION &amp; OPERATION ..... 3-61</li> <li>OVERHAUL ..... 3-64</li> <li>REMOVAL &amp; INSTALLATION ..... 3-64</li> <li>TESTING ..... 3-62</li> </ul> </li> </ul> <p><b>MECHANICAL TILT (UNASSISTED) ..... 8-2</b></p> <ul style="list-style-type: none"> <li>DESCRIPTION &amp; OPERATION ..... 8-2</li> <li>INTRODUCTION ..... 8-2</li> <li>SERVICING ..... 8-2</li> </ul> <p><b>NEUTRAL SAFETY SWITCH ..... 4-60</b></p> <ul style="list-style-type: none"> <li>TESTING ..... 4-60</li> </ul> <p><b>OIL &amp; TEMPERATURE WARNING SYSTEMS ..... 5-31</b></p> <ul style="list-style-type: none"> <li>CHECKING THE CIRCUIT ..... 5-31</li> <li>OPTIMAX &amp; CARUBURETED/EFI V6 MOTORS</li> <li>TROUBLESHOOTING AN ACTIVATION ..... 5-32</li> </ul> <p><b>OIL FILTER (INLINE FILTER FOR INJECTION SYSTEM) ..... 2-28</b></p> <ul style="list-style-type: none"> <li>REMOVAL &amp; INSTALLATION ..... 2-28</li> </ul> <p><b>OIL INJECTION SYSTEM ..... 5-2</b></p> <ul style="list-style-type: none"> <li>GENERAL INFORMATION ..... 5-2</li> <li>OIL LINES ..... 5-11</li> <li>OIL PUMP ..... 5-8</li> <li>OIL TANK ..... 5-4</li> <li>TROUBLESHOOTING ..... 5-4</li> </ul> <p><b>OIL LEVEL SENSOR (SWITCH) ..... 5-40</b></p> <ul style="list-style-type: none"> <li>DESCRIPTION &amp; TESTING ..... 5-40</li> </ul> <p><b>OIL LINES ..... 5-11</b></p> <ul style="list-style-type: none"> <li>CAUTIONS ..... 5-11</li> </ul> <p><b>OIL PUMP ..... 5-8</b></p> <ul style="list-style-type: none"> <li>BLEEDING THE OIL INJECTION SYSTEM ..... 5-9</li> <li>OIL PUMP CONTROL ROD ADJUSTMENT ..... 5-8</li> <li>REMOVAL &amp; INSTALLATION ..... 5-8</li> <li>TESTING OIL PUMP DISCHARGE RATE ..... 5-10</li> </ul> <p><b>OIL TANK ..... 5-4</b></p> <ul style="list-style-type: none"> <li>CLEANING &amp; INSPECTION ..... 5-7</li> <li>REMOVAL &amp; INSTALLATION ..... 5-4</li> </ul> <p><b>OPTIMAX DIRECT FUEL INJECTION (DFI) ..... 3-71</b></p> <ul style="list-style-type: none"> <li>AIR COMPRESSOR ..... 3-75</li> <li>AIR PRESSURE REGULATOR ..... 3-81</li> <li>CRANKSHAFT POSITION SENSOR (CPS) ..... 3-85</li> <li>DESCRIPTION &amp; OPERATION ..... 3-71</li> <li>DIRECT INJECTOR ..... 3-89</li> <li>ELECTRIC FUEL PUMP(S) ..... 3-97</li> <li>ELECTRONIC CONTROL MODULE (ECM/PCM) ..... 3-88</li> <li>FUEL (AND AIR) RAIL ..... 3-99</li> <li>FUEL INJECTOR ..... 3-91</li> <li>FUEL PRESSURE REGULATOR ..... 3-92</li> <li>MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR ..... 3-86</li> <li>MECHANICAL FUEL PUMP ..... 3-93</li> <li>SHIFT INTERRUPT SWITCH ..... 3-87</li> </ul>	<ul style="list-style-type: none"> <li>TEMPERATURE SENSORS ..... 3-82</li> <li>THROTTLE BODY, AIR PLENUM &amp; REED BLOCK ..... 3-104</li> <li>THROTTLE POSITION SENSOR (TPS) ..... 3-85</li> <li>TRACKER VALVE ..... 3-100</li> <li>TROUBLESHOOTING ..... 3-73</li> <li>VAPOR SEPARATOR ..... 3-101</li> </ul> <p><b>POWER TRIM/TILT RESERVOIR ..... 2-9</b></p> <p><b>POWER TILT/TRIM - SMALL MOTOR, SINGLE RAM INTEGRAL ..... 8-10</b></p> <ul style="list-style-type: none"> <li>DESCRIPTION &amp; OPERATION ..... 8-10</li> <li>INTRODUCTION ..... 8-10</li> <li>PTT HYDRAULIC CYLINDER ..... 8-13</li> <li>PTT HYDRAULIC PUMP ..... 8-13</li> <li>TROUBLESHOOTING ..... 8-11</li> </ul> <p><b>POWER TILT/TRIM - MID-RANGE MOTOR, SINGLE RAM INTEGRAL 8-14</b></p> <ul style="list-style-type: none"> <li>DESCRIPTION &amp; OPERATION ..... 8-14</li> <li>INTRODUCTION ..... 8-14</li> <li>PTT ASSEMBLY ..... 8-18</li> <li>TROUBLESHOOTING ..... 8-15</li> </ul> <p><b>POWER TILT/TRIM - 3 RAM INTEGRAL ..... 8-23</b></p> <ul style="list-style-type: none"> <li>DESCRIPTION &amp; OPERATION ..... 8-23</li> <li>INTRODUCTION ..... 8-23</li> <li>PTT ASSEMBLY ..... 8-27</li> <li>TILT ROD ..... 8-31</li> <li>TRIM MOTOR &amp; PUMP ..... 8-32</li> <li>TRIM ROD &amp; CAP ..... 8-28</li> <li>TRIM SENDER &amp; GAUGE ..... 8-33</li> <li>TROUBLESHOOTING ..... 8-24</li> </ul> <p><b>POWERHEAD BREAK-IN ..... 6-69</b></p> <ul style="list-style-type: none"> <li>BREAK-IN PROCEDURES ..... 6-69</li> </ul> <p><b>POWERHEAD MECHANICAL ..... 6-2</b></p> <ul style="list-style-type: none"> <li>GENERAL INFORMATION ..... 6-2</li> <li>CLEANLINESS ..... 6-3</li> <li>POWERHEAD COMPONENTS ..... 6-3</li> <li>POWERHEAD OVERHAUL ..... 6-2</li> <li>2.5/3.3 HP ..... 6-3               <ul style="list-style-type: none"> <li>CLEANING &amp; INSPECTION ..... 6-5</li> <li>DISSASSEMBLY &amp; ASSEMBLY ..... 6-3</li> <li>REMOVAL &amp; INSTALLATION ..... 6-3</li> </ul> </li> <li>4/5 HP ..... 6-5               <ul style="list-style-type: none"> <li>CLEANING &amp; INSPECTION ..... 6-6</li> <li>DISSASSEMBLY &amp; ASSEMBLY ..... 6-5</li> <li>REMOVAL &amp; INSTALLATION ..... 6-5</li> </ul> </li> <li>6/8 &amp; 9.9/10/15 HP ..... 6-8               <ul style="list-style-type: none"> <li>CLEANING &amp; INSPECTION ..... 6-12</li> <li>DISSASSEMBLY &amp; ASSEMBLY ..... 6-8</li> <li>REMOVAL &amp; INSTALLATION ..... 6-8</li> </ul> </li> <li>20/20 JET/25 HP ..... 6-12               <ul style="list-style-type: none"> <li>CLEANING &amp; INSPECTION ..... 6-16</li> <li>DISSASSEMBLY &amp; ASSEMBLY ..... 6-13</li> <li>REMOVAL &amp; INSTALLATION ..... 6-12</li> </ul> </li> <li>30/40 HP 2-CYLINDER ..... 6-17               <ul style="list-style-type: none"> <li>CLEANING &amp; INSPECTION ..... 6-22</li> <li>DISSASSEMBLY &amp; ASSEMBLY ..... 6-18</li> <li>REMOVAL &amp; INSTALLATION ..... 6-17</li> </ul> </li> <li>40/40 JET/50/55/60 HP 3-CYLINDER ..... 6-22               <ul style="list-style-type: none"> <li>CLEANING &amp; INSPECTION ..... 6-27</li> <li>DISSASSEMBLY &amp; ASSEMBLY ..... 6-23</li> <li>REMOVAL &amp; INSTALLATION ..... 6-22</li> </ul> </li> <li>75/65 JET/90 HP &amp; 80 JET/115/125 HP ..... 6-27               <ul style="list-style-type: none"> <li>CLEANING &amp; INSPECTION ..... 6-35</li> <li>DISSASSEMBLY &amp; ASSEMBLY ..... 6-28</li> <li>REMOVAL &amp; INSTALLATION ..... 6-27</li> </ul> </li> <li>75/90/115 HP OPTIMAX ..... 6-35               <ul style="list-style-type: none"> <li>CLEANING &amp; INSPECTION ..... 6-42</li> </ul> </li> </ul>
--	---

# 10-20 MASTER INDEX

DISSASSEMBLY & ASSEMBLY .....	6-37	RECTIFIER .....	4-45
REMOVAL & INSTALLATION .....	6-35	DESCRIPTION & OPERATION .....	4-45
135-200 HP (2.5L) V6 .....	6-42	REMOVAL & INSTALLATION .....	4-46
CLEANING & INSPECTION .....	6-49	TESTING .....	4-45
DISSASSEMBLY & ASSEMBLY .....	6-44	REGULATOR/RECTIFIER .....	4-47
REMOVAL & INSTALLATION .....	6-42	REMOVAL & INSTALLATION .....	4-48
200-250 HP (3.0L) V6 .....	6-49	TESTING .....	4-47
CLEANING & INSPECTION .....	6-57	<b>REMOTE CONTROL WIRING .....</b>	<b>9-22</b>
DISSASSEMBLY & ASSEMBLY .....	6-51	INDEX .....	9-22
REMOVAL & INSTALLATION .....	6-49	<b>REMOTE CONTROLS - DIGITAL THROTTLE &amp; SHIFT (DTS) UNITS . 9-11</b>	
<b>POWERHEAD RECONDITIONING .....</b>	<b>6-57</b>	DESCRIPTION & OPERATION .....	9-11
BEARINGS .....	6-66	DIGITAL REMOTE UNITS .....	9-14
GENERAL INFORMATION .....	6-66	ELECTRONIC SHIFT CONTROL (ESC) .....	9-12
INSPECTION .....	6-67	ELECTRONIC THROTTLE CONTROL (ETC) .....	9-13
BUY OR REBUILD? .....	6-57	<b>REMOTE CONTROLS - MECHANICAL UNITS .....</b>	<b>9-2</b>
CONNECTING RODS .....	6-64	ADDITIONAL REMOTE UNITS .....	9-6
GENERAL INFORMATION .....	6-64	COMMANDER SIDE MOUNT REMOTE CONTROL BOX .....	9-2
INSPECTION .....	6-65	REMOTE (SHIFT & THROTTLE) CABLES .....	9-9
CRANKSHAFT .....	6-65	REMOTE (SHIFT & THROTTLE) CABLES - MECHANICAL .....	9-9
GENERAL INFORMATION .....	6-65	INSTALLATION & ADJUSTMENT - TO THE POWERHEAD .....	9-9
INSPECTION .....	6-66	RIGGING & MEASUREMENT FOR REPLACEMENT .....	9-9
CYLINDER BLOCK AND HEAD .....	6-59	RE-COMMISSIONING .....	2-78
GENERAL INFORMATION .....	6-59	REMOVAL FROM STORAGE .....	2-78
INSPECTION .....	6-60	<b>SAFETY IN SERVICE .....</b>	<b>1-12</b>
CYLINDER BORES .....	6-60	DO'S .....	1-12
GENERAL INFORMATION .....	6-60	DON'TS .....	1-13
INSPECTION .....	6-60	SHIFT INTERRUPT SWITCH - DFI .....	3-87
REFINISHING .....	6-61	DESCRIPTION & OPERATION .....	3-87
DETERMINING CONDITION .....	6-57	REMOVAL & INSTALLATION .....	3-88
OVERHAUL TIPS .....	6-58	TESTING .....	3-87
CAUTIONS .....	6-58	SHIFTING PRINCIPLES .....	7-2
CLEANING .....	6-58	COUNTER-ROTATING UNIT .....	7-3
PISTONS .....	6-62	STANDARD ROTATING UNIT .....	7-2
GENERAL INFORMATION .....	6-62	<b>SHOP EQUIPMENT .....</b>	<b>1-17</b>
INSPECTION .....	6-62	CHEMICALS .....	1-17
PISTON PINS .....	6-63	SAFETY TOOLS .....	1-17
GENERAL INFORMATION .....	6-63	SPARK PLUG WIRES .....	2-39
INSPECTION .....	6-63	REMOVAL & INSTALLATION .....	2-39
PISTON RINGS .....	6-63	TESTING .....	2-39
GENERAL INFORMATION .....	6-63	SPARK PLUGS .....	2-35
INSPECTION .....	6-64	HEAT RANGE .....	2-35
PREPARATION .....	6-58	INSPECTION & GAPPING .....	2-38
REED VALVES .....	6-68	READING PLUGS .....	2-37
GENERAL INFORMATION .....	6-68	REMOVAL & INSTALLATION .....	2-36
INSPECTION .....	6-68	<b>SPECIFICATIONS .....</b>	
PROPELLER .....	2-16	CAPACITIES .....	2-83
GENERAL INFORMATION .....	2-16	CARBURETOR SET-UP .....	3-111
INSPECTION .....	2-19	CHARGING SYSTEM TESTING .....	4-39
REMOVAL & INSTALLATION .....	2-19	CONVERSION FACTORS .....	1-28
CASTELLATED NUT PROPS .....	2-20	COOLING SYSTEM .....	5-44
SHEAR PIN PROPS .....	2-20	ENGINE REBUILDING .....	6-70
PTT ASSEMBLY - MID-RANGE MOTOR, SINGLE RAM .....	8-18	FUEL INJECTION COMPONENT ADJUSTMENT .....	3-112
OVERHAUL .....	8-19	GENERAL ENGINE .....	2-80
REMOVAL & INSTALLATION .....	8-18	IGNITION .....	4-36
SYSTEM BLEEDING .....	8-19	MAINTENANCE INTERVALS .....	2-82
PTT ASSEMBLY - 3 RAM INTEGRAL .....	8-27	SPARK PLUG DIAGNOSIS .....	2-86
REMOVAL & INSTALLATION .....	8-27	TORQUE .....	6-74
SYSTEM BLEEDING .....	8-28	TUNE-UP .....	2-84
PTT HYDRAULIC CYLINDER .....	8-13	TYPICAL TORQUE VALUES - METRIC BOLTS .....	1-29
REMOVAL & INSTALLATION .....	8-13	TYPICAL TORQUE VALUES - U.S. STANDARD BOLTS .....	1-30
PTT HYDRAULIC PUMP .....	8-13	2-STROKE MOTOR FUEL:OIL RATIO .....	2-83
OVERHAUL .....	8-14	START BUTTON .....	4-60
REMOVAL & INSTALLATION .....	8-13	TESTING .....	4-60
SYSTEM BLEEDING .....	8-14		



<p><b>STARTER CIRCUIT</b> ..... 4-48</p> <p>STARTER MOTOR ..... 4-52</p> <p>STARTER MOTOR CIRCUITS ..... 4-48</p> <p>STARTER RELAY/SOLENOID ..... 4-50</p> <p>STARTER MOTOR ..... 4-52</p> <p>CLEANING &amp; INSPECTION ..... 4-58</p> <p>DESCRIPTION ..... 4-52</p> <p>OVERHAUL ..... 4-54</p> <p>REMOVAL &amp; INSTALLATION ..... 4-52</p> <p>STARTER MOTOR CIRCUITS ..... 4-48</p> <p>DESCRIPTION &amp; OPERATION ..... 4-48</p> <p>TROUBLESHOOTING ..... 4-49</p> <p>STARTER RELAY/SOLENOID ..... 4-50</p> <p>DESCRIPTION &amp; OPERATION ..... 4-50</p> <p>REMOVAL &amp; INSTALLATION ..... 4-52</p> <p>TESTING ..... 4-51</p> <p>STATOR/BATTERY CHARGE COIL (UNDER FLYWHEEL) ..... 4-42</p> <p>DESCRIPTION &amp; OPERATION ..... 4-42</p> <p>TESTING ..... 4-42</p> <p>STATOR/CHARGE COIL ..... 4-22</p> <p>DESCRIPTION &amp; OPERATION ..... 4-22</p> <p>REMOVAL &amp; INSTALLATION ..... 4-23</p> <p>TESTING ..... 4-22</p> <p><b>STORAGE</b> ..... 2-75</p> <p>RE-COMMISSIONING ..... 2-78</p> <p>WINTERIZATION ..... 2-75</p> <p>TEMPERATURE SENSORS - DFI ..... 3-82</p> <p>DESCRIPTION &amp; OPERATION ..... 3-82</p> <p>REMOVAL &amp; INSTALLATION ..... 3-84</p> <p>TESTING ..... 3-83</p> <p>TEMPERATURE SWITCH (WARNING SYSTEM) ..... 5-38</p> <p>CHECKING CONTINUITY ..... 5-39</p> <p>DESCRIPTION &amp; OPERATION ..... 5-38</p> <p>OPERATIONAL CHECK ..... 5-38</p> <p>TEST EQUIPMENT ..... 4-4</p> <p>JUMPER WIRES ..... 4-4</p> <p>MULTI-METERS ..... 4-5</p> <p>TEST LIGHTS ..... 4-4</p> <p>THERMOSTAT ..... 5-15</p> <p>EXPLODED VIEWS ..... 5-17</p> <p>REMOVAL &amp; INSTALLATION ..... 5-15</p> <p>THROTTLE BODY, AIR PLENUM &amp; REED BLOCK - DFI ..... 3-104</p> <p>REMOVAL &amp; INSTALLATION ..... 3-104</p> <p>THROTTLE POSITION SENSOR (TPS)</p> <p>DFI ..... 3-85</p> <p>DESCRIPTION &amp; OPERATION ..... 3-85</p> <p>REMOVAL &amp; INSTALLATION ..... 3-86</p> <p>TESTING ..... 3-85</p> <p>EFI ..... 3-58</p> <p>DESCRIPTION &amp; OPERATION ..... 3-58</p> <p>REMOVAL &amp; INSTALLATION ..... 3-59</p> <p>TESTING ..... 3-58</p> <p><b>TILLER HANDLE</b> ..... 9-16</p> <p>CONTROL CABLES ..... 9-20</p> <p>DESCRIPTION &amp; OPERATION ..... 9-16</p> <p>TILLER HANDLE ..... 9-16</p> <p>TROUBLESHOOTING ..... 9-16</p> <p>TILLER HANDLE ..... 9-16</p> <p>REMOVAL &amp; INSTALLATION ..... 9-16</p> <p>TILT ROD - 3 RAM INTEGRAL ..... 8-31</p> <p>REMOVAL &amp; INSTALLATION ..... 8-31</p>	<p><b>TIMING &amp; SYNCHRONIZATION</b> ..... 2-41</p> <p>2.5/3.3 HP ..... 2-42</p> <p>IDLE SPEED ..... 2-42</p> <p>IGNITION TIMING ..... 2-42</p> <p>THROTTLE JET NEEDLE ..... 2-42</p> <p>4/5 HP ..... 2-43</p> <p>IDLE SPEED &amp; MIXTURE ..... 2-44</p> <p>IGNITION TIMING ..... 2-43</p> <p>6/8 &amp; 9.9/10/15 HP ..... 2-44</p> <p>IDLE SPEED ..... 2-44</p> <p>IDLE WIRE ..... 2-46</p> <p>IGNITION TIMING ..... 2-45</p> <p>LOW SPEED MIXTURE ..... 2-44</p> <p>20/20 JET/25 HP ..... 2-46</p> <p>CARBURETOR &amp; LINKAGE ..... 2-46</p> <p>IDLE SPEED &amp; MIXTURE ..... 2-48</p> <p>IGNITION TIMING ..... 2-47</p> <p>30/40 HP 2-CYLINDER ..... 2-49</p> <p>IDLE SPEED &amp; MIXTURE ..... 2-49</p> <p>IGNITION TIMING ..... 2-50</p> <p>OIL PUMP ..... 2-51</p> <p>REMOTE CONTROL CABLE ..... 2-50</p> <p>40-125 HP CARB 3 &amp; 4-CYL ..... 2-51</p> <p>IDLE SPEED ..... 2-54</p> <p>IGNITION TIMING ..... 2-53</p> <p>CARBURETOR SYNCHRONIZATION ..... 2-51</p> <p>75/90/115 HP OPTIMAX ..... 2-54</p> <p>THROTTLE LINKAGE ..... 2-54</p> <p>150-200 HP (2.5L) V6 CARB ..... 2-55</p> <p>CARBURETOR SYNCHRONIZATION ..... 2-56</p> <p>IDLE SPEED ..... 2-58</p> <p>IGNITION TIMING ..... 2-57</p> <p>IGNITION TIMING POINTER ..... 2-55</p> <p>150-200 HP (2.5L) V6 EFI - 2001 ..... 2-58</p> <p>DYNAMIC IDLE TIMING ..... 2-62</p> <p>DYNAMIC MAXIMUM TIMING ..... 2-63</p> <p>IDLE SPEED ..... 2-62</p> <p>MAXIMUM THROTTLE ..... 2-60</p> <p>STATIC IDLE TIMING ..... 2-60</p> <p>STATIC MAXIMUM TIMING ..... 2-60</p> <p>THROTTLE CABLE PRELOAD ..... 2-62</p> <p>THROTTLE CAM ..... 2-59</p> <p>THROTTLE POSITION SENSOR ..... 2-61</p> <p>THROTTLE VALVE &amp; OIL PUMP SYNCHRONIZATION ..... 2-62</p> <p>TIMER POINTER ..... 2-58</p> <p>TRIGGER LINK ROD &amp; PRELIMINARY ..... 2-59</p> <p>150-200 HP (2.5L) V6 EFI - 2002 &amp; LATER ..... 2-63</p> <p>IDLE SPEED ..... 2-64</p> <p>IGNITION TIMING ..... 2-63</p> <p>MAXIMUM THROTTLE ..... 2-64</p> <p>THROTTLE CABLE ..... 2-64</p> <p>THROTTLE CAM ..... 2-63</p> <p>THROTTLE PLATE SCREW ..... 2-65</p> <p>THROTTLE POSITION SENSOR ..... 2-64</p> <p>135-175 HP (2.5L) V6 OPTIMAX ..... 2-65</p> <p>IDLE SPEED ..... 2-66</p> <p>MAXIMUM THROTTLE ..... 2-66</p> <p>THROTTLE CAM ..... 2-66</p> <p>THROTTLE PLATE SCREW ..... 2-66</p> <p>THROTTLE POSITION SENSOR ..... 2-66</p> <p>225-250 HP (3.0L) V6 EFI - 2001 ..... 2-67</p> <p>CRANKSHAFT POSITION SENSOR ..... 2-67</p> <p>IDLE SPEED ..... 2-69</p> <p>MAXIMUM THROTTLE ..... 2-68</p> <p>THROTTLE CAM ..... 2-67</p> <p>THROTTLE VALVE &amp; OIL PUMP SYNCHRONIZATION ..... 2-68</p> <p>TIMER POINTER ..... 2-67</p> <p>THROTTLE POSITION SENSOR (TPS) ..... 2-69</p>
--	--

# 10-22 MASTER INDEX

200-250 HP (3.0L) V6 EFI - 2002 & LATER	2-70	<b>TUNE-UP</b>	<b>2-32</b>
IDLE SPEED	2-71	COMPRESSION TESTING	2-33
IGNITION TIMING	2-70	ELECTRICAL SYSTEM CHECKS	2-40
MAXIMUM THROTTLE	2-70	FUEL SYSTEM CHECKS	2-41
THROTTLE CABLE	2-71	IGNITION SYSTEM	2-39
THROTTLE CAM	2-70	INTRODUCTION	2-32
THROTTLE PLATE SCREW	2-71	SPARK PLUG WIRES	2-39
THROTTLE POSITION SENSOR	2-71	SPARK PLUGS	2-35
200-250 HP (3.0L) V6 OPTIMAX	2-71	TUNE-UP SEQUENCE	2-32
CRANKSHAFT POSITION SENSOR	2-71	TIMING & SYNCHRONIZATION	2-41
IDLE SPEED	2-74		
MAXIMUM THROTTLE	2-72	TUNE-UP SEQUENCE	2-32
THROTTLE CAM	2-72		
THROTTLE PLATE SCREW	2-74		
THROTTLE POSITION SENSOR	2-74		
<b>TOOLS</b>	<b>1-19</b>	<b>UNDERSTANDING &amp; TROUBLESHOOTING ELECTRICAL SYSTEMS</b>	<b>4-2</b>
ELECTRONIC TOOLS	1-23	BASIC ELECTRICAL THEORY	4-2
HAND TOOLS	1-19	ELECTRICAL COMPONENTS	4-2
MEASURING TOOLS	1-25	ELECTRICAL TESTING	4-6
OTHER COMMON TOOLS	1-22	PRECAUTIONS	4-8
SPECIAL TOOLS	1-23	TEST EQUIPMENT	4-4
		TROUBLESHOOTING	4-6
		WIRE & CONNECTOR REPAIR	4-7
TRACKER VALVE - DFI	3-100		
DESCRIPTION & OPERATION	3-100	VAPOR SEPARATOR - DFI	3-101
REMOVAL & INSTALLATION	3-101	DESCRIPTION & OPERATION	3-101
		OVERHAUL	3-102
TRIGGER COILS	4-25	REMOVAL & INSTALLATION	3-101
DESCRIPTION & OPERATION	4-25		
REMOVAL & INSTALLATION	4-26	VAPOR SEPARATOR TANK (VST) ASSEMBLY - EFI	3-66
TESTING	4-25	DESCRIPTION & OPERATION	3-66
		OVERHAUL	3-68
TRIM MOTOR & PUMP - 3 RAM INTEGRAL	8-32	REMOVAL & INSTALLATION	3-66
REMOVAL & INSTALLATION	8-33		
TESTING THE MOTOR	8-32	<b>WARNING SYSTEMS</b>	<b>5-31</b>
		OIL & TEMPERATURE WARNING SYSTEMS	5-31
TRIM ROD & CAP - 3 RAM INTEGRAL	8-28	OIL LEVEL SENSOR (SWITCH)	5-40
REMOVAL & INSTALLATION	8-28	TEMPERATURE SWITCH (WARNING SYSTEM)	5-38
TRIM SENDER & GAUGE - 3 RAM INTEGRAL	8-33	WATER PUMP	5-19
ADJUSTING AN ANALOG SENDER	8-34	CLEANING & INSPECTION	5-31
TESTING THE TRIM SENDER	8-33	REMOVAL & INSTALLATION	5-19
TRIM SENDER & GAUGE WIRING	8-34		
		WATER SENSOR - EFI	3-60
TRIM/TILT SYSTEMS		DESCRIPTION, OPERATION & TESTING	3-60
GAS ASSIST TILT SYSTEM	8-6		
MECHANICAL TILT (UNASSISTED)	8-2	WINTERIZATION	2-75
PTT - SMALL MOTOR, SINGLE RAM INTEGRAL	8-10	PREPPING FOR STORAGE	2-75
PTT - MID-RANGE MOTOR, SINGLE RAM INTEGRAL	8-14	STORAGE CHECKLIST	2-75
PTT - 3 RAM INTEGRAL	8-23		
		WIRE & CONNECTOR REPAIR	4-7
<b>TROUBLESHOOTING</b>			
BASIC OPERATING PRINCIPLES	1-13	<b>WIRING DIAGRAMS</b>	<b>4-61</b>
CARBURETOR	3-15	INDEX	4-61
COMMANDER SIDE MOUNT REMOTE	9-2		
COOLING SYSTEM	5-12	ZINCS	2-24
CHARGING CIRCUIT	4-38	INSPECTION	2-25
DFI	3-73	SERVICING	2-25
EFI	3-43		
ELECTRICAL SYSTEMS	4-6	2-STROKE OIL	2-12
HAND REWIND STARTER	10-2	FILLING	2-12
IGNITION SYSTEMS	4-11	FUEL:OIL RATIO	2-12
LOWER UNIT	7-3	OIL INJECTION	2-13
OIL INJECTION SYSTEM	5-2	OIL RECOMMENDATIONS	2-12
PTT - SMALL MOTOR, SINGLE RAM INTEGRAL	8-10	PRE-MIX	2-13
PTT - MID-RANGE MOTOR, SINGLE RAM INTEGRAL	8-15		
PTT - 3 RAM INTEGRAL	8-23		
TILLER HANDLE	9-16		
WARNING SYSTEM ACTIVATION	5-32		