



For detailed operation info, refer to the User's Guide

TracPhone FB250 & FB500 Quick Reference Guide

Making a Voice Call

From the FleetBroadband Terminal:

Dial **00** <country code> <phone number> # *or*
Default Configuration Overrides:
For Standard Voice, dial **1*** first
For 3.1 kHz Audio, dial **2*** first



To the FleetBroadband Terminal, Direct:

Dial **+870** <mobile number>

To the FleetBroadband Terminal, MobileLink:

Dial **1-877-202-0367** (N. America) or **+1 718 269 7806** (Intl.)
Select a language, then dial <**6-digit MobileLink number**> #

To a Local Handset:

Dial <**4-digit handset number**> # *or*
Analog phone: 0301, 0302
IP handset: 0501-0516
ISDN phone: 0401, 0402 (*FB500 only*)



Sending a Fax

From the FleetBroadband Terminal:

Dial **00** <country code> <phone number> #
Default Configuration Overrides:
For analog (G.3) fax via 3.1 kHz Audio, dial **2*** first
For ISDN (G.4) fax via UDI, dial **3*** first (*FB500 only*)

To the FleetBroadband Terminal, Direct:

Dial **+870** <3.1 kHz Audio mobile number>

To the FleetBroadband Terminal, MobileLink:

Dial **1-877-202-0367** (N. America) or **+1 718 269 7806** (Intl.)
Select a language, then dial <**6-digit MobileLink number**> #
and initiate the fax (press Send) before you hear the beeps

Accessing the Internet

Turn on any computer connected to the terminal, then open your web browser or e-mail program

Using the Web Server

Accessing the Web Server:

Enter **192.168.0.1** into your web browser

The screenshot shows a web server interface with a sidebar menu on the left and a main content area on the right. Callouts A through G point to specific elements:

- A**: SIGNAL: Quality of signal received by the antenna (More solid bars = better satellite signal strength)
- B**: PROPERTIES: General system info, including connection status, serial number, and software version
- C**: SESSIONS TOTAL: Cumulative time connected via voice and Streaming; total MB transferred via Standard data
- D**: MAIN MENU: Click an item to view its options (example: click Messages to view SMS text messaging options)
- E**: ONGOING DATA SESSIONS/CALLS: Currently active data and voice connections (click Refresh to update)
- F**: PROFILES: Data connections available to your computer (click Start to connect; click Stop to disconnect)
- G**: REFRESH: Click to update the status information

Item Description

Item	Description
A	SIGNAL: Quality of signal received by the antenna (More solid bars = better satellite signal strength)
B	PROPERTIES: General system info, including connection status, serial number, and software version
C	SESSIONS TOTAL: Cumulative time connected via voice and Streaming; total MB transferred via Standard data
D	MAIN MENU: Click an item to view its options (example: click Messages to view SMS text messaging options)
E	ONGOING DATA SESSIONS/CALLS: Currently active data and voice connections (click Refresh to update)
F	PROFILES: Data connections available to your computer (click Start to connect; click Stop to disconnect)
G	REFRESH: Click to update the status information IMPORTANT! Status does not update in real time