




This guide provides basic operation information for the TracPhone V3-IP. For complete operation, setup, and diagnostics information, refer to the system's comprehensive Help, available on the Support tab of the TracPhone V3-IP web interface. If you need any assistance, please contact KVH Technical Support.

Technical Support

North/South America, Australia:
 Phone: 1 866 701-7103 (*U.S. only*)
 Phone: +1 401 851-3806
 E-mail: mvbsupport@kvh.com

Europe, Middle East, Asia, Africa:
 Phone: +45 45 160 180
 E-mail: mvbsupport@kvh.com


How to Turn On the System

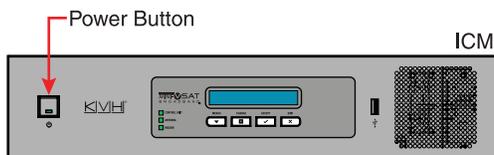

Press the power button on the Integrated CommBox™ Modem (ICM), wait 5 minutes for system startup, then turn on your network computer(s). When the ICM indicates “Online,” you are connected to the mini-VSAT BroadbandSM service.

The antenna requires a clear view of the sky. Objects such as bridges and boat masts can block satellite signals.

Caution – RF Radiation Hazard

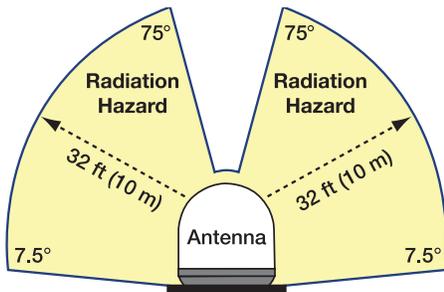

The antenna transmits radio frequency (RF) energy that is potentially harmful. Whenever the system is in use, make sure everyone stays more than 32 feet (10 m) away from the antenna. No hazard exists directly below the antenna.

You can program up to two no-transmit zones to prevent transmissions and protect people in accessible areas around the antenna. Refer to the Help for details.


How to Access the Web Interface



Start your web browser and enter **http://minivsat.kvh**. If this web address doesn't work on your platform/browser, enter the ICM's IP address (you can find this address on the LCD: go to Settings > Network Settings > IP Assignments).

You can also use the mini-VSAT iPhone®/iPod touch® app to view system status information and update software. Download the app for FREE from the Apple iTunes® store.

How to Make a Voice Call – Ship to Shore

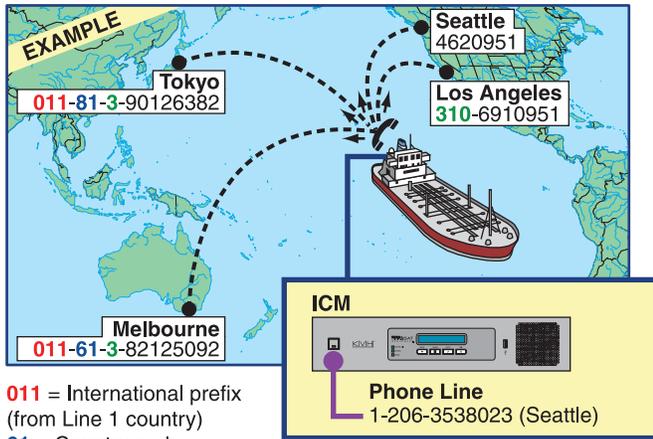

011 = International prefix (from Line 1 country)
 61 = Country code
 3 = Area/City code
 82125092 = Local phone no.


How you dial depends on the phone number assigned to Line 1.

To call outside the country assigned to Line 1:
 Dial <Int'l Prefix>+<Country>+<Area>+<Phone No.>

To call within the country assigned to Line 1:
 Dial <Area>+<Phone No.>

To call within the country & area code assigned to Line 1:
 Dial <Phone No.>

How to Make a Voice Call – Shore to Ship

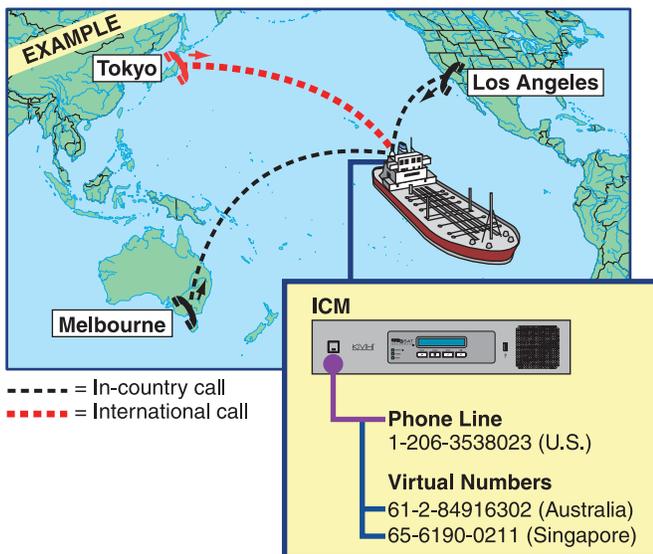

----- = In-country call
 - - - - - = International call

People on shore call your vessel by dialing your vessel's phone number. If they call within the same country code as the vessel's phone number, they may avoid international calling charges. If they call from within the same area code, they may avoid long-distance fees.

You can choose the country code and area code of your vessel's phone number. For an additional monthly fee, you can also add up to five "virtual numbers" to your phone line. For details, contact KVH's Satellite Airtime & Product Activation department (*see www.kvh.com/mvbcustomercenter for contact information*).

Online Resources

Service Activation

www.kvh.com/mvbservice

Customer Support

www.kvh.com/mvbcustomercenter

Coverage Map

www.kvh.com/minivsatmap



www.kvh.com/commbox



www.kvh.com



KVH Industries, Inc.
 World Headquarters
 Middletown, RI U.S.A.
 Tel: +1 401 847 3327 Fax: +1 401 849 0045
 E-mail: info@kvh.com

KVH Industries A/S
 EMEA Headquarters
 Kokkedal, Denmark
 Tel: +45 45 160 180 Fax: +45 45 160 181
 E-mail: info@emea.kvh.com

KVH Industries Pte Ltd.
 Asia-Pacific Headquarters
 Singapore
 Tel: +65 6513 0290 Fax: +65 6472 3469
 E-mail: info@asia.kvh.com

KVH Industries Norway AS
 Regional Office
 Horten, Norway
 Tel: +47 33 03 05 30 Fax: +47 33 03 05 31
 E-mail: info@no.kvh.com