



CARE AND USE GUIDE

Hydration Bottle

GENERAL CARE

- Before first use, wash all parts with warm, soapy water. Rinse all parts thoroughly and allow time to dry.
- Contents should not be left in the container for longer than 24 hours. As soon as possible after each and every use, wash all parts with warm, soapy water. Rinse all parts thoroughly with clean water. Allow all parts to dry completely prior to next use or storage.
- DO NOT use abrasive cleaners or scrubbers since they may dull the finish.
- DO NOT use bleach or cleaners containing chlorine on any parts of the product.
- This product is top-rack dishwasher safe; however, hand washing is recommended as the dishwasher uses harsher detergents and hot water that may affect the appearance of your product.
- Residual liquids, foods, or other contents may become trapped between product components, such as lid parts, container parts, gaskets (flexible band around lid and/or stopper), or straws (if present in the product). Although this product is top-rack dishwasher safe, hand washing is recommended to ensure that all parts of the product are thoroughly cleaned.

ASSEMBLY & USE

Hard Spout Lid (If Present):

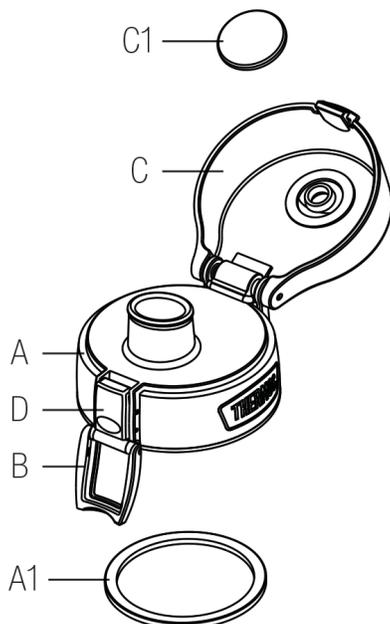


Image for reference only: actual product may vary

1. Remove lid (A) by twisting counterclockwise.
2. Pull down the locking-ring (B) (if present) located on lid (A). Press the push-button (D) on the lid (A) to open lid cover (C).
3. Pull out spout gasket (C1) from underside of lid cover (C) to completely remove it.
4. Remove o-ring gasket (A1) from underside of lid (A).
5. Wash all parts separately and re-assemble.
 - a. Ensure gaskets (A1 and C1) are properly seated to minimize leaking
6. Fill container with contents. Do not overfill: Leave space for lid (A) to avoid overflow.
7. Replace the lid (A) by twisting it clockwise.
8. To drink, pull down the locking-ring (B) (if present) located on lid (A). Push the button (D) located on the lid (A), which will release the lid cover (C) and reveal the drink opening.
9. When finished drinking, close and lock the lid cover (C) by securing the locking-ring (B) (if present) over the push-button (D).

Soft Spout Lid (If Present):

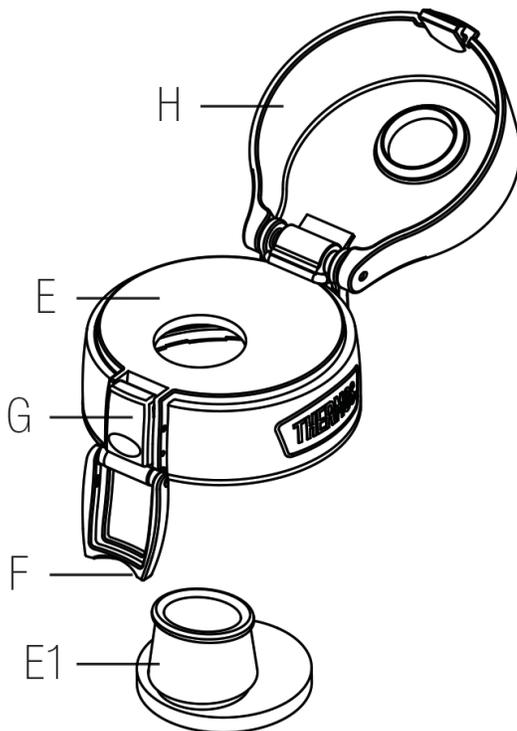


Image for reference only: actual product may vary

1. Remove lid (E) by twisting counterclockwise.
2. Pull down the locking-ring (F) located on lid (E). Press the push-button (G) on the lid (E) to open lid cover (H).
3. Pull out soft spout gasket (E1) by pulling from the top of (E1) through the top of lid (E) to completely remove it.
4. Wash all parts separately and re-assemble.

- a. Fold flat portion of soft spout gasket (E1) in half and feed through the top of the lid (E).
 - b. Ensure gasket (E1) is properly seated to minimize leaking
5. Fill container with contents. Do not overfill: Leave space for lid (E) to avoid overflow.
6. Replace the lid (E) by twisting it clockwise.
7. To drink, pull down the locking-ring (F) located on lid (E). Push the button (G) located on the lid (E), which will release the lid cover (H) and reveal the drink opening.
8. When finished drinking, close and lock the lid cover (H) by securing the locking-ring (F) over the push-button (G).

Flip-Up Straw Lid (If Present):

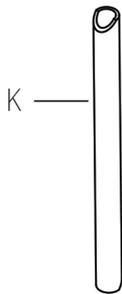
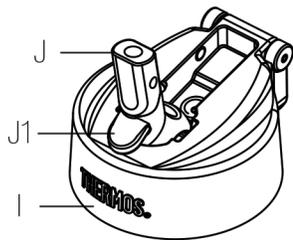


Image for reference only: actual product may vary

1. Remove lid (I) by twisting counterclockwise.
2. Pull on the straw tab (J1) on the sipper straw (J) to open.
3. Pull the straw stem (K) out of bottom of the lid (I).
4. Wash all parts separately and re-assemble.
5. Fill container with contents. Do not overfill: Leave space for the lid (I) and straw stem (K), to avoid overflow.
6. Replace lid (I) by twisting clockwise.
7. To drink, pull on the straw tab (J1) on the sipper straw (J) to open.
8. When finished drinking, press the sipper straw (J) down to closed position.

Flip- Top Lid (If Present):

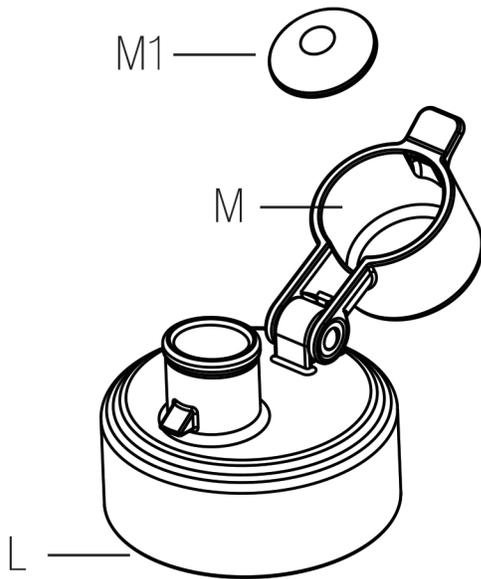


Image for reference only: actual product may vary

1. Remove lid (L) by twisting counterclockwise.
2. Flip up the lid cover (M) until locked in the open position as shown in diagram.
3. Pull out spout gasket (M1) from underside of lid cover (M) to completely remove it.
4. Wash all parts separately and re-assemble.
 - a. Ensure the spout gasket (M1) is completely positioned on the underside of lid cover (M).
5. Fill container with contents. Do not overfill: Leave space for lid (L) to avoid overflow.
6. Replace the lid (L) by twisting it clockwise.
7. To drink, flip up the lid cover (M) until locked in the open position as shown in diagram.
8. When finished drinking, flip the lid cover (M) in the opposite direction to cover the drink opening. Ensure that the lid cover (M) is pressed until tightly closed.

WARNINGS

- **NOT FOR USE WITH HOT LIQUIDS:** For cold liquids only. Hot liquids may cause burns or scald user.
- **DO NOT** use product in microwave, on stove top, or in any type of oven.
- Use only with adult supervision.
- Always test temperature of food or liquid before feeding to your child.
- Never leave child unattended while using this product.
- To avoid possible injury, do not let child walk or run with product.
- To avoid possible injury, do not let child chew or teethe on the soft or hard material of the spout as it may present a choking hazard.
- Continuous and prolonged sucking of fluids such as fruit juices or flavored sugary drinks may cause tooth decay.
- **DO NOT** overfill the container: Leave space at top of container for lid, straw (if present) and stopper (if present), to avoid overflow.
- In general, contents should not be left in container for longer than 24 hours. However, the rate at which contents spoil depends on several factors. Certain contents that

include, for example, dairy and/or tomato may start to spoil sooner. Proceed with caution when using the product with quick spoiling contents.

- If contents are left in container longer than 24 hours, or you suspect spoilage, use caution when opening container. Contents spoilage can cause pressure inside container to build, possibly leading to forceful ejection of stopper or contents. In such circumstances, before attempting to open container, ENSURE THE OPENING IS POINTED AWAY FROM THE USER OR OTHER PERSONS TO AVOID INJURY.
- DO NOT use tools or devices to force container to open.
- If you are unable to open container by hand, do not open it and dispose of it at your local waste facility.
- DO NOT use to store or carry carbonated drinks or dry ice. This may cause lid/stopper and contents to eject forcefully or leak.

LIMITED WARRANTY

Thermos L.L.C. warrants this Genuine Thermos Brand product to be free from defects in material or workmanship for one year from date of purchase. This warranty does not cover ordinary wear and tear or color fading, or any condition affected by abuse, neglect, alteration, accident or improper use or maintenance.

We will, at our option, repair or replace any product component part that fails to conform to this warranty within 30 days after its receipt by our factory service department. IN NO EVENT WILL THERMOS BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES.

Some jurisdictions do not allow the exclusion of incidental, consequential or special damages, so the preceding exclusion may not apply to you.

This is a factory guarantee.

Please do not return this product to the retailer.

Send defective unit or component along with written explanation of defect directly to:

Thermos L.L.C. - Warranty Service

355 Thermos Road Batesville, MS 38606, USA

1-800-831-9242

www.thermos.com

In Canada:

1-800-669-7065

www.thermosbrand.ca

This warranty gives you specific legal rights and you may also have other rights, which vary from state to state or province to province.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REPRESENTATIONS OR CONDITIONS OF QUALITY AND PERFORMANCE, WHETHER WRITTEN, ORAL OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SUCH IMPLIED WARRANTIES, REPRESENTATIONS AND CONDITIONS ARE HEREBY DISCLAIMED. THE REMEDIES STATED HEREIN CONSTITUTE PURCHASER'S EXCLUSIVE REMEDIES AND THERMOS'S ENTIRE LIABILITY FOR ANY BREACH OF WARRANTY

© 2017 Thermos L.L.C. All rights reserved.

THERMOS is a registered trademark in over 115 countries.