

Printing a Mounting Template

NOTICE


It is not recommended that you print a mounting template on your own. Use the template that came in the product box.

If you do print the template, you must follow these instructions for printing a mounting template precisely. To print large templates, you need large enough paper and printer. Failure to have the correct sized paper and printer, or a failure to follow these instructions, may result in an incorrectly sized template and therefore an incorrect cutout (too large or too small) on the mounting surface of your boat.

- 1 Select File > Print.
- 2 Select Actual Size 1 for Page Sizing & Handling.
- 3 Drag the arrow 2 to the right, to view page 2 in the window below.
- 4 Verify that the paper size is larger than the template 3.
 In this example, the paper is not larger than the template.
- 5 If the paper size is not large enough, select Properties 4 and select a Paper Size that is larger than the template.

NOTICE

Garmin is not responsible for any damages or expenses resulting from a miscut mounting surface arising from a failure to follow these instructions.

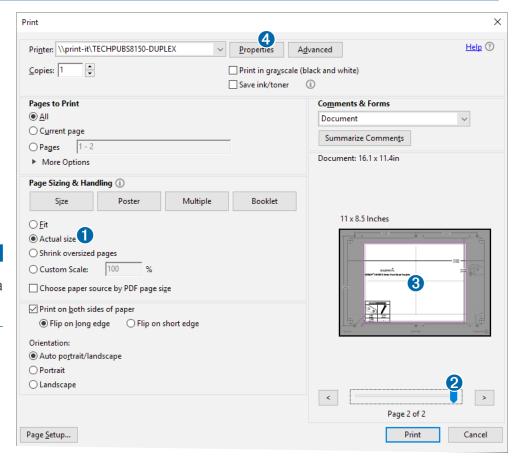

FUS GN® **Signature Series 12" Subwoofer** Ø 306 mm (12 in.) © 2020 Garmin Ltd. or its subsidiaries November 2020 Printed in China