
# SEAVIEW// ELEVATE YOUR ELECTRONICS

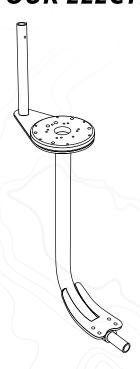

## **INSTALLATION INSTRUCTIONS**

For Seaview Light Bars:


LTBSF, LTBSF2 & LTBSF4


Refer to website for most up to date instructions and videos.

WWW.SEAVIEWGLOBAL.COM

#### **PARTS INCLUDED**


#### LTB-SF PARTS

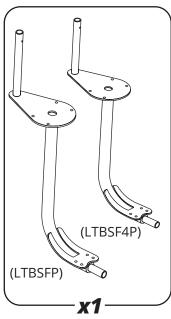

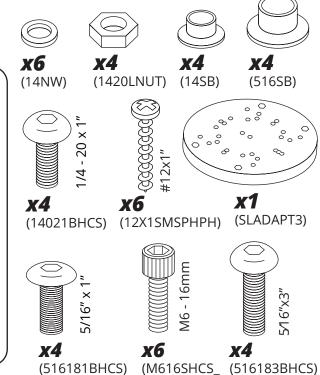


PATCH)


### **TOOLS NEEDED**

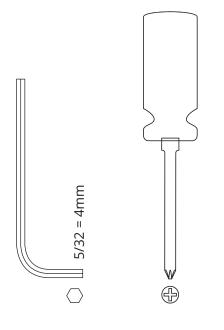

Install your light, adapter or box onto the light bar by following the instructions that came with the optional accessory.

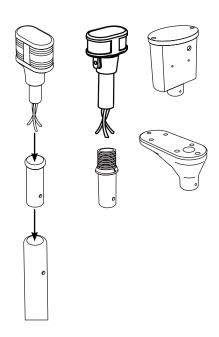


Insert the four nuts into the adapter plate. This has most likely been done for you.

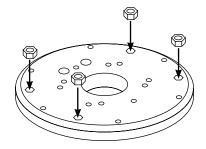


**3A** :

Drill small pilot hole for #12 screws. Refer to the drill template on the last page for drill location. Using a phillips head screwdriver screw in the six #12x1" screws to secure the camera to the adapter plate. (For #LTBSF2 & LTBSF4 only)

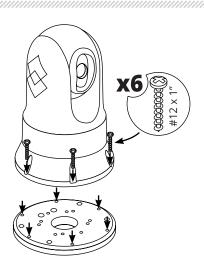


3**B** 

Secure the camera or search light assembly to the light bar using the four 1/4-20x1" bolts and nylon shoulder washers.

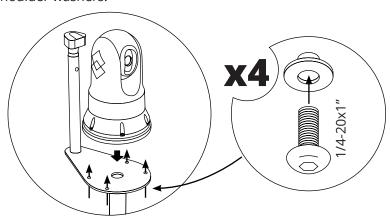


**4**A

Drill holes for M6 bolts. Refer to the drill template on the last page for drill location. Using an Allen wrench, screw in the six M6 - 16mm bolts to secure the camera to the adapter plate. (For #LTB-SF only)

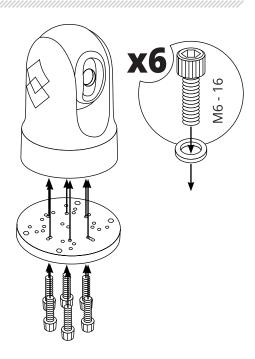




Secure the camera or search light assembly to the light bar using the four 1/4-20x1" bolts and nylon shoulder washers.

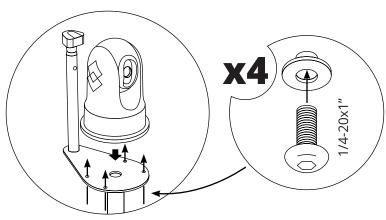


5

Insert the light bar into the light bar hole located on the back of the Seaview mount.

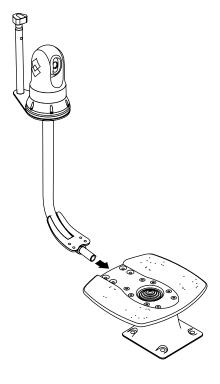


**6**A

Using the four 5/16x1" bolts and nylon shoulder washers, secure the light bar by bolting it to the top plate.

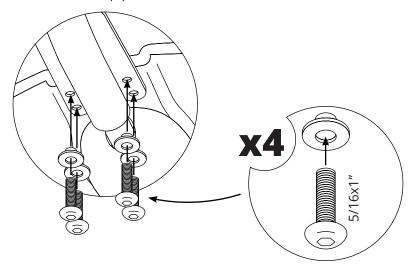



When using the Seaview #SP1-MOD or #SP2-MOD Spreader Kits use the 5/16x3" bolts.

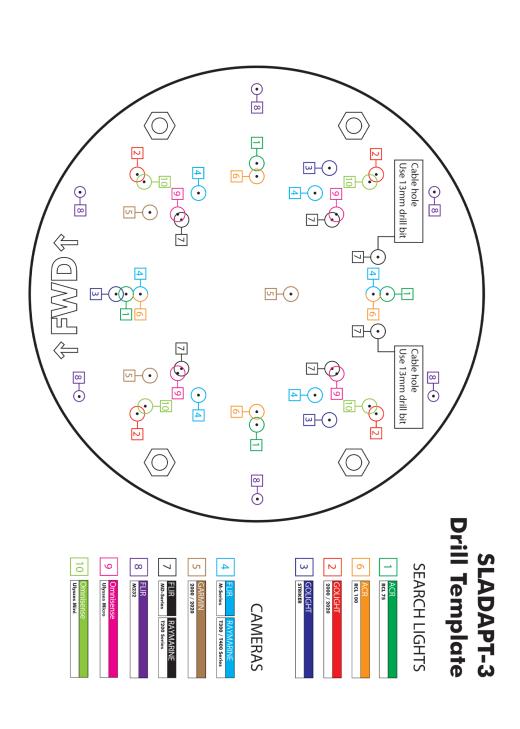



**SEAVIEW**//

Tel: 800-655-7922 www.seaviewglobal.com

**EUROPEAN OFFICE** 

Tel: +33 4 94 53 27 70 www.seaviewprogress.com