

Item Number
RAM-VB-192-SW1

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the NISSAN NV200 (2013)

SPECIFICATIONS

Placement

Passenger side, in front, where seat frame meets floor board.

Drilling Required

None - uses existing seat bolts

Seat Configuration

Bucket

Construction/Finish

Steel/Black Powder coat

Note: Will limit forward most seat travel on passenger side.

Dimensions


A = 16.88", B = 9.5", C = 1.55"
Hole Centers = 15" to 15.5625"

Features

Installs in minutes with no drilling required
Won't interfere with levers



Complete Vehicle Mount
RAM-VB-192-SW1

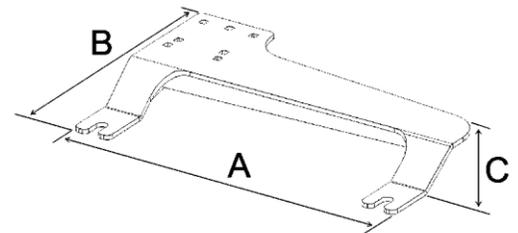

Vehicle Base

National Products, Inc.
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
Website: www.ram-mount.com
Email: staff@ram-mount.com



Item Number
RAM-VB-192-SW1

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the NISSAN NV200 (2013)

INSTALLATION INSTRUCTIONS

1. If you purchased a complete No-Drill™ system, you will want to attach products to the base before installation. This includes, risers, stabilizer feet, and lower female pole units. It is much more difficult to attach these items once the base is in place.
2. Remove the plastic caps covering the front passenger side seat bolt hex heads.
3. Using a socket wrench, loosen the two hex bolts enough to allow space for the base to slide underneath the seat legs.
4. Slide the base under the seat legs so the back of the slots touches the seat leg bolts.
5. Re-tighten the seat leg bolts and replace the plastic caps over the hex bolts.



National Products, Inc.
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
Website: www.ram-mount.com
Email: staff@ram-mount.com

