

STEELIE®


PEDESTAL KIT & HOBKNOB KIT

APPLY TABLET SOCKET, WITH THE INCLUDED 3M™ VHB™ FOAM ADHESIVE. TO SURFACES 60°F (16°C) OR HIGHER.

DO NOT USE THIS PRODUCT ON SOFT, FLEXIBLE TABLET CASES. THESE CASES ARE NOT RIGID ENOUGH TO HOLD THE TABLE SOCKET.

TABLET SOCKET INSTALLATION INSTRUCTIONS:

1. CLEAN THE BACK OF THE TABLET OR TABLET CASE WITH THE ENCLOSED ALCOHOL PAD. LET DRY. DO NOT USE HOUSEHOLD CLEANERS.
2. REMOVE THE ADHESIVE BACKING FROM THE TABLET SOCKET.
3. POSITION THE TABLET SOCKET IN THE CENTER OF THE DEVICE AND FIRMLY PRESS INTO PLACE.
4. WAIT AT LEAST 1 HOUR FOR ADHESIVE TO BOND BEFORE USING THE STEELIE. PLACE DEVICE FACE UP SO WEIGHT OF DEVICE HELPS SECURE THE BOND.
- 5A. **FOR PEDESTAL KIT:** SNAP TABLETOP STAND INTO TABLETOP STAND BASE, MAKING SURE STAND IS FULLY INSERTED INTO BASE. POSITION DEVICE ON TABLETOP STAND.

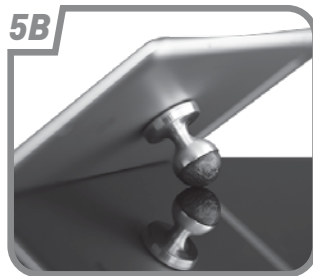

5B. FOR HOBKNOB KIT: CONNECT HOBKNOB HANDLE TO DEVICE.



WARNING!—PLEASE READ

FOR HOBKNOB KIT ONLY: DO NOT CONNECT TABLET SOCKET TO HOBKNOB HANDLE BEFORE INSTALLING TABLET SOCKET ONTO DEVICE. UNATTACHED, THE TWO ARE VERY DIFFICULT TO SEPARATE.

REMOVAL INSTRUCTIONS:

1. APPLY A FEW DROPS OF RUBBING ALCOHOL BETWEEN THE DEVICE AND THE TABLET SOCKET TO BREAK THE ADHESIVE BOND AND ALLOW REMOVAL OF TABLET SOCKET.
2. DO NOT RE-USE 3M ADHESIVE. NEW ADHESIVES CAN BE PURCHASED AT WWW.NITEIZE.COM.

MAGNET WARNING—PLEASE READ

THE STEELIE CONTAINS A STRONG MAGNET. THE MAGNET WILL NOT DAMAGE PHONES OR TABLETS WITH SOLID STATE HARD DRIVES (INCLUDING IPHONES, IPADS, ETC.) AS APPLE HAS SHOWN WITH THE IPAD SMARTCOVERS.

HOWEVER, MAGNETS CAN DAMAGE SENSITIVE OBJECTS INCLUDING PACEMAKERS, COMPUTER HARD-DRIVES, FLOPPY DISKS, CREDIT CARDS, MAGNETIC I.D. CARDS, CASSETTE TAPES, VIDEO TAPES AND OTHER SIMILAR ITEMS. CERTAIN TELEVISIONS, VCRS, COMPUTER MONITORS AND OTHER CRT DISPLAYS MAY ALSO BE AFFECTED. NITE IZE ASSUMES NO LIABILITY FOR DAMAGE TO SUCH OBJECTS.

KEEP OUT OF REACH OF CHILDREN. MAGNETS CAN BE HARMFUL IF SWALLOWED.