

TRANSOM CLAMP INSTALLATION INSTRUCTIONS

Included hardware:


- A** Qty. (1) Transom clamp
- B** Qty. (4) Micro clamp bolts
- C** Qty. (4) 5/16" lock nuts

Installation tools:


- 1/4" Allen wrench (Included with Micro anchor)
- 1/2" wrench or 1/2" socket with ratchet

Installation Instructions:

Step 1 Install the adjustable mounting bracket onto transom clamp using supplied hardware **Fig.1**

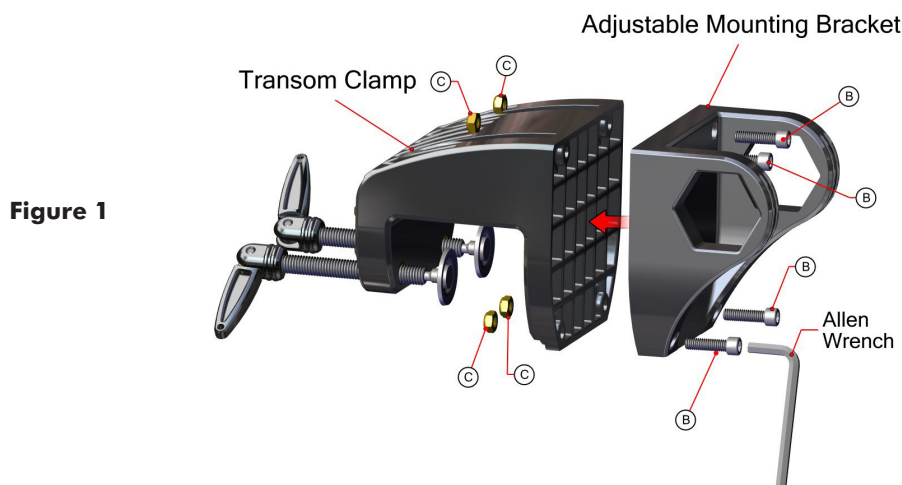

Step 2 Mount to transom by turning swivel clamp bolts clockwise and counter clockwise to loosen **Fig. 2**

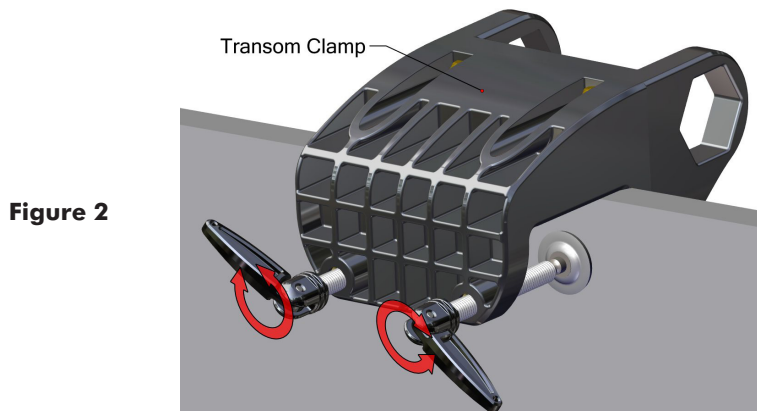

Need help? Contact our Technical Support Team at **1 + 813.689.9932 Option 2**