
## **SEAVIEW!**

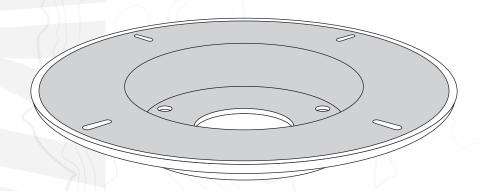

# INSTALLATION INSTRUCTIONS


For Low Profile Satdome Adapter:


AMA-18, AMA-24

Refer to website for most up to date instructions and videos.

WWW.SEAVIEWGLOBAL.COM

### **PARTS INCLUDED**

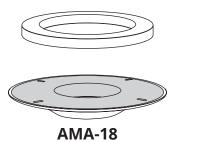


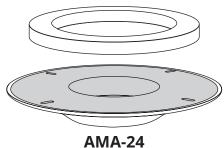


#### **TOOLS NEEDED**




Sudbury Elastomeric Marine Sealant is recommended. To purchase call 800-655-7922 or visit www.seaviewglobal.com




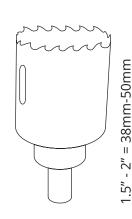




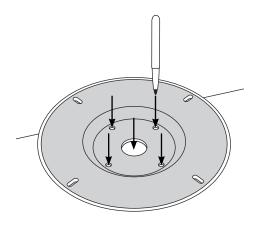

Using a 5/16" (8mm) drill bit, drill the four base bolt holes and center cable hole.

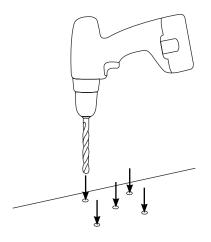


Use a 1½" to 2" (38mm to 50mm) hole saw for the center cable hole.

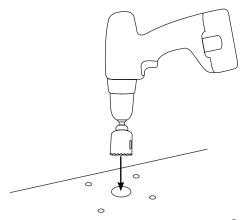




Peel off the clear protective cover on the mount. This may have already been done for you.

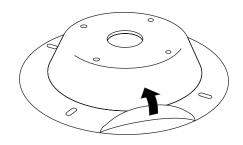





Apply marine adhesive sealant to the base of the mount. Be sure to go around the base holes.

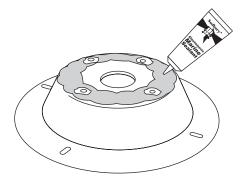




Align the four mounting holes.

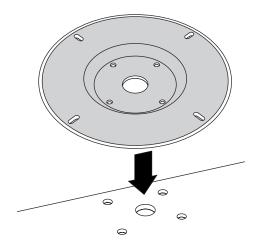

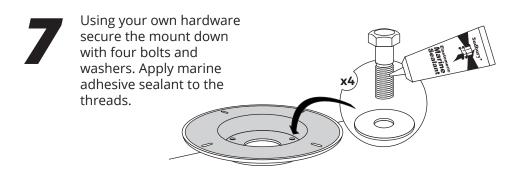


8

Route cables through the Low Profile Adapter.

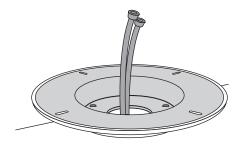


9

Apply the foam gasket to the top of the mount.

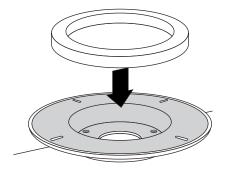


Mount the satellite dome to the mount, make sure that the four mounting holes line up.

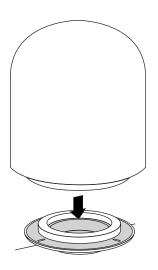

11


Using your own hardware secure the satellite dome to the mount using four bolts and washers. Apply marine adhesive sealant to the threads of the bolts.

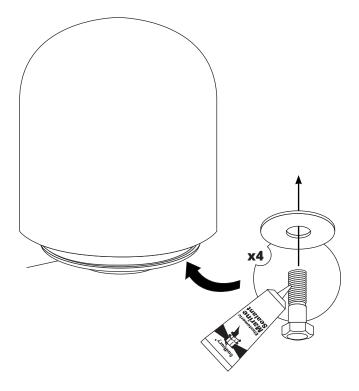

### **OPTIONAL ACCESSORIES**

Call 800-655-7922 or visit www.seaviewglobal.com for available accessories.

#### WEDGE

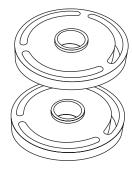

#### AMA-W

Fits all Low Profile Satdome Adapters. Allows for 0 - 12 degrees of adjustement.



**SEAVIEW**//

Tel: 800-655-7922 www.seaviewglobal.com

**EUROPEAN OFFICE** 

Tel: +33 4 94 53 27 70 www.seaviewprogress.com