


SEAVIEW

ELEVATE YOUR ELECTRONICS

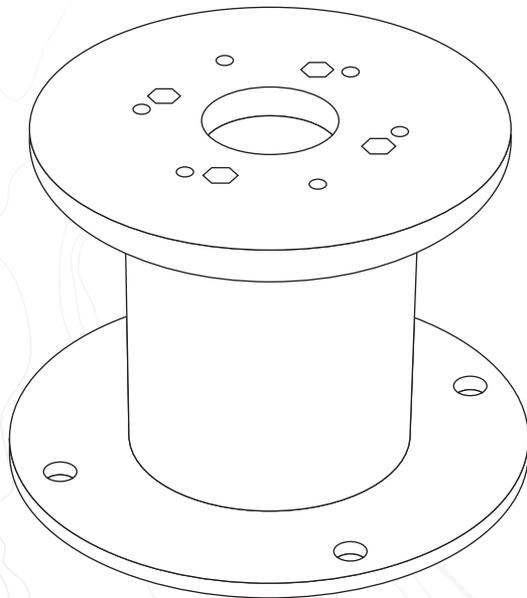

INSTALLATION INSTRUCTIONS


For Seaview Camera Mount:

PM5-FMT-8


Refer to website for most up to
date instructions and videos.

WWW.SEAVIEWGLOBAL.COM

PARTS INCLUDED

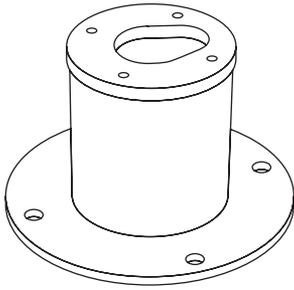

x1

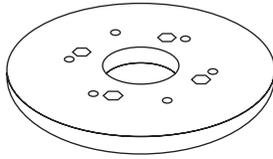

x1




x6

M6 x 12



x4

1/4 - 20 x 7/8"



x4




x4




x4




TOOLS NEEDED

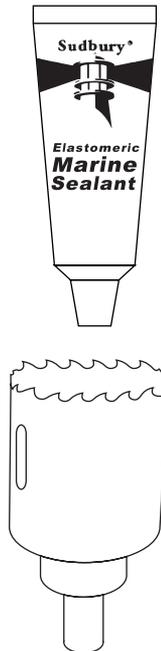


Sudbury Elastomeric Marine Sealant is recommended. To purchase call 800-655-7922 or visit www.seaviewglobal.com

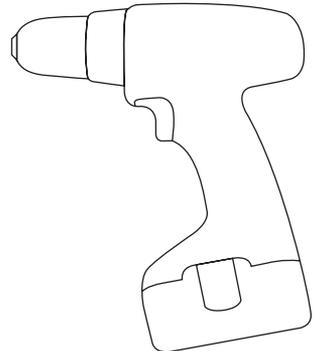


1 Mark the four base holes for drilling.

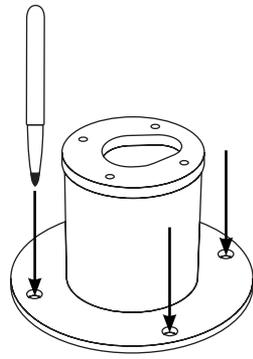


2 Drill the four holes.

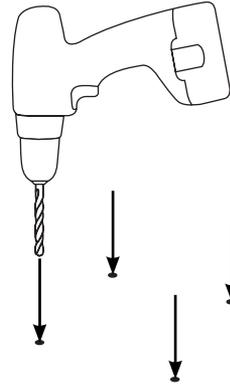


3 Using a hole saw, drill a hole for the cable.

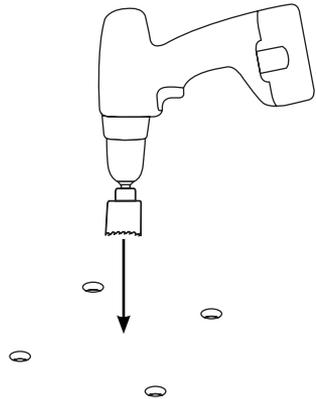


- 4** Insert the four nuts into the adapter plate as shown. Note that this may have already been done for you.

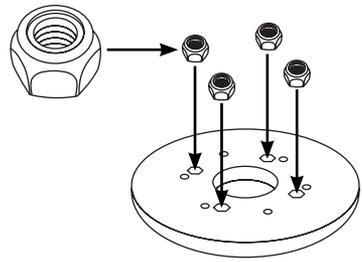

- 5** Route the cables through the adapter plate and secure the camera to the adapter plate using the provided six M6x12 bolts.

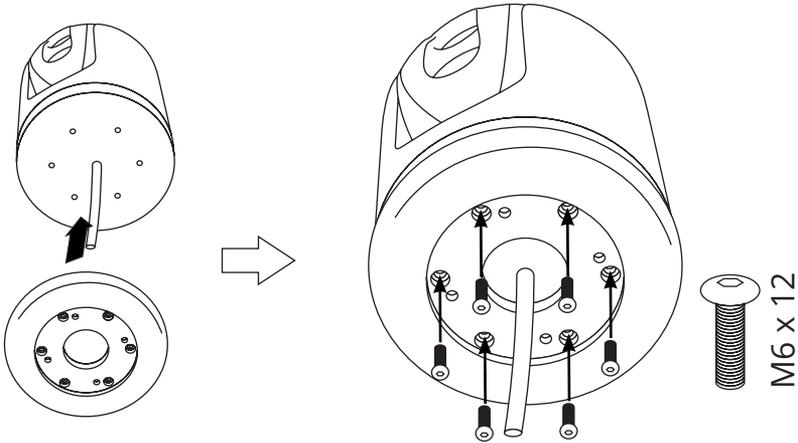


- 6** Route the cables and place the assembly onto the PM5-FMT-8 mount.

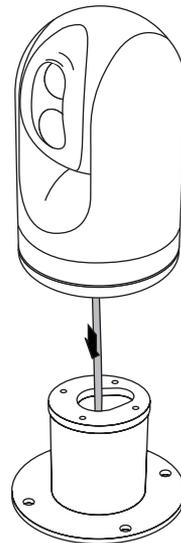


7

Secure the assembly using the provided four washers and 1/4-20x7/8" bolts.

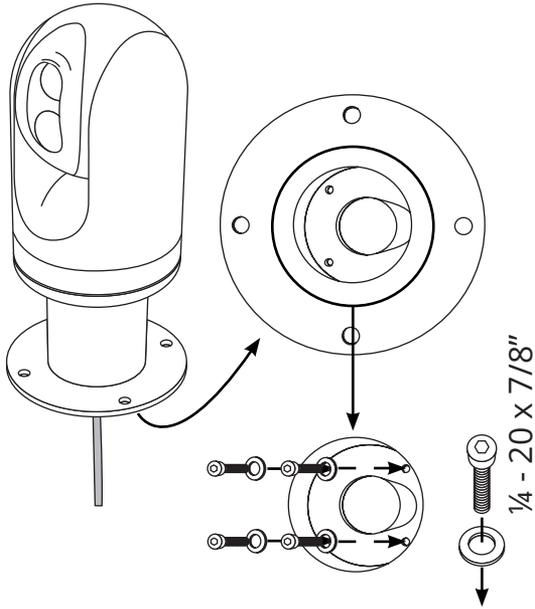


8

Apply marine adhesive sealant to the base of the mount.

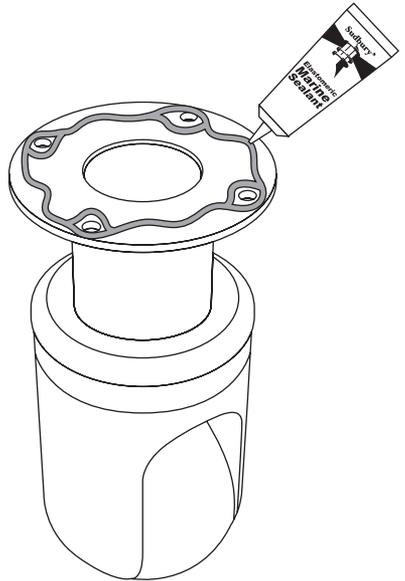


9

Route the cables through the mounting surface and place mount onto surface.

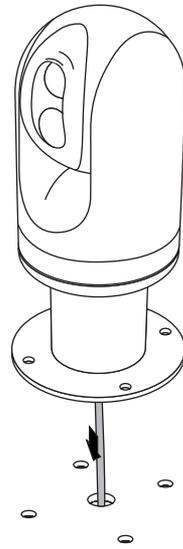

10

Apply marine adhesive sealant to the four nylon shoulder washers and insert into the four bolt holes on the base. Use your own hardware to secure mount into place.

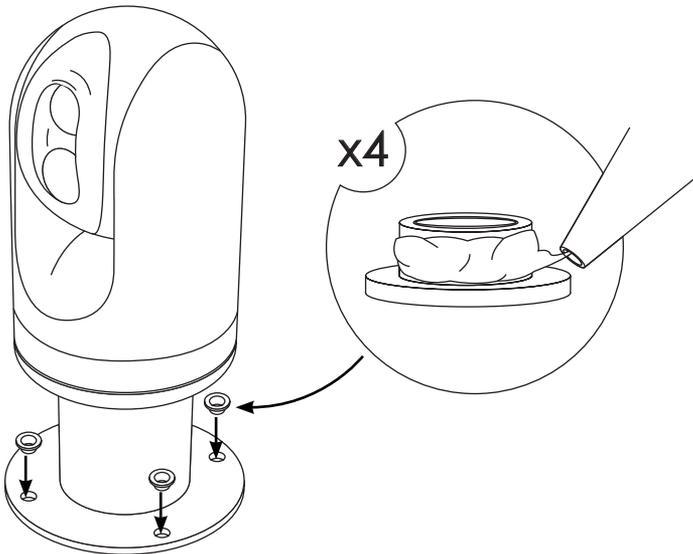

This page is intentionally left blank.

The background of the entire page is a light gray topographic map with white contour lines. The lines are irregular and wavy, representing terrain elevation. The map covers the entire page, with the text elements overlaid on it.

SEAVIEW///
ELEVATE YOUR ELECTRONICS

SEAVIEW///

Tel: 800-655-7922
www.seaviewglobal.com

EUROPEAN OFFICE

Tel: +33 4 94 53 27 70
www.seaviewprogress.com

1-010819