
SEAVIEW// ELEVATE YOUR ELECTRONICS

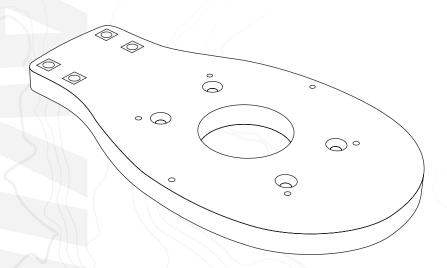

INSTALLATION INSTRUCTIONS


For Seaview Modular Top Plate:

ADA-F2


Refer to website for most up to date instructions and videos.

WWW.SEAVIEWGLOBAL.COM


PARTS INCLUDED

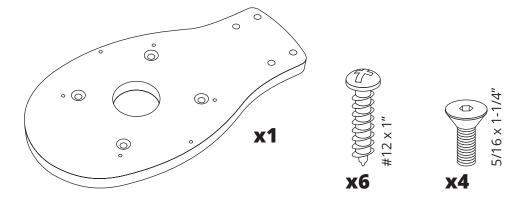


TOOLS NEEDED

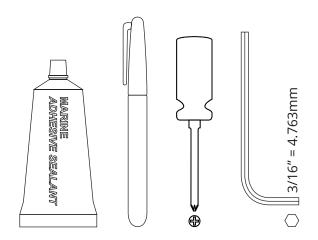


Insert rubber gasket onto the top of the Seaview mount. (Rubber gasket included with Seaview Mount.)

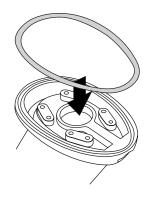


Place the ADA-F2 ontop of the mount.

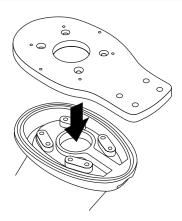


Secure the ADA-F2 with the four bolts using an allen 3/16" wrench.

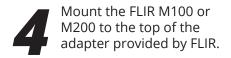

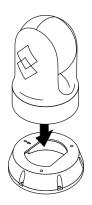


Secure the FLIR M100 or M200 to the adapter with the hardware specified by your electronics manufacturer.

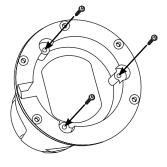


Place the FLIR camera ontop of the ADA-F2 top plate.


Make sure that the six holes on the adapter line up with the six holes on the top plate.

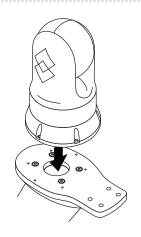

Secure the adapter to the ADA-F2 top plate using the provided six #12 x 1" screws with a philips head screwdriver.

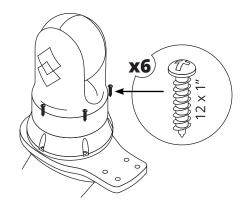

The four holes on the back of the ADA-F2 are for securing the optional Seaview Light Bar to the top plate.

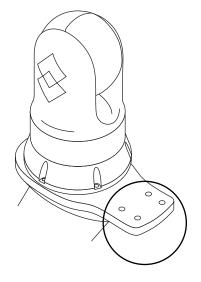

This page is intentionally left blank.

This page is intentionally left blank.



SEAVIEW//

Tel: 800-655-7922 www.seaviewglobal.com

EUROPEAN OFFICE

Tel: +33 4 94 53 27 70 www.seaviewprogress.com