



RAM® FORM-FIT CRADLE HOLDER ASSEMBLY INSTRUCTIONS FOR RUGGED USE

HARDWARE INDEX:

- A. TORX DRIVE T-5H WRENCH (QTY. 1)
- B. #2 X 1/2" SHEET METAL SCREW (QTY. 4)
- C. #8-32 X 3/4" MACHINE SCREW (QTY. 2)
- D. #8-32 X 5/8" MACHINE SCREW (QTY. 2)
- E. #8-32 X 1/2" MACHINE SCREW (QTY. 2)
- F. #8-32 NYLOCK NUT (QTY. 2)

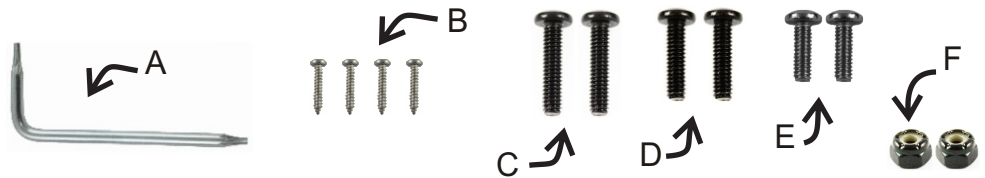

1. INSERT (F) NUTS INTO FRONT POCKETS OF CRADLE, NYLON INSERTS FACING FORWARD.

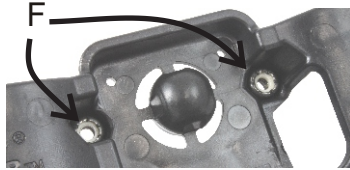

2. USING (A) WRENCH, REMOVE THE FOUR FACTORY SCREWS FROM BEHIND THE FACTORY DOCK INCLUDED WITH YOUR GPS DEVICE. **STORE SCREWS FOR POSSIBLE FUTURE USE**




3. SNAP FACTORY DOCK INTO CRADLE. WHILE HOLDING IN PLACE, ATTACH (B) SCREWS THROUGH BACK OF CRADLE TO SECURE INTO BACK OF FACTORY DOCK. **DO NOT OVER TIGHTEN**



**DO NOT TURN HOLDER UPSIDE DOWN.
HOLD UPRIGHT WHEN TIGHTENING (B) SCREWS**

4. USE APPROPRIATE LENGTH (C, D OR E) SCREWS TO ATTACH THE RAM® DIAMOND BALL BASE TO BACK OF CRADLE, AGAINST (F) NUTS.

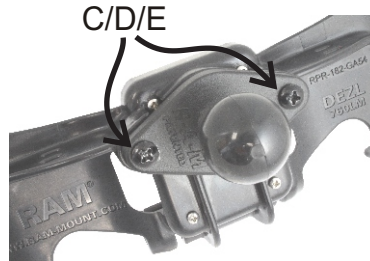

**RECOMMENDED: USE PEN OR
SCREWDRIVER TO HOLD (F) NUTS IN
PLACE WHILE ATTACHING SCREWS**
DIAMOND BALL BASE NOT INCLUDED

RAM Mounting Systems
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com




RMR-INS-GA54

This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.


RAM® FORM-FIT CRADLE HOLDER ASSEMBLY INSTRUCTIONS FOR RUGGED USE

HARDWARE INDEX:

- A. TORX DRIVE T-5H WRENCH (QTY. 1)
- B. #2 X 1/2" SHEET METAL SCREW (QTY. 4)
- C. #8-32 X 3/4" MACHINE SCREW (QTY. 2)
- D. #8-32 X 5/8" MACHINE SCREW (QTY. 2)
- E. #8-32 X 1/2" MACHINE SCREW (QTY. 2)
- F. #8-32 NYLOCK NUT (QTY. 2)

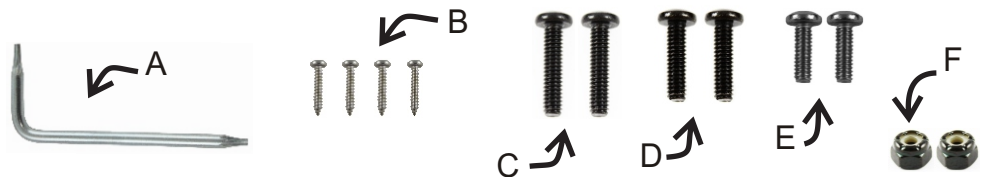

1. INSERT (F) NUTS INTO FRONT POCKETS OF CRADLE, NYLON INSERTS FACING FORWARD.

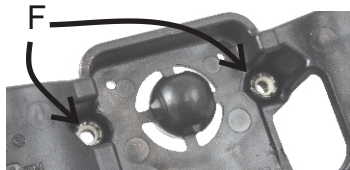

2. USING (A) WRENCH, REMOVE THE FOUR FACTORY SCREWS FROM BEHIND THE FACTORY DOCK INCLUDED WITH YOUR GPS DEVICE. **STORE SCREWS FOR POSSIBLE FUTURE USE**




3. SNAP FACTORY DOCK INTO CRADLE. WHILE HOLDING IN PLACE, ATTACH (B) SCREWS THROUGH BACK OF CRADLE TO SECURE INTO BACK OF FACTORY DOCK. **DO NOT OVER TIGHTEN**



**DO NOT TURN HOLDER UPSIDE DOWN.
HOLD UPRIGHT WHEN TIGHTENING (B) SCREWS**

4. USE APPROPRIATE LENGTH (C, D OR E) SCREWS TO ATTACH THE RAM® DIAMOND BALL BASE TO BACK OF CRADLE, AGAINST (F) NUTS.

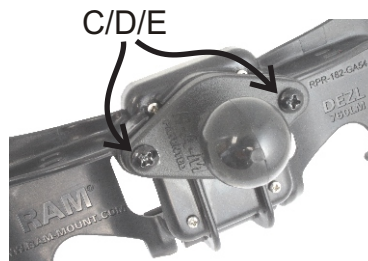

**RECOMMENDED: USE PEN OR
SCREWDRIVER TO HOLD (F) NUTS IN
PLACE WHILE ATTACHING SCREWS**
DIAMOND BALL BASE NOT INCLUDED

RAM Mounting Systems
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-GA54

This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.