





WELD MOUNT

ADHESIVELY BONDED FASTENING SYSTEMS


Using AT-8040 No Slide Multi Bonder

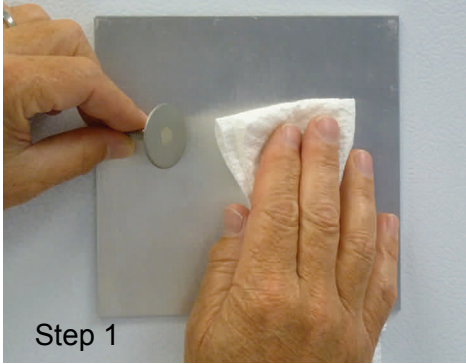


Step 1
Clean Fastener & Substrate With Scotchbrite And Solvent

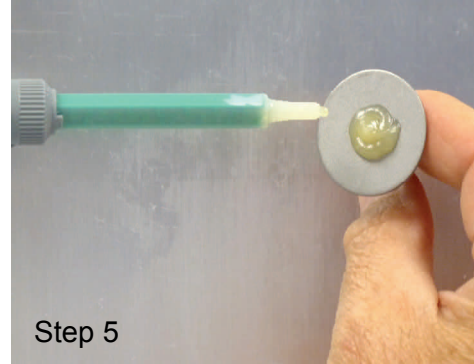


Step 5
Put A Large Drop Of Adhesive In The Center Of The Part Base

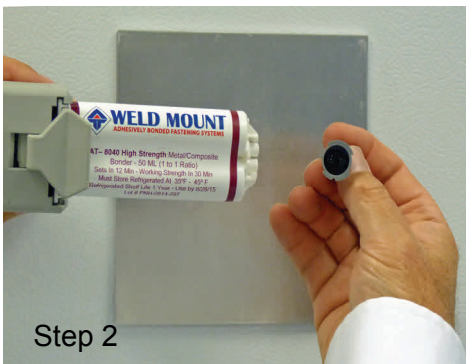

Step 2
Cap Can Only Be Installed One Way Preventing Cross Contamination

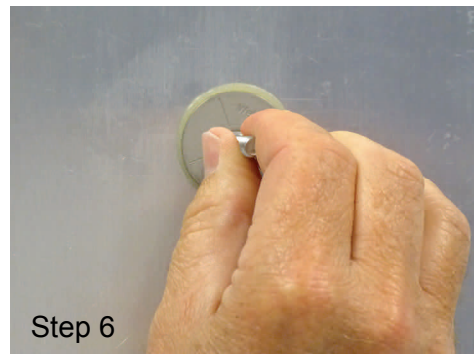


Step 6
Push Part Into The Substrate To Squeeze Adhesive Out From Base

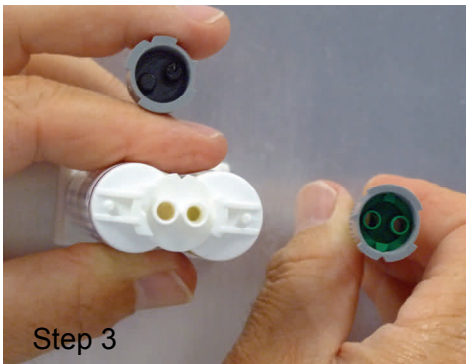

Step 3
New Cartridge Design Insures Easy Reuse Of The Adhesive



Step 7
Slowly Turn Part Clockwise While Pushing Until It Won't Turn

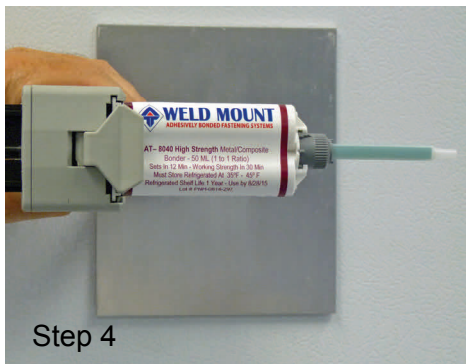

Step 4
Fit AT-850 Screw On Mixing Tip Onto AT-8040 50 ML Cartridge



Traditional
Acrylic
Adhesive

AT-8040
No Slide
Adhesive