
SEAVIEW!

ELEVATE YOUR ELECTRONICS

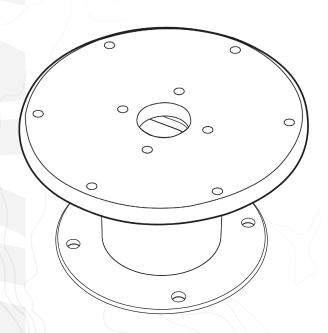

INSTALLATION INSTRUCTIONS


For Seaview Camera Mount:

PM5FM38


Refer to website for most up to date instructions and videos.

WWW.SEAVIEWGLOBAL.COM


PARTS INCLUDED

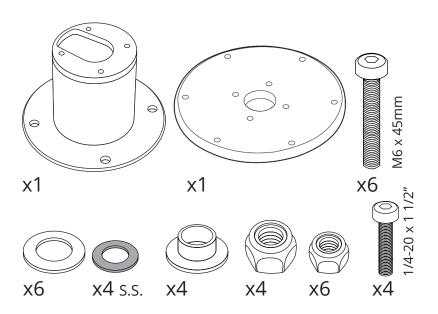


TOOLS NEEDED

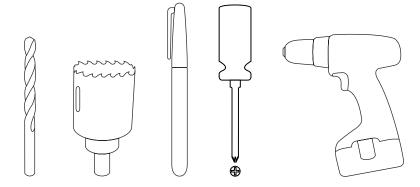


Mark the four holes for the base.

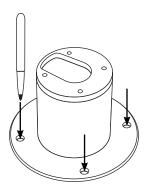

Drill the four holes for the base.

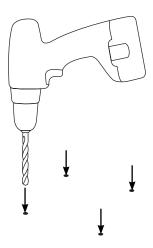


Using a hole saw, cut a hole for the electronics cable.

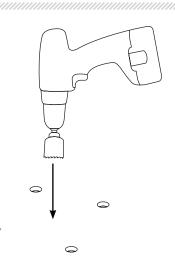

4


Route the electronics cable through the FLIR top down riser and place the camera on top of the riser.

Secure the FLIR M300 to the riser with the supplied hardware. Refer to FLIR instructions on how to bolt them together.

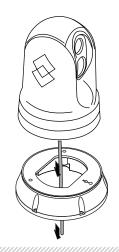


5

Place the top mounting plate onto the PM5FM38. Be sure that the four mounting holes are lined up.

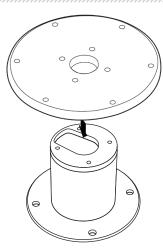


6

Secure the mounting plate to the mount using four nylon washers and bolts using an allen wrench.

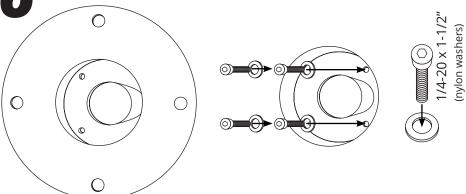


Place a S.S. washers over each 1/4-20 bolt followed by the nuts to secure.

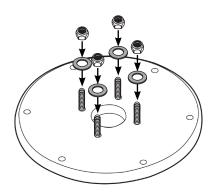

Place the camera on top of the mounting plate, making sure to line up the six mounting holes.




Screw the adapter plate to the PM5FM38 using the six M6 x 45mm bolts with an allen wrench

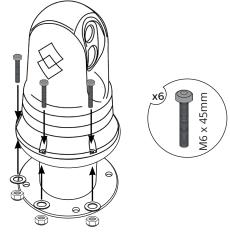


Apply marine adhesive sealant around the bottom of the mount. Be sure to go around the bolt holes.



Place the mount onto the mounting surface.

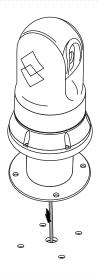

Insert the four nylon washers into the base bolt holes. Apply marine adhesive sealant around the nylon washers.

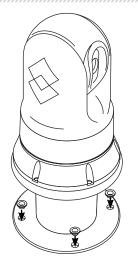







Tel: 800-655-7922 www.seaviewglobal.com **EUROPEAN OFFICE**

Tel: +33 4 94 53 27 70 www.seaviewprogress.com