# **SEAVIEV//** ELEVATE YOUR ELECTRONICS

## INSTALLATION INSTRUCTIONS


For Seaview Modular Top Plate: ADA-F3

Refer to website for most up to date instructions and videos.


0

WWW.SEAVIEWGLOBAL.COM

### PARTS INCLUDED

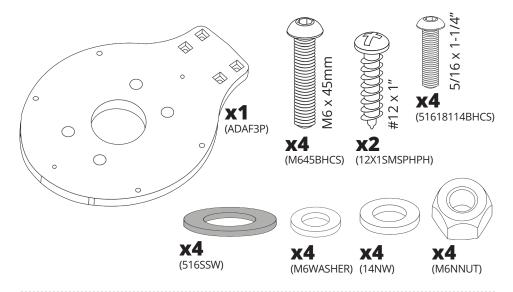


#### TOOLS NEEDED

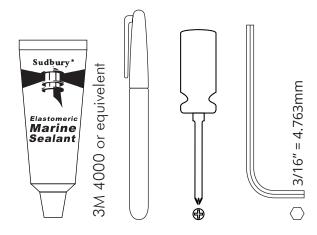


1

Insert rubber gasket on top of the Seaview mount. (Rubber gasket included with Seaview Mount.)

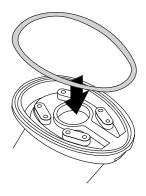




Place the ADA-F3 on top of the mount.

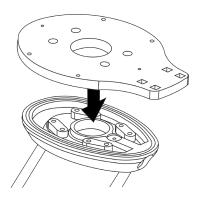


3

Secure the ADA-F3 with the four bolts using a 3/16" Allen Wrench.

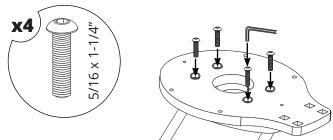




Mount the FLIR M300 Series to the top of the adapter provided by FLIR.






Secure the FLIR M300 Series to the adapter with the hardware specified by your electronics manufacturer.

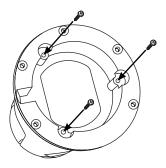

Place the FLIR camera on top of the ADA-F3 top plate. Make sure that the six holes on the adapter line up with the six holes on the top plate.

**Note:** you can set the home position (forward) of the FLIR camera after installation. The directional indicator on screen can be calibrated too. (refer to FLIR for questions about the FLIR set-up).

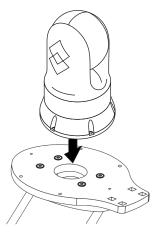


Secure the adapter to the ADA-F3 top plate using the provided two #12 x 1" screws with a philips head screwdriver (one forward and one aft). For the remaining adapter holes you will thru-bolt using four of the M6 x 45mm screws, washers and nuts. Two of each used on each side.

**x2** 

M6 x 45mm



The four holes on the back of the ADA-F3 are for securing the optional Seaview Light Bar to the top plate.

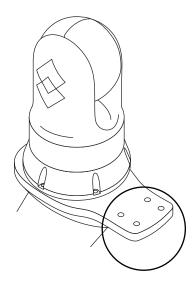

**x2** 

M6 x 45mm

#12 ×

#### **SEAVIEV//** ELEVATE YOUR ELECTRONICS



Tel: 800-655-7922 www.seaviewglobal.com

#### EUROPEAN OFFICE

Tel: +33 4 94 53 27 70 www.seaviewprogress.com