#### Item Number RAM-VB-177

# RAM No-Drill ™ Seat Bases

National Products, Inc.

# Vehicle base for the DODGE AVENGER (2007-2010) DODGE CALIBER (2007-2009)

#### **SPECIFICATIONS**

**Placement** Passenger side where seat frame legs meet the floor board.

**Drilling Required** No - requires longer bolts and stand offs provided in kit.

Seat Configuration Bucket

Construction/Finish Steel/Black Powdercoat

Pole or Pedestal Purchased Separately

Weight 4.5 lbs.

Dimensions A = 17.63", B = 8.21", C = 1.18" Hole Center = 10.75"

#### **Features**

Installs with no drilling required Minimal intrusion into passenger leg space


#### <u>Misc.</u>

Rock solid construction Lifetime warranty

National Products, Inc. Phone: 206-763-8361 Fax: 206-763-9615 Address: 1205 S Orr St Seattle, WA 98108 Website: www.ram-mount.com Email: staff@ram-mount.com



Shown In Use

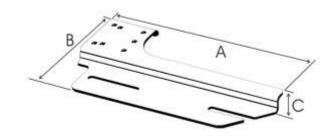

RAM-VB-177



This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.

### Item Number RAM-VB-177

# RAM No-Drill TM Seat Bases

National Products, Inc.

# Vehicle base for the DODGE AVENGER (2007-2010) DODGE CALIBER (2007-2009)

#### INSTALLATION INSTRUCTIONS

- 1. Move the passenger seat back to its rearmost position and remove the two front seat rail bolts. These are found holding the front of the passenger side seat frame legs to the floor board. Do not discard these bolts. Save them for use should you later remove this product from the vehicle.
- 2. Should you choose to use the optional riser, attach it to the No-Drill™ base now.
- 3. Take the longer seat leg bolts provided and pass each through the flat washer. Next, pass the bolt through the slots of the No-Drill™ base.
- 4. Place the stand offs over the holes where the factory seat leg bolts were previously.
- 5. Lower the No Drill base down over the stand offs, pass the bolts through the stand offs, and into the threaded holes in the floor board. Start the thread by hand.

Once both bolts have been started by hand, use a wrench to fully tighten these bolts and secure the base until rigid.

National Products, Inc. Phone: 206-763-8361 Fax: 206-763-9615 Address: 1205 S Orr St Seattle, WA 98108 Website: www.ram-mount.com Email: staff@ram-mount.com



This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.