

**Item Number** \_\_\_\_\_

RAM-VB-172 & RAM-VB-172-SW1

# RAM No-Drill™ Seat Bases

National Products, Inc.

**Vehicle base for the**  
FORD EDGE (2007-2013)  
FORD FUSION (2013)

## SPECIFICATIONS

**Placement**

Passenger side, in front, where seat frame meets floor board.

**Drilling Required**

None - uses existing seat bolts

**Seat Configuration**

Bucket

**Pole or Pedestal**

Ordered Separately

**Weight**

6.1 lbs

**Construction/Finish**

Steel/Black Powdercoat

**Dimensions**


A = 18.23", B = 7", C = 1.95",  
Hole Center = 16.31"

## Features

Installs in minutes with no drilling required.  
Lifetime warranty!



Complete Vehicle Mount  
RAM-VB-172-SW1

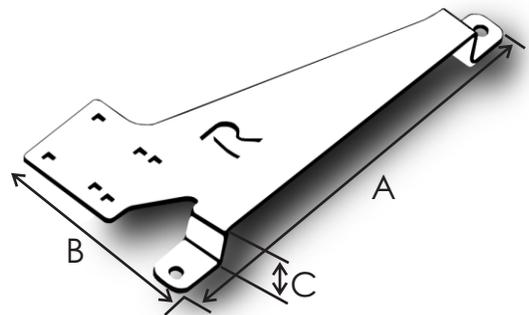

Vehicle Base  
RAM-VB-172

**National Products, Inc.**

8410 Dallas Ave S  
Seattle, WA 98108  
Phone: (206) 763-8361  
Fax: (206) 763-9615  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)



## Item Number \_\_\_\_\_

RAM-VB-172 & RAM-VB-172-SW1

# RAM No-Drill™ Seat Bases

National Products, Inc.


## Vehicle base for the FORD EDGE (2007-2013) FORD FUSION (2013)

### INSTALLATION INSTRUCTIONS

Depending on your make and model, there may be pieces of plastic trim that cover the lower front of the seat frame legs. This will need to be removed and stored. If you wish to reinstall this piece of trim, you will have to modify it to fit over the stamped metal base.

1. Move the passenger side seat to its rearmost position. Using socket wrench, loosen and remove the two bolts holding the seat frame legs to the floor board.
2. Place the No-Drill™ base over the seat frame legs with the pedestal platform near the center of the vehicle. Note that for the Ford Fusion, the base will install under the seat frame legs, not over them.
3. Re-install the two seat frame bolts. Start the thread by hand and then fully tighten with the 18MM wrench.

The photo below depicts the install into a Ford Fusion. The arrows show areas where the fit is tight. This base does touch the carpeting of the center hump. It will also touch and flex slightly the plastic seat leg covers. This does not affect the functionality or appearance of the seat leg covers.

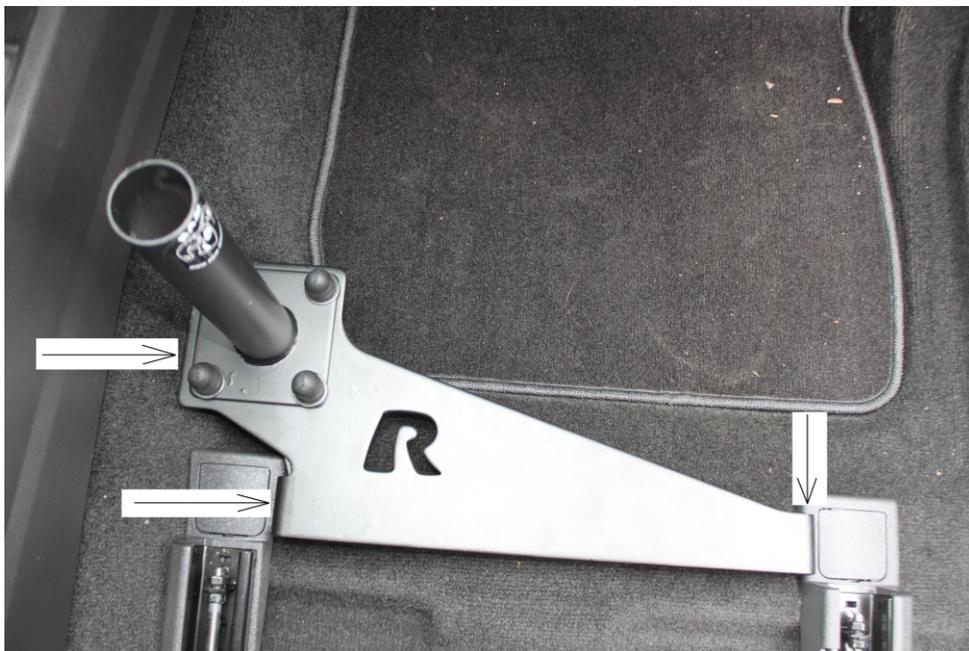

**National Products, Inc.**  
8410 Dallas Ave S  
Seattle, WA 98108  
Phone: (206) 763-8361  
Fax: (206) 763-9615  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)

