

## Item Number

RAM-VB-175 & RAM-VB-175-SW1

# RAM No-Drill™ Seat Bases

National Products, Inc.

## Vehicle base for the

**FORD TRANSIT CONNECT (2010-2013)**

**DODGE GRAND CARAVAN (2008-2009, 2012-2013)**

**CHRYSLER TOWN & COUNTRY (2008-2009, 2012-2013)**

## SPECIFICATIONS

### Placement

Passenger side between seat track & seat frame.

### Drilling Required

No - uses existing seat bolts

### Seat Configuration

Bucket

### Construction/Finish

Steel/Black Powdercoat

### Pole or Pedestal

Purchased Separately

### Weight

4.5 lbs.

### Dimensions

A = 19.875", B = 7.25", C = 2.125"

Hole Center = 17" and 18.25"

## Features

Installs with no drilling required  
Minimal intrusion into passenger leg space


## Misc.

Durable construction  
Lifetime warranty

National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)



RAM-VB-175-SW1

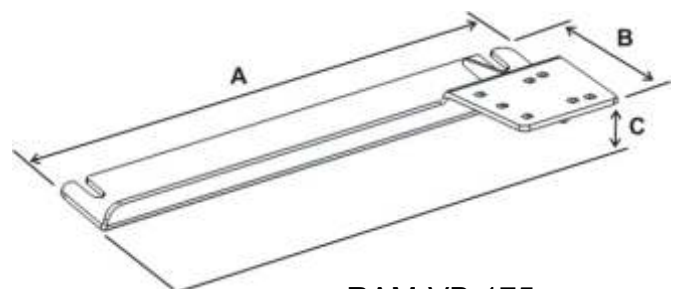

RAM-VB-175



## Item Number \_\_\_\_\_

RAM-VB-175 & RAM-VB-175-SW1

# RAM No-Drill™ Seat Bases

National Products, Inc.

## Vehicle base for the

**FORD TRANSIT CONNECT (2010-2013)**

**DODGE GRAND CARAVAN (2008-2009, 2012-2013)**

**CHRYSLER TOWN & COUNTRY (2008-2009, 2012-2013)**

## INSTALLATION INSTRUCTIONS

1. Move the passenger seat back to its rearmost position and loosen the front seat rail nuts with a 15MM wrench.
2. Gently lift the front of the seat to create a small gap between the seat frame and seat track.
3. Align the slots in the base with the seat bolts and slide the base into place. Press the No-Drill™ base as far in as possible so that the back of the slots engage the seat bolts. The pedestal platform should be near the console.
4. Re-tighten the nuts to secure the No-Drill™ base.

Special note: Once the base is installed, passenger side front seat travel will be limited. In order to collapse and store the mid row seat behind the front passenger seat, the front passenger seat must be moved all the way forward. With the base installed, this will not be possible. The mid row seat should be left up or stowed, whichever it to be the most common orientation, prior to the installation of this product.



National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)

