

**Item Number** \_\_\_\_\_

RAM-VB-186 & RAM-VB-186-SW1

# RAM No-Drill™ Seat Bases

RAM Mounting Systems

**Vehicle base for the**  
**JEEP GRAND CHEROKEE (2011-2016)**  
**DODGE DURANGO (2011-2014)**  
**DODGE DURANGO CITADEL (2011-2014)**

## SPECIFICATIONS

**Placement**

Passenger side, front, where seat rail frame attaches to floor board.

**Drilling Required**

No

**Seat Configuration**

Bucket

**Construction/Finish**

Steel/Black Powdercoat

**Dimensions**

A = 17", B = 6.18", C = 1.81"  
Hole Centers = 15.125"

**Pole or Pedestal**

Sold Separately

**Weight**


4 lbs.

## Features

Installs in minutes with no drilling required  
Low profile keeps mount away from passenger leg space  
Lifetime warranty



Complete Vehicle Mount  
RAM-VB-186-SW1

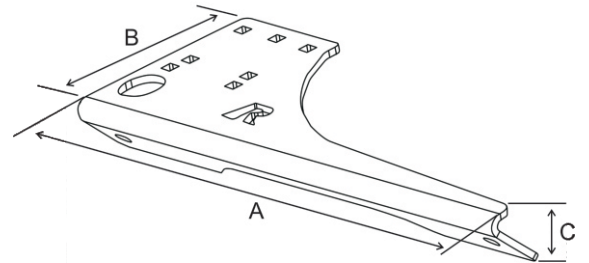

Vehicle Base  
RAM-VB-186

**RAM Mounting Systems**

8410 Dallas Ave S  
Seattle, WA 98108  
Phone: (206) 763-8361  
Fax: (206) 763-9615  
www.rammount.com  
support@rammount.com



RMR-INS-VB-186

## Item Number \_\_\_\_\_

RAM-VB-186 & RAM-VB-186-SW1

# RAM No-Drill™ Seat Bases

RAM Mounting Systems

**Vehicle base for the**  
**JEEP GRAND CHEROKEE (2011-2016)**  
**DODGE DURANGO (2011-2014)**  
**DODGE DURANGO CITADEL (2011-2014)**

## INSTALLATION INSTRUCTIONS

1. Move the passenger seat back to its rearmost position and remove the round plastic covers in the seat leg trim to expose the hex bolts holding the front seat legs to the vehicle floor board. A small flat head screw driver works well for this.
2. Using a 14MM socket, remove the factory seat leg bolts and store them along with the round plastic covers.
3. Place the supplied stand offs over the exposed holes in the seat frame legs.
4. You will need the longer bolts supplied in this kit to complete the installation. Place the flat washer over the bolts and drop them through the holes on either end of the base. Place the base over the stand offs and align the longer bolts with the threaded hole in the floor board. Begin threading the bolts by hand.
5. Using a 17MM socket wrench, fully tighten the bolts to secure the No-Drill™ base into the vehicle.
6. After a week of use, check seat bolts and re-tighten if necessary.

Note that not all vehicles will have the plastic trim covering the seat mounting hardware.



**RAM Mounting Systems**  
8410 Dallas Ave S  
Seattle, WA 98108  
Phone: (206) 763-8361  
Fax: (206) 763-9615  
www.rammount.com  
support@rammount.com



RMR-INS-VB-186