


RAM® GUN HOLSTER BRACKET ASSEMBLY GUIDE

Parts Index

- A. RAM HANDGUN HOLSTER BRACKET CLIP (QTY. 1)
- B. #10-24 X 1/2" BLACK PHILIPS DRIVE STEEL MACH. SCREW (QTY. 3)
- C. #10-24 BLACK THIN STAINLESS STEEL NYLOCK NUT (QTY. 3)
- D. 1/4"-20 X 1/2" BLACK CARRIAGE BOLT (QTY. 1)
- E. 1/4"-20 BLACK STEEL WING NUT (QTY. 1)




1. ATTACH BALL BASE TO BACK OF (A) BRACKET CLIP USING (B) SCREWS AND (C) NUTS.

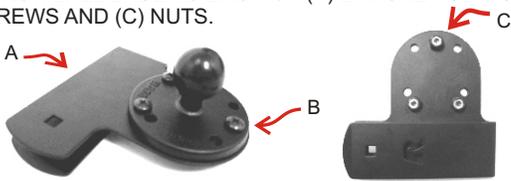

2. SLIDE (A) BRACKET CLIP THROUGH BELT INSERT ON HOLSTER.



3. INSERT (D) CARRIAGE BOLT FROM UNDER BRACKET CLIP THROUGH BOTH SQUARE HOLES. PRESS ENDS OF BRACKET TOGETHER AND TIGHTEN (E) WINGNUT ONTO (D) CARRIAGE BOLT.

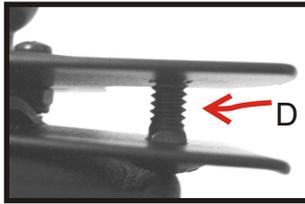

RAM Mounting Systems
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com

HOLSTER NOT INCLUDED
BALL BASE MAY NOT BE INCLUDED

 **RAM MOUNTS**
RMR-INS-GUN1

This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.