
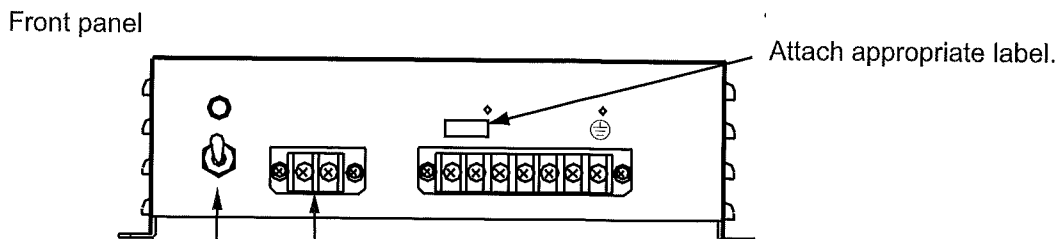
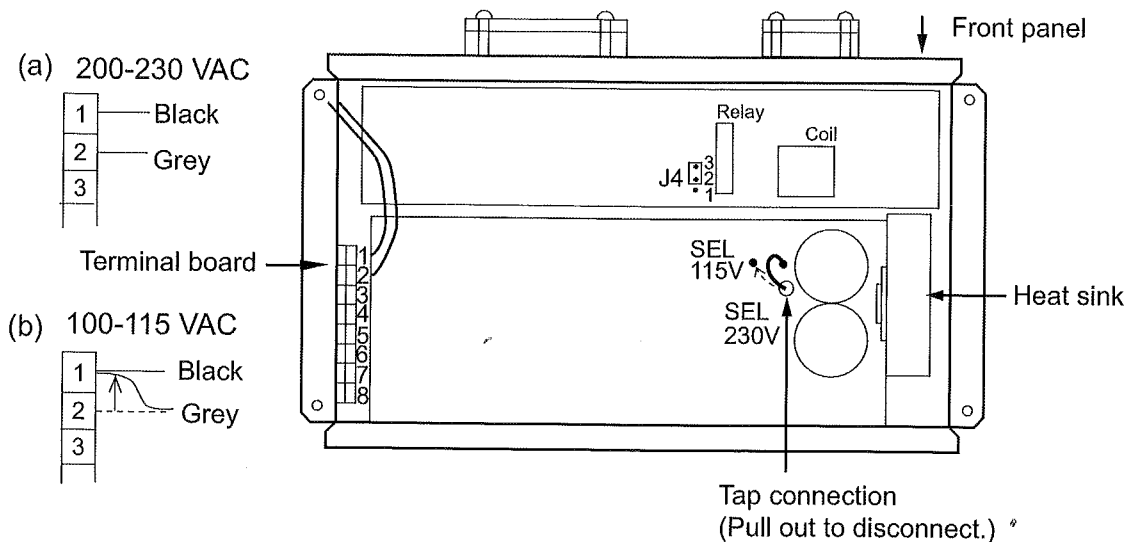


FURUNO

PR-240 Changing Ship's Mains Specifications

The AC-DC power supply PR-240 is shipped ready for connection to a 200-230 VAC ship's mains. If the ship's mains is 100 VAC-115 VAC, change the tap connection and terminal board connection as below. Attach label supplied as accessories to the front panel according to the ship's mains.

Ship's mains	Tap connection	Terminal board	Label
AC200-230V	SEL 230 V	Below (a)	200-230 VAC 2.2-1.7 A 1 ϕ 50/60 Hz
AC100-115V	SEL 115 V	Below (b)	100-115 VAC 3.2-2.6 A 1 ϕ 50/60 Hz

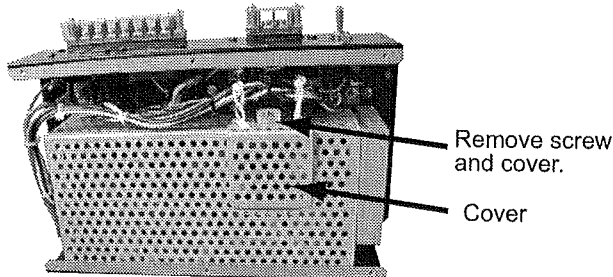

AC FAIL: Connect to Alarm system.

Output Setting: Normal Close → Set plug to 2 & 3 pins of J4 (Factory setting)

Normal Open → Set plug to 1 & 2 pins of J4

(Above setting is for ser. no. 022736 and after.

Ser. no. 022735 and before: Plug to 1 & 2 pins)

AC Power Switch

(When connecting DC input, note that the DC power is supplied if this switch is turned off.)

Note: The DC output load must be less than 8A.