



sevylor®

INFLATABLE QUIKPAK™ KAYAKS

**READ THE FOLLOWING
INSTRUCTIONS AND WARNINGS TO AVOID
DROWNING OR SERIOUS INJURY**



CAUTION:

Safety Warning

Paddle sports can be very dangerous and physically demanding. The user of this product should understand that participating in paddle sports may involve serious injury or death. Observe the following safety standards whenever using this product.

- It is the owner's responsibility to carefully read the manual and instruct all users in safe operation of this product.
- Not a life saving device.
- Get paddle sport instruction specific to this type of craft.
- Obtain certified first aid training and carry first aid and safety/rescue equipment.
- Always wear an approved Personal Flotation Device (Life Preserver).
- Wear a helmet when appropriate.
- Dress appropriately for weather conditions; cold water and/or cold weather can result in hypothermia.
- Never paddle alone.
- Do not paddle in flood conditions.
- Be aware of river water levels, tidal changes, dangerous currents and weather changes.
- Do not use in high wind, strong currents, open water or dangerous tides.
- Scout unfamiliar waters; portage when appropriate.
- Do not exceed your paddling ability; be honest with yourself.
- Consult a physician prior to beginning your paddle sport training.
- Do not use this product under the influence of alcohol or drugs.
- Do not make any alterations to this product.
- Do not overload or over inflate.
- Never tow from another boat or vehicle.
- Know and follow local water safety rules and boating regulations.

sevylor® INFLATABLE QUIKPAK™ KAYAKS

IMPORTANT INFORMATION

The warnings below relate to various situations. Please observe them.

⚠ CAUTION!

Denotes an imminent hazard which will result in severe injury if you do not comply with the instructions.

⚠ WARNING!

Reminds you of safety measures which must be observed. Also denotes unsafe practices which could result in personal injury or damage to the product or property, if you do not comply with the instructions.

⚠ CAUTION!

It is the owner's responsibility to make sure all users carefully read and follow the instructions for safe operation of this product. Observe all local and national laws. Always wear a Personal Flotation Device approved by the proper authorities. Please carefully observe the Capacity Plate information which is printed on the product.

⚠ WARNING!

These products are not meant for towing because the extreme pressure of the water while towing can tear the eyelets and/or handles.

These products are made of the highest quality materials and comply with NMMA (National Marine Manufacturers Association) regulations.

⚠ CAUTION!

Altering the construction of these products could jeopardize the safety of the occupants and will void the limited warranty.

⚠ CAUTION!


Do not over inflate. Pressurize product to "Inflation Pressure" stated in the chart for your specific product.

⚠ WARNING!


Never use a compressor, CO₂ or compressed air to inflate the product. Do not let your product come into contact with sharp, pointed objects.

INFLATION INSTRUCTIONS


To inflate using any Sevylor® QuickPump™ unit:

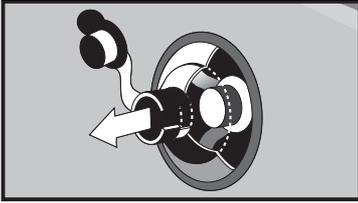


1. To begin inflation, open external cap and pull firmly on the lanyard to extend out. This will open internal yellow seal.

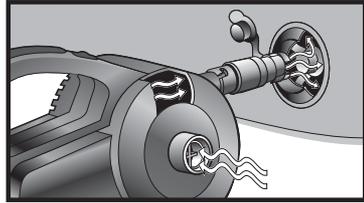

2. Attach adapter nozzle to inflation end of pump. Insert pump and turn on.
Note: The pump may look different from yours. It is for illustration purposes only.

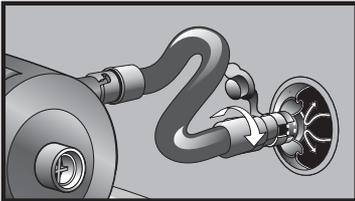


3. When fully inflated, seal valve by pushing in with pump nozzle. This will seal the internal yellow stopper and keep air from escaping while closing cap. Gently twist adapter sleeve to right while backing pump out of valve.

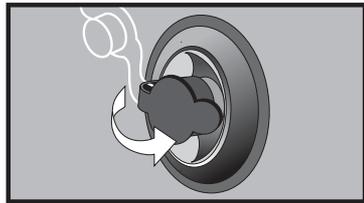


4. Fully remove pump and close external cap. Valve should appear depressed into itself.


To inflate using the Sevylor® Dual Action Hand Pump or other inflation device:

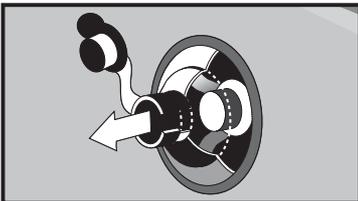


1. To begin inflation, open external cap and pull firmly on the lanyard to extend out. This will open internal yellow seal.

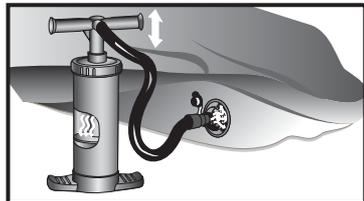

2. Attach adapter nozzle to inflation end of pump. Insert pump and turn on or start pumping.
Note: The pump may look different from yours. It is for illustration purposes only.

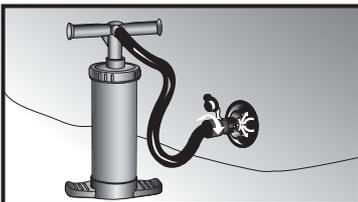

3. When fully inflated, seal valve by pushing in with pump nozzle. This will seal the internal yellow stopper and keep air from escaping while closing cap. Gently twist adapter sleeve to right while backing pump out of valve.

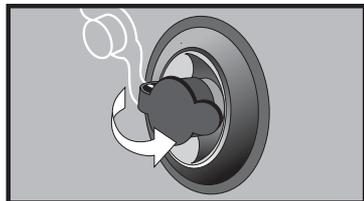

4. Fully remove adapter and close external stopper. Valve should appear depressed into itself.

IMPORTANT! Inflate the product chambers in the following order:

K5 QuikPak™ Kayak

1. Inflate the floor chamber.
2. Inflate the DIN chamber.
3. Inflate the outside main chamber.

K3 QuikPak™ Kayak

1. Inflate the inner main chamber.
2. Inflate the outer main chamber.

K1 QuikPak™ Kayak

1. Inflate the two foot wells chambers.
2. Inflate the inner main chamber.
3. Inflate the outer main chamber.
4. Inflate seat back.

The chambers on the product will also be numbered to indicate order of inflation. This order of inflation will ensure the proper volume and buoyancy of the safety chamber.


Note: To inflate the mini Double Lock™ valve, which is used on some of the Sevylor® product floors and seat bottoms, follow the same inflation instructions above or previous instructions, using the mini Double Lock™ valve adapter. The mini Double Lock™ valve adapter is included with all Sevylor® pumps. The adapter can be purchased from Sevylor Customer Service by calling 1-800-835-3278 (Part Number 5010000707).

⚠ CAUTION!

Water temperature and weather does affect the pressure in inflatable products. In cold weather your product will lose some pressure due to the fact the air will contract. If this occurs, you may want to add a little air to improve your products performance. However, in hot weather, the air will expand. You must let some air out to prevent your product from failing due to overpressure. You should avoid exposing your product to extreme temperatures (hot or cold).


DEFLATION INSTRUCTIONS

Deflation instructions using any Sevylor® QuickPump™ unit:

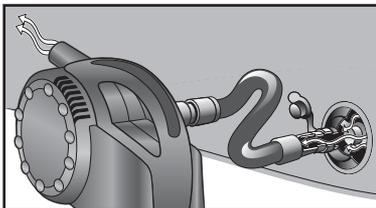

Remove adapter hose from inflation end and attach to opposite deflation end of pump. Repeat same steps as inflation. This will draw the air out quickly.

Deflation instructions using the Sevylor® Dual Action Hand Pump:

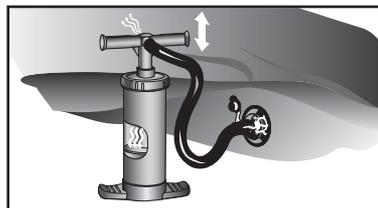


Remove adapter hose from inflation port and attach to deflation port. Repeat same steps as inflation. This will draw the air out quickly.


K5 QuikPak™ Kayak Set Up Instructions



1. Remove QuikPak™ kayak from box.

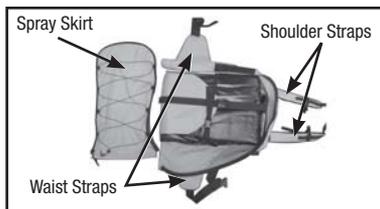


2. Unbuckle waist strap and shoulder straps. Unzip or remove spray skirt.

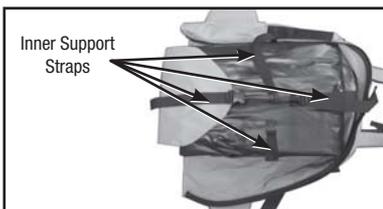

3. Unbuckle inner support straps.



4. Remove kayak from QuikPak™ unit and set kayak aside.

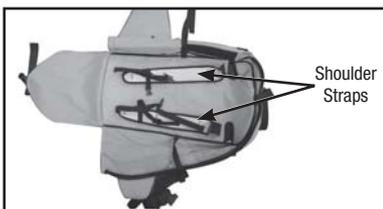

5. Pull shoulder straps through openings in QuikPak™ unit.



6. Fold bottom flap and inner support straps into the QuikPak™ unit.



7. Fold over side flaps and secure with the hook & loop strips.




8. Turn seat over and set aside.

Inflate Kayak (using order shown below)



9. Inflate outer chamber to 0.9 PSI.

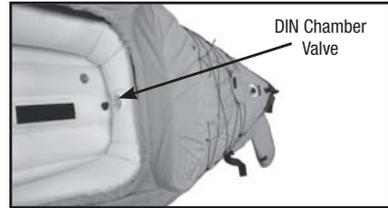


10. Inflate DIN chamber to 0.9 PSI.



11. Inflate floor chamber to 0.9 PSI.




12. Take seat that was set aside in step 8, fold with velcro downwards as shown.

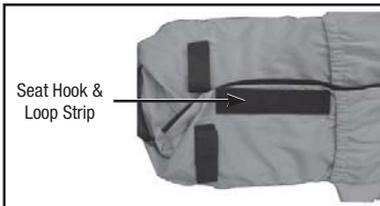


13. Line up hook & loop strip on seat bottom with the hook & loop strip on the kayak floor.




14. Place seat in kayak with the hook & loop strips secured as shown in step 13.

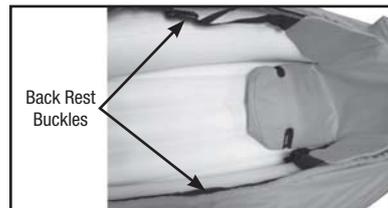

15. Attach back rest buckles on seat to the buckles on the kayak.

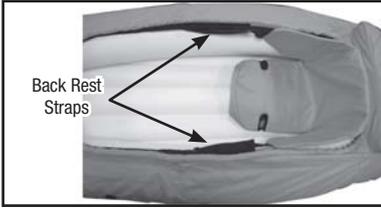

Back Rest Straps

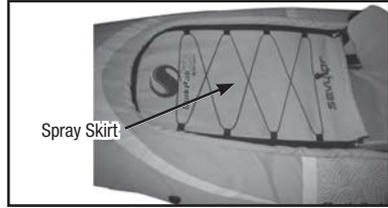


Spray Skirt

16. Adjust backrest straps to desired tension.

17. Zip spray skirt onto kayak.

Your QuikPak™ Kayak is now ready for use.

K5 QuikPak™ Kayak Breakdown/Storage Instructions

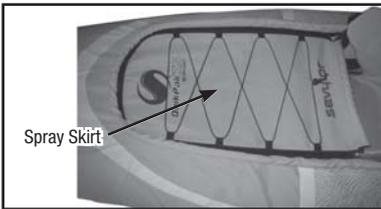

Spray Skirt


1. Remove kayak seat.
2. Remove spray skirt and deflate kayak.



3. Unfold side flaps, bottom flap & inner support straps.



4. Pull shoulder straps through the openings.

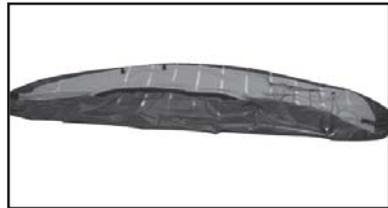

5. Fold kayak using the following steps.
 - 5a. Fold kayak lengthwise to center as shown in the above image.



- 5b. Fold kayak lengthwise again as shown in the above image.




- 5c. Fold over ends of kayak as shown in the above image.




5d. Fold over ends of kayak again as shown in the above image.



5e. Fold kayak in half, with strake up, as shown in above image.

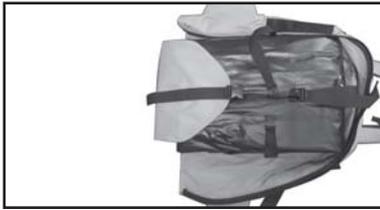


6. Place folded kayak into QuikPak™ unit.

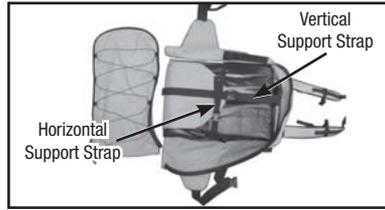

7. Buckle & tighten horizontal support strap. Buckle & tighten vertical support strap.



8. Attach spray skirt to QuikPak™ unit.

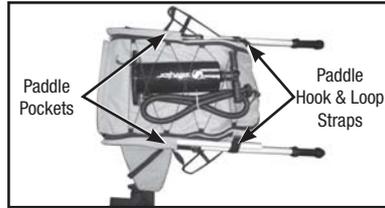

9. Store pump in cargo net on rear of QuikPak™ unit. Store paddle in side pockets and use hook & loop straps to secure the top of the paddle shafts.


Your QuikPak™ kayak is now ready to transport or store.

K3 QuikPak™ Kayak Set Up Instructions



1. Remove QuikPak™ Kayak & detachable fin from box.


NOTE: Be sure not to lose the detachable fin.

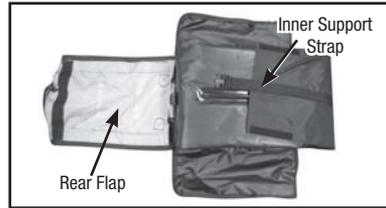


2. Unzip QuikPak™ unit rear flap and unbuckle inner support strap.



3. Remove kayak and set aside.

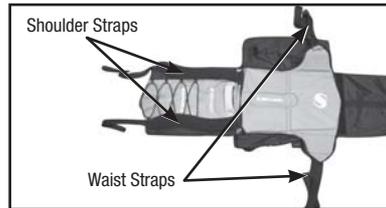

4. Turn QuikPak™ unit over and unbuckle shoulder straps & waist strap.

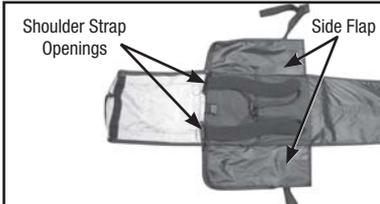

5. Insert shoulder straps through the openings and pull them through to the inside of the QuikPak™.



6. Fold in side flaps.



7. Fold up bottom flap, and buckle.



8. Fold in top flap & secure with the hook & loop strips.




9. Turn seat over and set aside.




10. Unfold kayak and install detachable fin to connectors on bottom, rear of kayak, by hooking the fin tabs into the slots on the connectors.

Note: Skip step 10 if model comes with permanently attached fin.


Inflate Kayak (using order shown below)

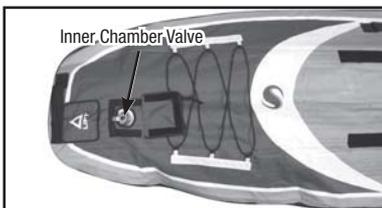

11. Inflate inner chamber to 0.9 PSI.

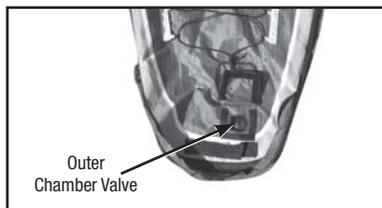


12. Inflate outer chamber to 0.9 PSI.

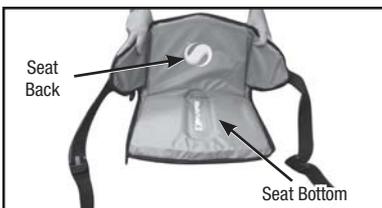

13. Take seat that was set aside in step 9, and fold as shown.



Seat Hook & Loop Strips

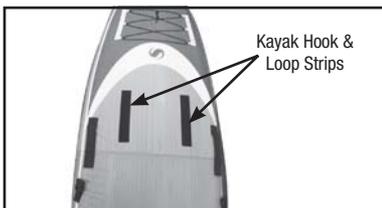

14. Line up hook & loop strips on seat bottom with the hook & loop strips on the kayak floor. (See the following image that show installed seat)



15. Connect seat backrest buckles to buckles on kayak.




16. Adjust backrest straps to your desired tension.

Your QuikPak™ Kayak is now ready for use.

K3 QuikPak™ Kayak Breakdown/Storage Instructions



1. Remove kayak seat & deflate kayak.
2. Unfold kayak seat as shown in figure above.

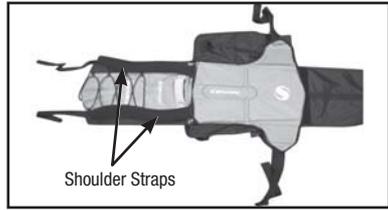

3. Pull shoulder straps back through openings.



4. Turn QuikPak™ unit over and set aside.



5. Fold kayak using the following steps.
 - 5a. Fold kayak lengthwise to center as shown in the above image.



5b. Fold kayak lengthwise again, as shown in the above image.



5c. Fold over kayak end to strake, as shown in the above image.




5d. Fold over the other kayak end, as shown in the above image.



5e. Fold kayak in half, with strake up, as shown in the above image.



6. Place kayak into QuikPak™ unit, as shown in above image.

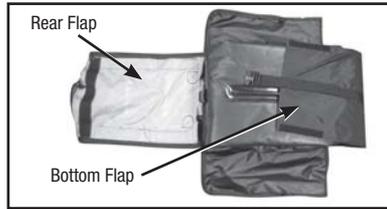


7. Fold over bottom flap and buckle the inner support strap & pull tight.



8. Fold over rear flap and zip closed.



9. Buckle shoulder straps.

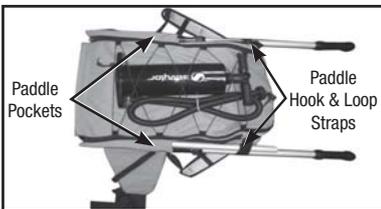


10. Store pump in cargo net on rear of QuikPak™. Store paddle in side pockets and use hook & loop straps to secure the top of the paddle shafts.

Your QuikPak™ kayak is now ready to transport or store.

K1 QuikPak™ Kayak Set Up Instructions




1. Remove QuikPak™ Kayak from box.

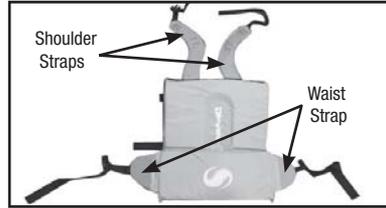

2. Unbuckle shoulder straps & waist strap.



3. Turn QuikPak™ unit over and unbuckle the support strap.

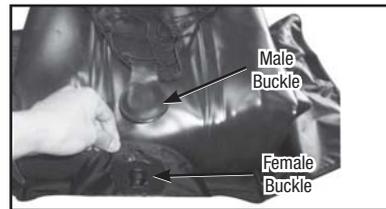

4. Pull the male buckles on cargo net out from each female buckle.



5. Remove cargo net and set aside.



6. Remove kayak and set aside. Fold shoulder straps into QuikPak™ unit as shown above.



7. Fold over left side flap of QuikPak™ unit, as shown above.

NOTE: Left side must be folded over first so the hook & loop strips can be attached.




8. Fold over right side flap of QuikPak™ unit, attaching the hook & loop strips to secure the QuikPak™ unit side flaps.



9. Buckle & tighten the support strap and set aside.


Inflate Kayak (using order shown below)

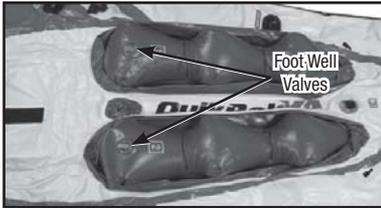


10. Inflate kayak using the following steps.
10a. Inflate foot wells to 0.5 PSI.



10b. Inflate inner chamber to 0.5 PSI.

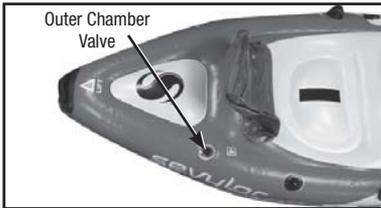

10c. Inflate outer chamber to 0.5 PSI.

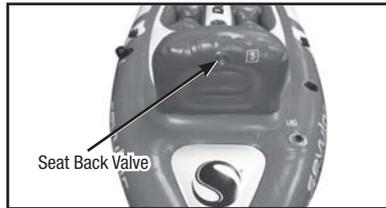

10d. Inflate seat back to 0.5 PSI.




11. With male buckles facing downward, place cargo net onto kayak in the position as shown above.



12. Insert each male buckle into the slots on kayak.




13. The cargo net installed onto kayak.

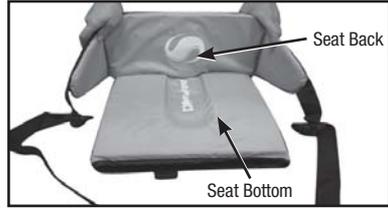

14. Kayak seat.



15. Align hook & loop strip on kayak with the hook & loop strip on the bottom of the seat.

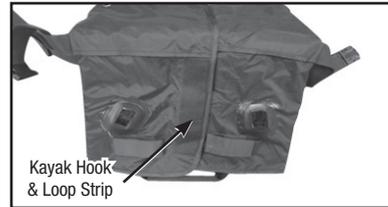

16. Connect the seat back strap buckles to the buckles on the kayak.



17. Adjust seat back straps to your desired tension.

K1 QuikPak™ Kayak Breakdown/Storage Instructions



1. Remove kayak seat, remove cargo net & deflate kayak.
2. Unfold kayak seat in reverse order (QuikPak™ unit should look as shown above).



3. Fold kayak using the following steps.
 - 3a. Fold kayak lengthwise to center as shown above.



3b. Fold kayak lengthwise again, as shown above.



3c. Fold over end of kayak, as shown above.



3d. Fold over other end of kayak, as shown above.



3e. Fold kayak in half, as shown above.




4. Place kayak into QuikPak™ unit.




5. Fold up left & right side flaps, buckle & tighten support strap.



6. Install cargo net, as shown above (Refer to step 4 of K1 setup instructions for assistance).

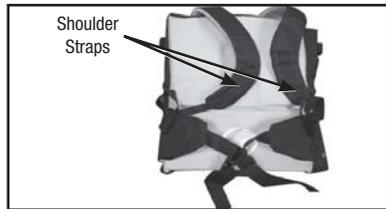

7. Buckle shoulder straps.

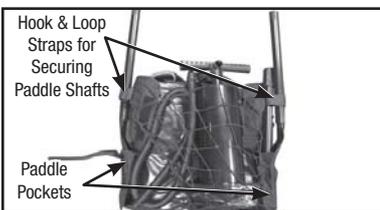

8. Store pump in cargo net on rear of QuikPak™ unit. Store paddle in side pockets and use hook & loop straps to secure the top of the paddle shafts.

Your QuikPak™ kayak is now ready to transport or store.

Your product is NMMA certified using the ABYC standard.



⚠ WARNING!

Do not exceed the certified maximum capacities under any circumstances!

NMMA (ABYC Standard)	Persons Capacity	Maximum Payload Capacity	Inflation Pressure	Inflation Pressure
Model #	Persons Only	Persons, Gear	Main Chamber(s)	Floor Chamber(s)
K5 QuikPak™ Kayak	1 Pers. or 250 lbs.	250 lbs.	0.9 PSI	0.9 PSI
K3 QuikPak™ Kayak	1 Pers. or 250 lbs.	250 lbs.	0.9 PSI	0.9 PSI
K1 QuikPak™ Kayak	1 Pers. or 400 lbs.	400 lbs.	0.5 PSI	0.5 PSI

OPERATING INSTRUCTIONS:

- Follow all local boating regulations and navigation rules. Familiarize yourself with boating conditions where you plan to use the boat. Use common sense and caution when operating in unfamiliar places.
- Observe the maximum weight the product can carry and do not overload past this limit. Over-loading jeopardizes the safety of the occupants.
- Be sure all accessories and/or equipment (e.g. oars, life jackets) are in proper working condition before using the boat. Each person occupying the boat is to wear an approved Personal Flotation Device (life preserver).
- Sharp objects are not to be carried in the product without adequate protection or storage.
- When navigating the product in any water depth, watch for submerged or sharp objects that may damage or pierce the boat's air chambers.
- Enter the product from the port (left) or starboard (right) sides - not from the fore (front) or aft (back) sides.
- Never tow with a boat or any other vehicle.

MOTOR MOUNTING

⚠ CAUTION!

Do not mount a motor on any of these kayaks.

CARE & STORAGE:

- These products are made of the highest quality materials and comply with NMMA (National Marine Manufacturers Association) regulations. Altering the construction of these products will void the limited warranty and could jeopardize the safety of the occupants.
- If your product has been used in salt water, rinse it off with fresh water as soon as possible.
- Remove tar spots or other soiled areas by using a mild soap and rinsing with fresh water.
- Be sure your product is completely dry before storing.
- The products may be stored inflated, but do not place any heavy or sharp objects on it. Storage is best in a dry room.

REPAIRING SMALL PUNCTURES

For inadvertent punctures, you can repair them with the included Sevylor® repair patch.

INSTRUCTIONS:

1. Thoroughly clean and dry the damaged area. Completely deflate if an inflatable article.
2. Cut a portion of the patch to cover the puncture, and allow an additional ¼" on all sides. Always cut a round or oval patch. Never leave corners.
3. Be sure the spot is completely dry.
4. Peel the backing from the patch.
5. Adhere the patch to the puncture.
6. Using your thumb or finger apply even pressure across the entire surface of the patch.

The Sevylor® AirSeal repair kit is also another repair option available (Model # 2000003730 - not included). Sevylor® AirSeal is a fast, reliable repair for vinyl inflatables: air mattresses, toys, pools, boats as well as rainwear, groundsheets, golf bags, etc.

INSTRUCTIONS:

1. Thoroughly clean and dry the damaged area. Completely deflate if an inflatable article.
2. When the damage is small (a pin hole or tear under 2 inches) apply a light coat of AirSeal two or three times. Allow five minutes to dry between each application.
3. For heavier material, e.g. fabric backed vinyl or a vinyl boat, apply up to five coats allowing a five-minute drying period between coats.
4. Ensure the AirSeal is completely dry before resuming use of the article.
5. When the damage is more extensive, cut a patch (with rounded corners) using any vinyl material. Generously coat the damaged area spreading the AirSeal at least 3/8" from the torn edges. Apply the patch and apply AirSeal to all edges of the patch making a seal between patch and the item being repaired. Allow the article to dry at least 10 hours before using.

AirSeal contains sufficient material for several small repairs.


AirSeal is intended for use with 100% PVC (poly vinyl chloride) only.

Do not use with any other material.

You may purchase the Sevylor® repair patch (Model # 2000003731) and Sevylor® AirSeal (Model # 2000003730) by calling Coleman Customer Service at 1-800-835-3278 or going to www.sevylor.com.

PADDLE ASSEMBLY: SELECT MODELS ONLY.

Join the three shafts together by screwing them together with the two couplers. Attach the blade to the shafts by screwing onto the end of the shaft.

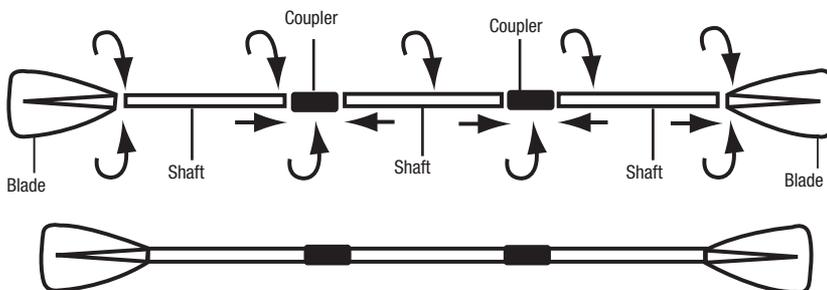

GUIDELINES FOR USAGE:

These kayakers may be wider than a typical kayak, which means they may feel more stable. However, as with any narrow, flat bottom kayak, users must be aware of the possibility of the kayak tipping and compensate for it. Paddle with short, even and easy strokes. Paddle close to the kayak with the paddle almost vertical. Pull with one hand and push with the other. If the nose of the kayak is moving right to left you are probably paddling too hard. Ease off on the force of your stroke to reduce the swaying of the front end. Paddling backward or breaking can sometimes offer quick maneuverability.

PRODUCT WARRANTY:

See the 90 days and 1 year limited warranty pages for details.

- Products without a fabric covered hull have a limited 90 day warranty. Models as follows: K1 QuikPak™ Kayak.
- Products with a fabric covered hull have a limited 1 year warranty. Models as follows: K5 & K3 QuikPak™ Kayaks.

90 Days Limited Warranty

The Coleman Company, Inc. ("Coleman") warrants that for a period of 90 days from the date of original retail purchase, this product will be free from defects in material and workmanship. Coleman, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Coleman dealers, service centers, or retail stores selling Sevylor® products do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

What This Warranty Does Not Cover

This warranty does not cover normal wear of parts, parts that are not genuine Sevylor® parts, or damage resulting from any of the following: negligent use or misuse of the product; commercial use of the product; use contrary to the operating instructions; disassembly, repair or alteration by anyone other than Coleman or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. Warranty void if damage to product results from the use of a part other than a genuine Sevylor® part.

COLEMAN SHALL NOT BE LIABLE FOR DEFECTS THAT ARE CAUSED BY THE USE OF UNAUTHORIZED PARTS OR SERVICE. COLEMAN SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITIONS. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THE ABOVE WARRANTY OR CONDITIONS. SOME STATES, PROVINCES, OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

How to Obtain Warranty Service

Take the product to an authorized Coleman service center. You can find the nearest authorized Coleman service center by visiting www.coleman.com or calling 1-800-835-3278 or TDD 1-316-832-8707 in the United States or 1-800-387-6161 in Canada. If a service center is not conveniently located, attach to the product a tag that includes your name, address, daytime telephone number and description of the problem. Include a copy of the original sales receipt.

Carefully package the product and send either by courier or insured mail with shipping and insurance prepaid to:

For products purchased in the United States:

The Coleman Company, Inc.
 3600 North Hydraulic
 Wichita, KS 67219 U.S.A.

The costs of transporting the product to Coleman or an authorized service center for warranty service is the responsibility of the purchaser.

DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.

If you have any questions regarding this warranty please call 1-800-835-3278 or TDD 1-316-832-8707.

1 Year Limited Warranty

The Coleman Company, Inc. ("Coleman") warrants that for a period of 1 year from the date of original retail purchase, this product will be free from defects in material and workmanship. Coleman, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Coleman dealers, service centers, or retail stores selling Sevylor® products do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

What This Warranty Does Not Cover

This warranty does not cover normal wear of parts, parts that are not genuine Sevylor® parts, or damage resulting from any of the following: negligent use or misuse of the product; commercial use of the product; use contrary to the operating instructions; disassembly, repair or alteration by anyone other than Coleman or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. Warranty void if damage to product results from the use of a part other than a genuine Sevylor® part.

COLEMAN SHALL NOT BE LIABLE FOR DEFECTS THAT ARE CAUSED BY THE USE OF UNAUTHORIZED PARTS OR SERVICE. COLEMAN SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITIONS. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THE ABOVE WARRANTY OR CONDITIONS. SOME STATES, PROVINCES, OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

How to Obtain Warranty Service

Take the product to an authorized Coleman service center. You can find the nearest authorized Coleman service center by visiting www.coleman.com or calling 1-800-835-3278 or TDD 1-316-832-8707 in the United States or 1-800-387-6161 in Canada. If a service center is not conveniently located, attach to the product a tag that includes your name, address, daytime telephone number and description of the problem. Include a copy of the original sales receipt.

Carefully package the product and send either by courier or insured mail with shipping and insurance prepaid to:

For products purchased in the United States:

The Coleman Company, Inc.
 3600 North Hydraulic
 Wichita, KS 67219 U.S.A.

The costs of transporting the product to Coleman or an authorized service center for warranty service is the responsibility of the purchaser.

DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.

If you have any questions regarding this warranty please call 1-800-835-3278 or TDD 1-316-832-8707.

© 2010 The Coleman Company, Inc. All rights reserved.

QuickPump™ and Double Lock™ are trademarks of The Coleman Company, Inc.
 Sevylor® is a registered trademark and , QuikPak™ is a trademark of Sevca, LLC.



3600 North Hydraulic • Wichita, KS 67219 U.S.A.
 1-800-835-3278 • www.Sevylor.com

4010011085 (ECN20016064-01)