ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	ADASPG3APP	STARBOARD ADAPTER PLATE	1
2	14SB34	M6 NYLON SHOULDER BUSHING	4
3	1420SQUARENUT	1/4-20 SQUARE NUT	4
4	M6WASHER	M6 STAINLESS STEEL WASHER	4
5	M6LOCKWASHER	M6 LOCK WASHER	8
6	M645BHCS	M6 x 1.0 x 45 BHCS	4
7	14SSW	1/4" STAINLESS STEEL WASHER	4
8	1420114HCS	1/4-20 x 1.25 HEX BOLT	4

NOTES:
1. ITEM ③ WILL COME ALREADY PRESSED INTO ADASPG3AP.
2. IF YOUR CURRENT CONFIGURATION INCLUDES A SEAVIEW CABLE SEAL YOU MAY NEED TO REPLACE RUBBER BUNG TO ACCOMMODATE NEW STARLINK CABLE.
3. BEFORE BEGINNING THIS INSTALLATION, BE SURE THAT YOUR CABLES ARE ROUTED PROPERLY.

STARLINK PERFORMANCE GEN 3 (NOT INCLUDED)

ANGLED WEDGE BASE (NOT INCLUDED)
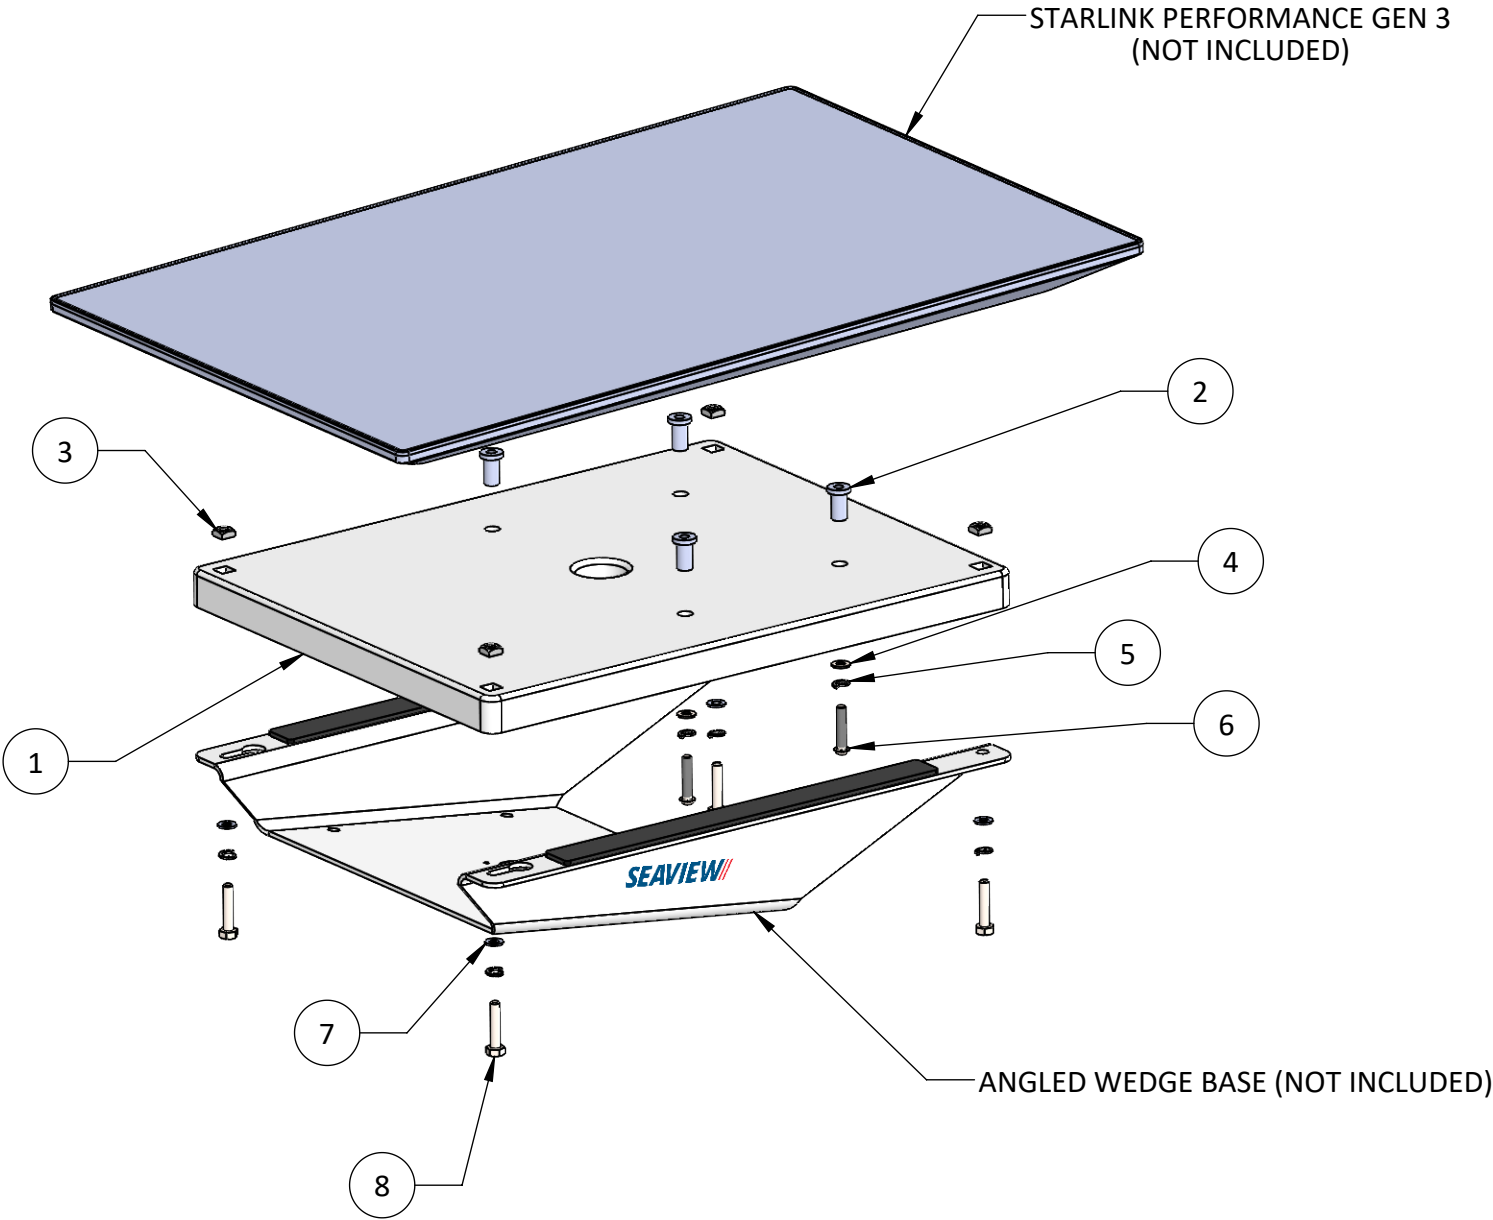
ADASPG3AP

- Please note that some dimensions may not be shown (applies to all pages)
- Do not scale drawing (applies to all pages)
- For help e-mail info@seaviewglobal.com; ph. 1-800-655-7922

∅ 1.38in

8.53in

7.04in

13.31in

5.51in

1.00in

16.92in

CORNER THRU HOLES ARE FOR MOUNTING TO
THE ANGLED WEDGE BASE (NOT INCLUDED)

COUNTERBORES FOR SHOULDER BUSHINGS
(THESE HOLES ARE FOR ATTACHING TO
STARLINK PERFORMANCE GEN 3 ANTENNA)
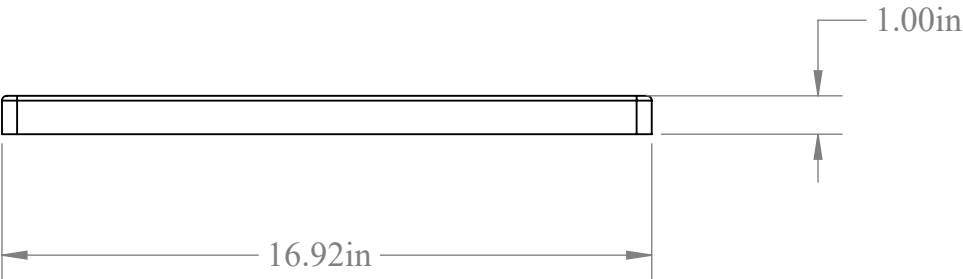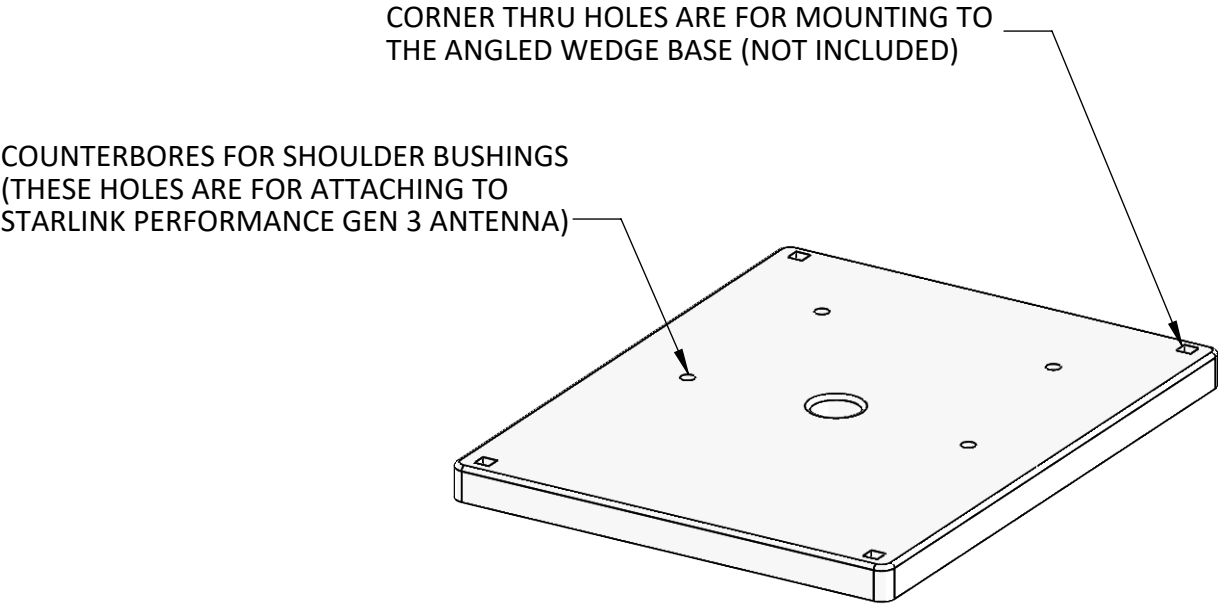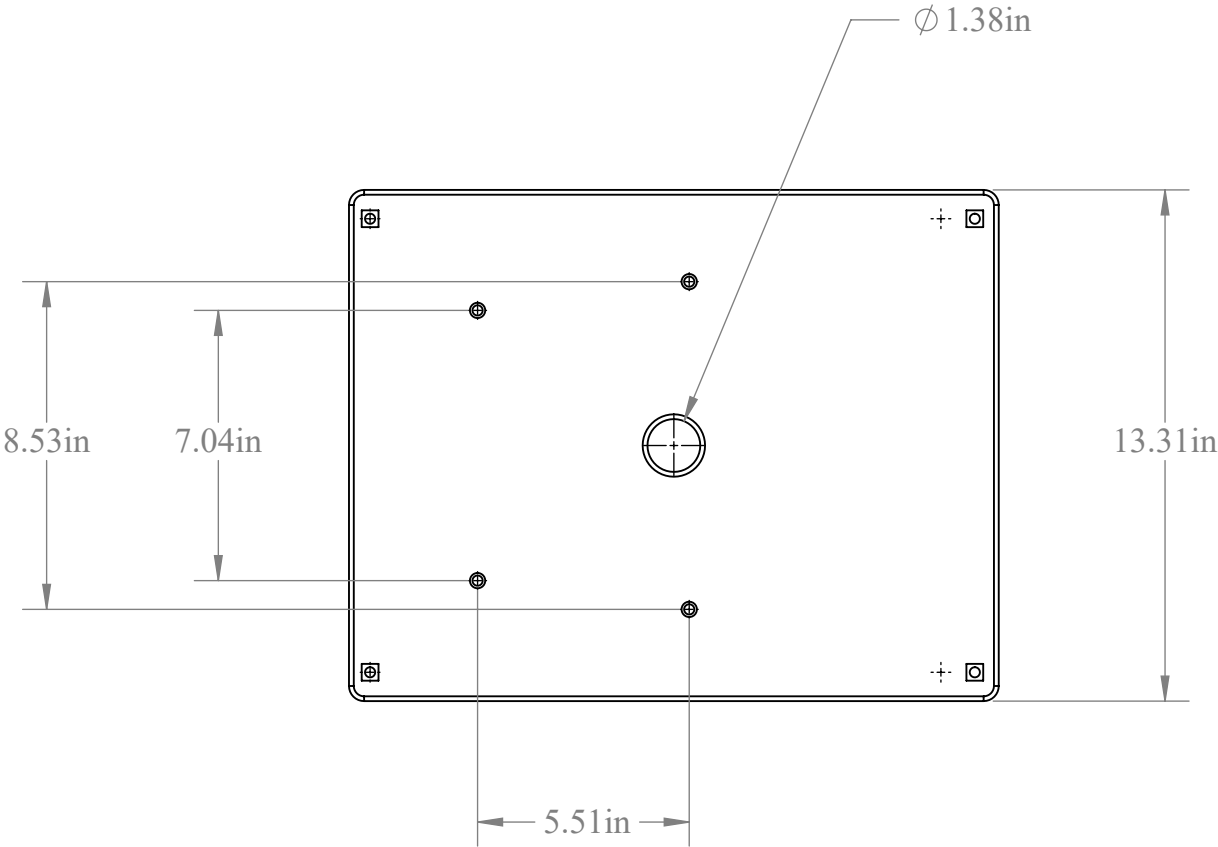
SEAVIEW///

ADASPG3AP

INSTALLATION INSTRUCTIONS BEGIN ON NEXT PAGE

NOTE: It is strongly advised that all installations are carried out by an authorized installer who possesses the necessary expertise and experience in marine equipment installation. Furthermore, prior to the final installation process, we recommend performing a dry fit assembly of all components. This entails fitting the components in their designated positions on the boat without permanently affixing them. This step allows for careful assessment of compatibility, alignment, and any potential adjustments that may be required before proceeding with the actual installation.

For help e-mail
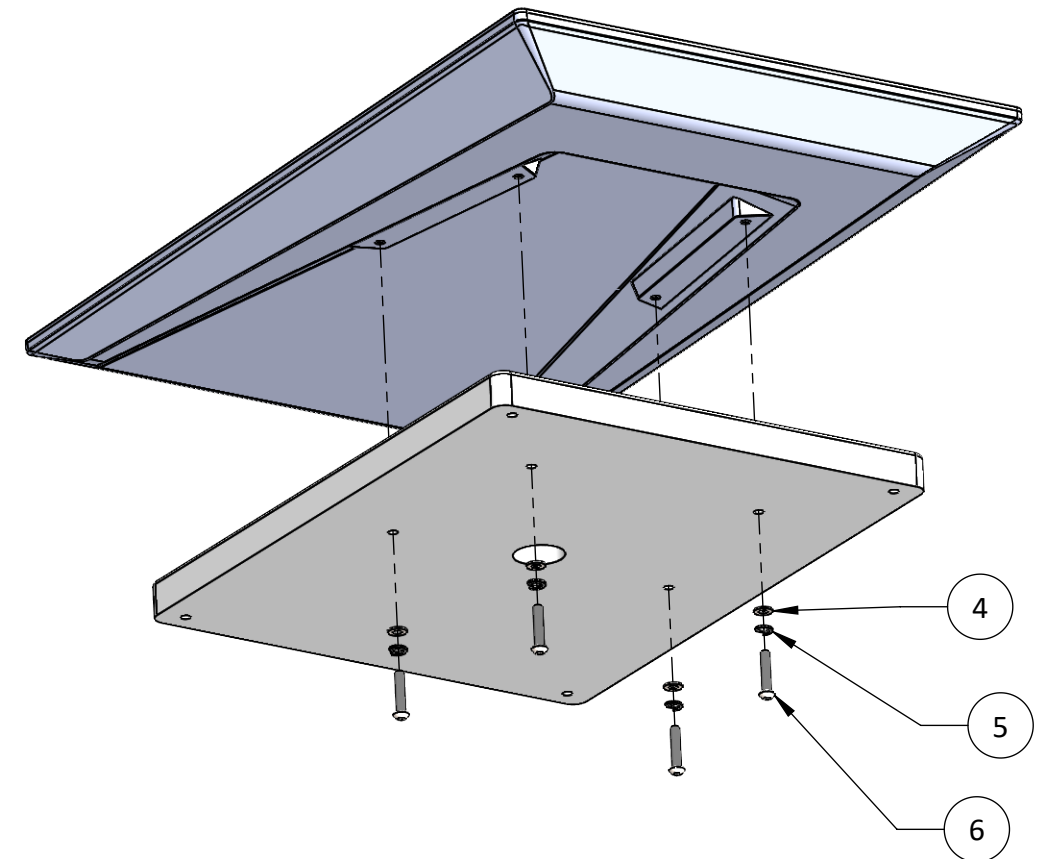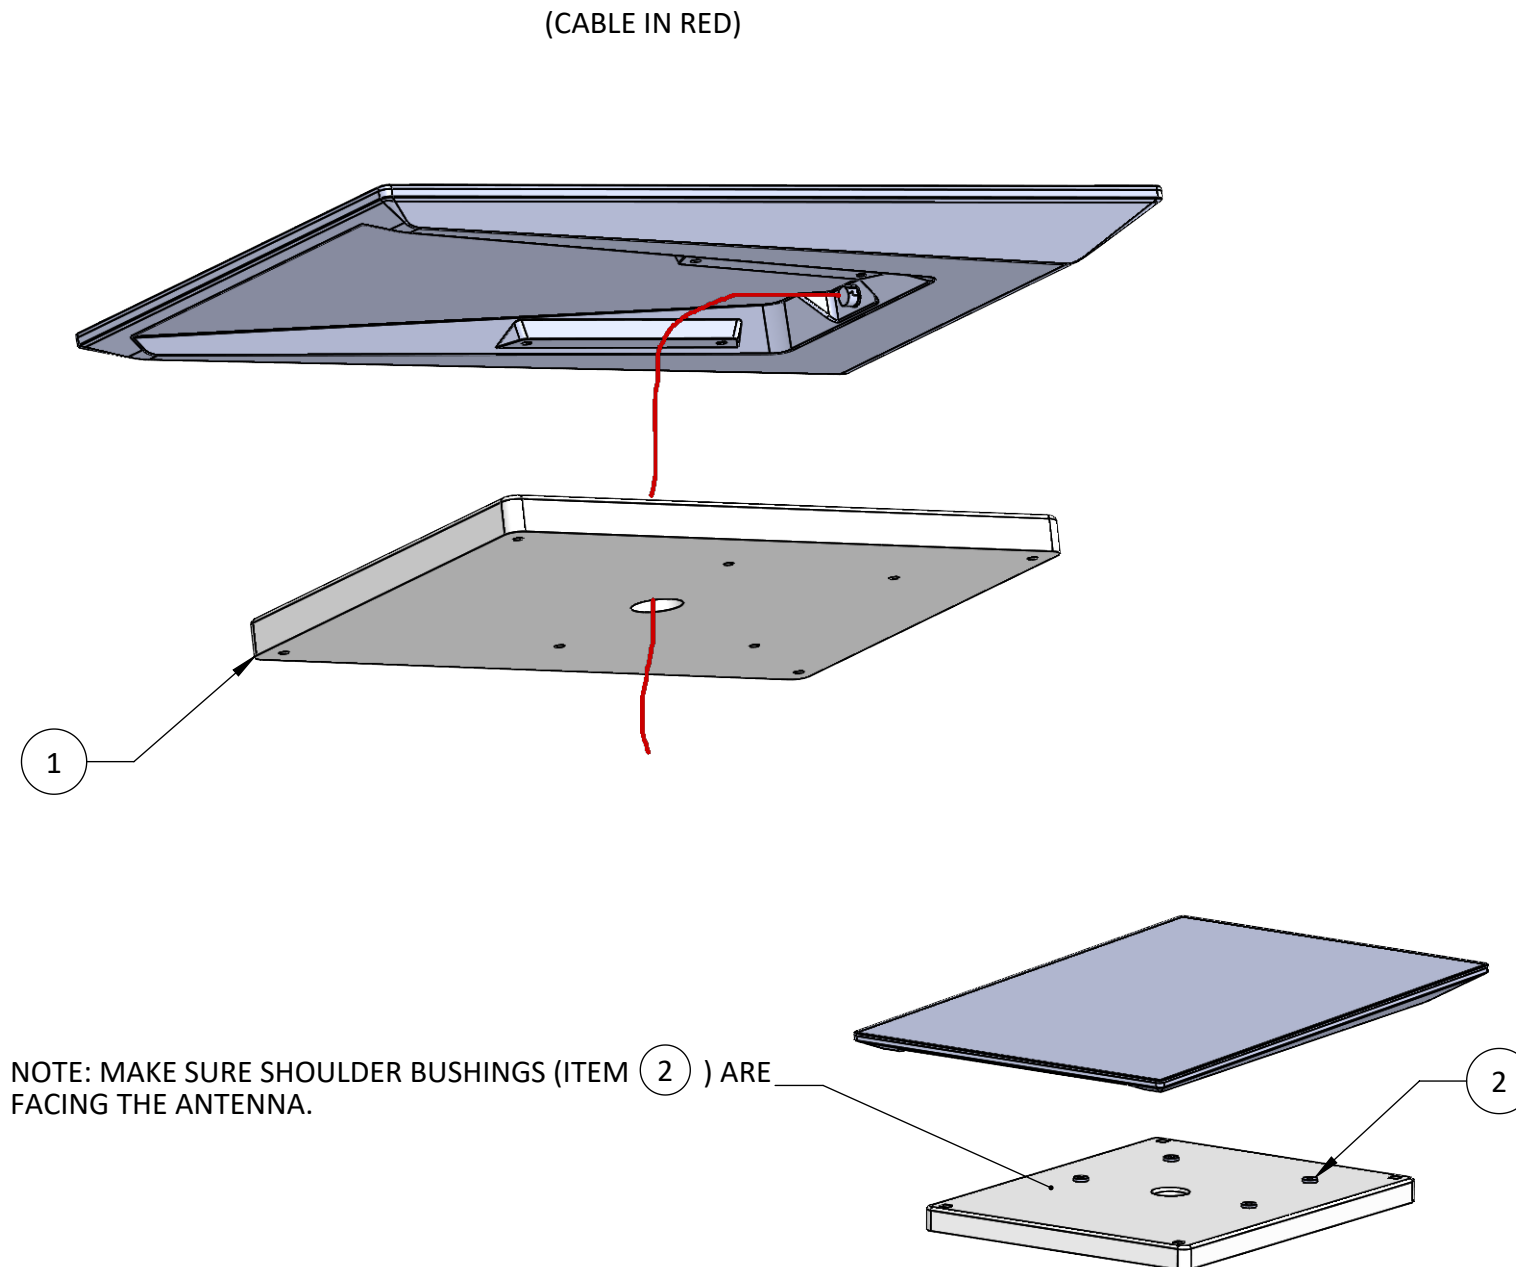info@seaviewglobal.com
ph. 1-800-655-7922

1 Press item ② into each of the four counterbores ensuring that they are fully seated and flush with the surface of item ① .
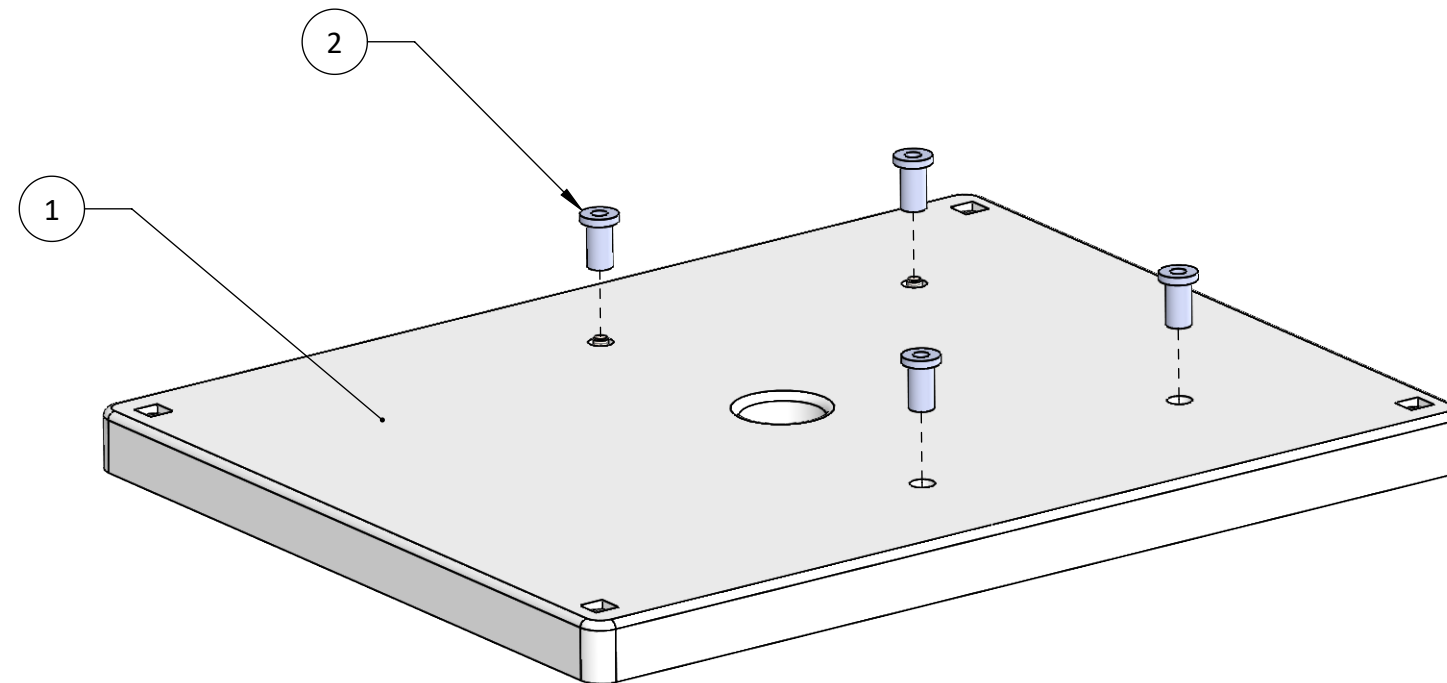
ADASPG3AP

For help e-mail
info@seaviewglobal.com
ph. 1-800-655-7922

2

Route Starlink cable through the large center hole on item (1) and connect it to your Starlink antenna. Then place ADASPG3AP on the underside of antenna in allignment with the four mounting holes before using items (4) - (6) to fasten the plate to the antenna.

(CABLE IN RED)



(1)

(4)
(5)
(6)

NOTE: MAKE SURE SHOULDER BUSHINGS (ITEM (2)) ARE FACING THE ANTENNA.

(2)

ADASPG3AP

For help e-mail
info@seaviewglobal.com
ph. 1-800-655-7922

5

3

You are now ready to attach your ADASPG3AP to the angled wedge base (not included). Position the adapter plate onto the angled wedge base and use items ⑦ , ⑤ , and ⑧ to firmly secure it at all four mounting points as shown.

NOTE: THE SCREWS GOING INTO THE ANTENNA SHOULD BE ORIENTED **TOWARDS** THE HIGH END OF THE WEDGE.

⑦

⑤

⑧
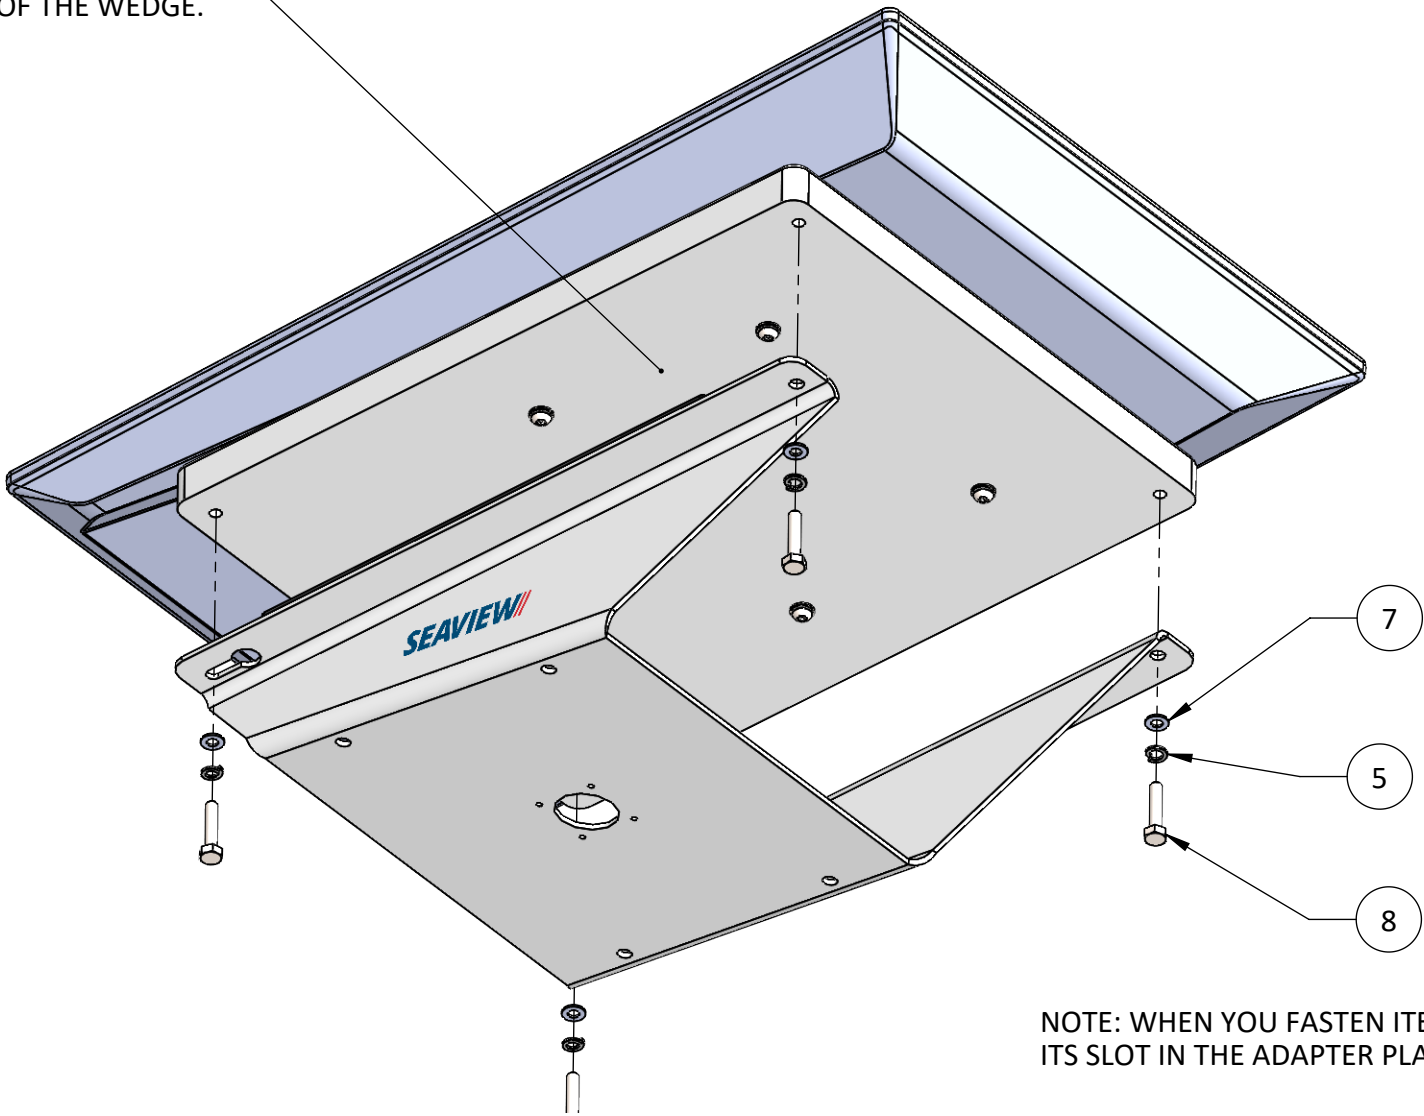
NOTE: WHEN YOU FASTEN ITEM ⑧ THE SQUARE NUT WILL BE PULLED FURTHER INTO ITS SLOT IN THE ADAPTER PLATE. BE SURE TO TIGHTEN ALL THE WAY DOWN.

ADASPG3AP

For help e-mail
info@seaviewglobal.com
ph. 1-800-655-7922