



WIRELESS HYBRID REMOTE AND CHARGING CRADLE INSTRUCTIONS


TOOLS

- Fine-tip Marker
- Electric Drill
- 7/32" Drill Bit
- 7/64" Drill Bit
- #2 Phillips-Head Bit

INCLUDED HARDWARE

LABEL	ITEM #	DESCRIPTION	QTY.
A	AVG-MA-0408	Wireless Hybrid Remote	1
B	SA-0045	Wireless Hybrid Remote Charging Cradle	1
C	AVG-MH-SC-0271	#8 x 1/2" Panhead Sheet Metal Screw	2
D	AVG-MP-1014	Heat Shrink Ring Terminal, 18-22 AWG, #10	2
E	AVG-MP-1013	Heat Shrink Ring Terminal, 18-22 AWG, 3/8"	2
F	AVG-MP-1002	Heat Shrink Butt Connector, 18-22 AWG	1
G	AVG-MP-0935	Fuse Holder, ATC, and ATO 18 AWG Red Lead	1
H	rc-lanyrd-float	Lanyard	1

Dimensions	Cord Length	Wire Gauge	Fuse Size
2 3/8" x 4 1/4"	~4 ft.	20 AWG	2 Amp Mini

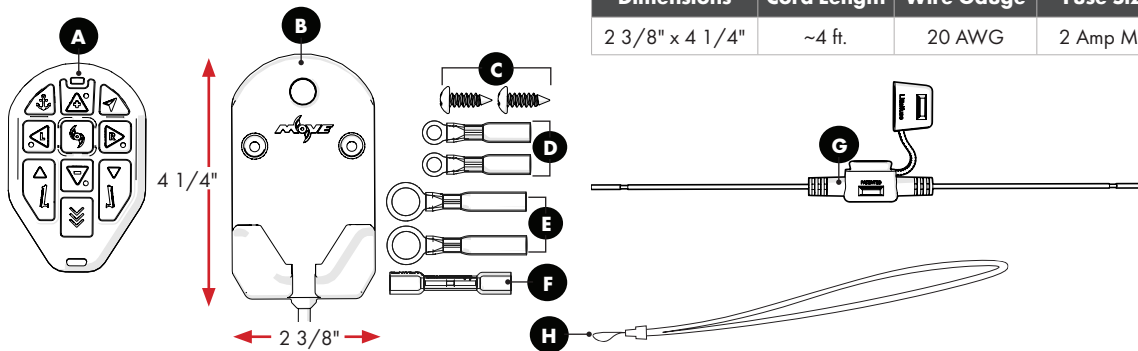

DRILL MOUNTING HOLES




Check the area beneath where the Charging Cradle will be mounted to ensure there are no hoses, wires, lines, tanks or other sensitive components.

STEP 1 Choose a flat surface with adequate space to mount the **Charging Cradle B**.

STEP 2 Lay mounting template in place, mark and drill routing hole for power wire using a **7/32" Drill Bit**.

STEP 3 Mark and Drill mounting holes for **Screws C** using a **7/64" Drill Bit**.

IMPORTANT! If installing to gel-coat, follow the drilling procedure in **Appendix A** of the **Installation & Owner's Guide** to ensure you do not crack or chip the gel-coat.

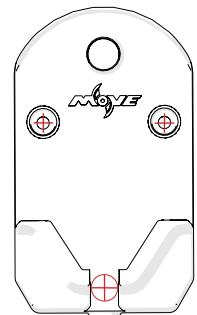



WIRELESS HYBRID REMOTE AND CHARGING CRADLE INSTRUCTIONS

INSTALL CHARGING CRADLE

Using a **#2 Phillips Head Screwdriver**, install (2) **#8 x 1/2" Screws** **C** and tighten snug.

CONNECT TO POWER

NOTICE: Follow **Appendix B** of the **Installation & Owner's Guide** for proper ring terminal and butt connector installation procedures.

STEP 1 Route wire to power.

STEP 2 Attach the **Fuse Holder** **G** to the **Positive (+)** lead from the **Charging Cradle** **B** using **Butt Connector** **F**.

STEP 3 Depending on post size, attach the appropriate **Ring Terminals** **D** or **E** and connect to power, connecting the **Positive (+)** lead to the positive post and **Negative (-)** lead to the negative post.

NOTICE: All Move accessories are compatible with 12v, 24v, and 36v systems.

PAIRING TO THE MOVE



All new remotes must be paired with the Move. Tap **Left** and **Right** at the same time. **This will open the six second pairing window** (The Move will constantly ring and the 3 LEDs on the Navigation Head will intermittently flash **TEAL**). Then, tap **Anchor Down** and **Anchor Up** at the same time. The Move will beep twice, indicating the remote is now paired.

PAIRING TO POWER-POLE SHALLOW WATER ANCHORS

STEP 1 Press and hold the **PROGRAM** button on the **HPU** for 3 seconds until the **LED** turns steady **GREEN**.

STEP 2 Press the **Anchor Up** button on the **Hybrid Remote** for one second. When paired, the **GREEN LED** will flash steadily and the **HPU** will beep. The **LED** on the **Hybrid Remote** will flash **RED** three times.


IF PAIRING TO DUAL POWER-POLES Repeat **STEPS 1 & 2** with the other **HPU**.

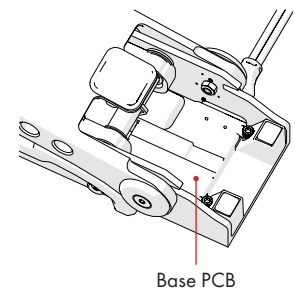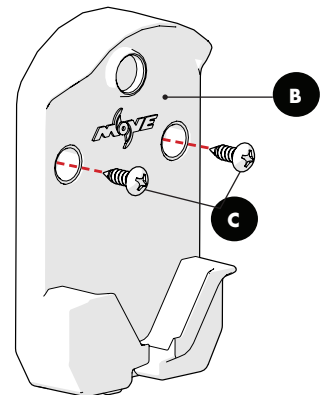



WIRELESS HYBRID REMOTE AND CHARGING CRADLE INSTRUCTIONS

PAIRING POWER-POLE MICRO ANCHORS *(Only for Micro Anchors with CM2 Control system)*

STEP 1 Press and hold the **PROGRAM**  button on the **HPU** or **Micro Driver Unit** until 3 seconds until the **LED** turns steady **GREEN**.

STEP 2 Press the **Anchor Up** and **Anchor Down** buttons on the **Hybrid Remote** at the same time for one second. When paired, the **GREEN LED** will flash steadily.

IF PAIRING TO DUAL MICRO ANCHORS Repeat **STEPS 1 & 2** with the other **Micro Driver Unit**.



REMOTE FEATURES OVERVIEW

Remote Battery Level Indicator

The Remote Control LED serves as a battery level indicator for the Remote Control. When a button is pressed, the LED will flash either red, yellow or green, depending on the battery level (red being low, green being charged).

Charging the Wireless Hybrid Remote

The **Remote Control** snaps into the **Charging Cradle**. It can be stored in the dock or removed and used. To remove the remote, grab either side and firmly pull it from the cradle.


While charging, the LED on the remote will flash red if the battery is low, yellow at mid-charge, green when nearing full charge, and will shift to a solid green when fully charged.

Charging Temperature Constraints

To avoid damage, the Remote Control will not be charged in extreme hot or cold temperatures. If the remote LED displays solid red, it is over charging temperature (113°F). If it displays solid blue, it is too cold for charging (32°F).

Firmware Updates

If a firmware update is available, the next time the Remote Control is plugged into the dock it will be downloaded. While the update is downloading to the remote, the LED will slowly blink red. While the update is installing to the remote, the LED will flash red and green intermittently. When the update is installed, the LED will turn off.

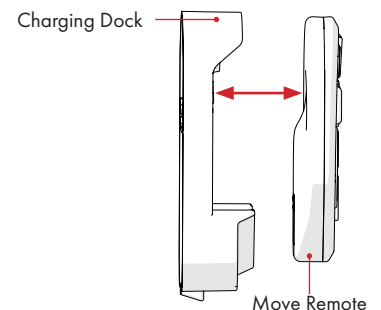



WIRELESS HYBRID REMOTE AND CHARGING CRADLE INSTRUCTIONS

REMOTE BUTTON FUNCTIONS

BUTTON	NAME	FUNCTIONALITY
	Anchor Mode	Tapping will put the Move into Anchor Mode. Tapping or will turn Anchor Mode off. When in Anchor Mode, the buttons on the Move Remote with an Orange Dot (•) can be used to “Jog” the Move. Each time a button is tapped the Move will jog 5’ in a corresponding direction.
	Navigation Heading	Tapping will set a navigation heading. Tapping or will take the unit out of Navigation Heading Mode.
	Speed Up	Tapping will increase trolling motor speed. Speed will be displayed on the Info Display. For more information on the Info Display, see p. 34. This speed will apply to all unit functions and modes.
	Speed Down	Tapping will decrease trolling motor speed. It will be displayed on the Info Display. For more information on the Info Display, see p. 34. This speed will apply to all unit functions and modes.
	Steer Left	Pressing and holding will rotate the prop motor counter clockwise, steering the Move to the left. As soon as you let off , prop motor will stop rotating.
	Steer Right	Pressing and holding will rotate the prop motor clockwise, steering the Move to the right. As soon as you let off , prop motor will stop rotating.
	Reverse Prop	Tapping will put the Move into Reverse mode. Tapping the and buttons while in reverse will change reverse speed. Tapping , , or will take the unit out of Reverse Mode.
	Anchor Down	Pressing and holding will deploy the anchor. Double tapping will auto deploy.
	Anchor Up	Pressing and holding will retract the anchor. Double tapping will auto retract.
	Prop On/Off	Tapping will turn the prop on. It will stay on until is pressed again. If the Move is in Reverse Prop mode, tapping will shut the prop off.



WIRELESS HYBRID REMOTE AND CHARGING CRADLE INSTRUCTIONS

General Statement (for all devices)

Warning: Changes or modifications to this device not expressly approved by JL Marine Systems, Inc. could void the user's authority to operate the equipment.

FCC Specific Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

FCC Part 15.19 Warning Statement – (Required for all Part 15 devices) THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST NOT ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

FCC Part 15.21 Warning Statement – NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC/ISED RF Exposure

ENGLISH: This equipment complies with radiation exposure limits set forth for an uncontrolled environment. This equipment is in direct contact with the body of the user under normal operating conditions. The transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FRENCH: Cet équipement est conforme aux limites d'exposition aux radiations dans un environnement non controle. Cet équipement est en contact direct avec le corps de l'utilisateur dans des conditions de fonctionnement normales. Cet émetteur ne doit pas être co-localisées ou opérant en conjonction avec tout autre antenne ou transmetteur.

ENGLISH: This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must not accept any interference, including interference that may cause undesired operation of the device.

FRENCH: Le présent est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de license. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

MODEL NUMBER	FCC ID:	IC:
MV-AC-RC-REMOTE	A7FEA131	11454A-EA131