

Maretron®

MPower® Digital Switching Platform

CLMD16 **16 Channel DC Load Controller Module**



User's Manual

Revision 2.1

Copyright ©2024 Maretron, Inc.

**120 Intracoastal Pointe Dr.
Jupiter, FL 33477 USA**

All Rights Reserved

<http://www.maretron.com>

Revision History

Revision	Description
1.0 – 1.3	Internal Review
1.4	Re-formatted document as necessary to render HTML version
1.5	Added additional H-Bridge figures, Initial Release
1.6	Corrected “J3” connector pin descriptions
1.7	Added Revision History table, revised Footer styles, added new switching element quantities
1.8	Added “Toggle Mode” Definition
1.9	Added “PWM Default” Definition, “Manual Mode” Definition and “Breaker On” input selection
2.0	Change the following names: ‘Binary Event’ to ‘Input’, ‘Binary Event Monitor’ to ‘Input Monitor’. Revised ‘Half Bridge’ ECB feature definition.
2.1	Refined definitions for ‘Counter’ controls and ‘H-Bridge Channels’ PWM frequency. Added ‘Group Switching’, ‘Soft On/Off’ and, ‘Hardwired Inputs’ 1-8 127508 PGN broadcast for voltage definitions. Added CLMD16R box contents differentiation and ‘Load Label’ printing instructions. Added 12awg Stamp & Form contact information to ‘connections’ segment.

Table of Contents

Introduction	1
Firmware Revision	1
CLMD16 Features	2
Theory of Operation	3
CLMD16 Hardware Description	4
Installation	5
Unpacking the Box.....	5
Choosing a Mounting Location	5
Mounting the CLMD16.....	5
Connecting the CLMD16.....	5
Main DC (+) Connection	6
Main DC (-) Connection	8
Wiring J1 – J3 Connectors.....	8
Checking Connections.....	15
NMEA 2000 Connections.....	16
Labeling CLMD16.....	16
Breaker (Output) Features	18
Overcurrent protection	18
Soft Start.....	20
Pulse Width Modulation (PWM)	20
Soft Turn On / Off	21
Paralleling Breakers.....	21
Full Bridge Operation	22
Load Shedding.....	24
Input Monitor	25
High, Low and Float Thresholds	25
Input Hysteresis	25
Reference Ground	27
Input Voltage Broadcast	27

Switching Application	27
Counters	27
Timer	29
Flash	29
Latch	30
Toggle	31
Logic	32
Alarm Output	33
Group Switching	33
Available Signals	34
Configuring the CLMD16	34
General Tab	35
Control Tab	40
Alarm Tab	41
Advanced Tab	42
Counter Tab	46
Flash Tab	49
Grouping Tab	50
Inputs Tab	52
Tanks Tab	55
Tank Levels Calibration	57
Latch Tab	61
Load Shedding Tab	62
Logic Tab	64
Timer Tab	66
Toggle Tab	68
Discrete I/O Tab	69
Group Switching Tab	70
Installation Description Tab	71
Operating the CLMD16	73
LED Indicators	73
DIAG	73
CAN-A	73
CAN-B	73
POWER	73
Breaker Status LED Indicators	74
Override Switches	74
Maintenance	75
Troubleshooting	75
Technical Specifications	76
Certifications	76
NMEA 2000 Parameter Group Numbers (PGNs)	77
Electrical	78
Mechanical	78
Environmental	79
Environmental Testing	79

CLMD16 User's Manual

Technical Support	79
Maretron (2 Year) LimitedWarranty.....	80
Warranty Return Procedure:	81

Table of Appendices

Appendix A – NMEA 2000 Interfacing.....	A1
-----------------------------------------	----

Table of Figures

Figure 1 - Hardware Description Front View	4
Figure 2 - Hardware Description Bottom View	4
Figure 3 - Required Connections	6
Figure 4 - Required Deutsch Wire Crimping Tools.....	10
Figure 5 - Accessory Cable Assemblies.....	12
Figure 6 - Recommended Cable Assembly Connection Example.....	13
Figure 7 - NMEA 2000 Connectors	16
Figure 8 - Populating Label Contents.....	17
Figure 9 - Preparing Label Template.....	18
Figure 10 - Current vs Time Graph	19
Figure 11 - Soft Start Voltage Ramp	20
Figure 12 - Paralleled Breakers Connection Recommendation	22
Figure 13 - Full Bridge Operation Concept.....	23
Figure 14 - Input Monitor Hysteresis	26
Figure 15 - General Configuration Tab Dialog Box	35
Figure 16 - Control Tab Dialog Box.....	40
Figure 17 - Alarm Configuration Tab Dialog Box.....	41
Figure 18 - Advanced Configuration Tab (Upper Portion) Dialog Box.....	42
Figure 19 - Advanced Configuration Tab (Lower Portion) Dialog Box.....	43
Figure 20 - Counter Configuration Tab Dialog Box	46
Figure 21 - Flash Configuration Tab Dialog Box	49
Figure 22 - Grouping Configuration Tab Dialog Box	50
Figure 23 - Inputs Configuration Tab Dialog Box	52
Figure 24 - Inputs Configuration Tab (Resistive Input and Current Loop Channels Dialog Box).....	53
Figure 25 - Tanks Configuration Tab Dialog Box	55
Figure 26 - Current Loop Manual Table Calibration Tank, Initial Window Dialog Box.....	58
Figure 27 - Current Loop Step Fill Calibration Tank, Initial Window Dialog Box.....	59
Figure 28 - Current Loop Step Fill Tank Calibration Dialog Box.....	60
Figure 29 - Current Loop Tank Fill Confirmation Dialog Box.....	60
Figure 30 - Latch Configuration Tab Dialog Box	61
Figure 31 - Load Shedding Configuration Tab Dialog Box	63
Figure 32- Logic Confirmation Tab Dialog Box	65
Figure 33 - Timer Configuration Tab Dialog Box.....	66
Figure 34 - Toggle Configuration Tab Dialog Box	68
Figure 35 - Discrete I/O Configuration Tab Dialog Box	69
Figure 36 - Group Switching Dialog Box	70
Figure 37 - Installation Description Tab Dialog Box	72

Notices:

All illustrations are for reference purposes only. Nothing contained in this document shall replace or modify the requirements of industry standards applicable to installation, including without limitation, those of the American Boat and Yacht Council (ABYC), the National Electric Code (NEC), and/or the National Fire Protection Association (NFPA). Failure to install the device or any components thereof in compliance with such regulatory code may limit the warranties made by Carling Technologies, Inc.



WARNING

- Tampering with the CLMD16 including removal of the CLMD16 cover will compromise the operation of the unit and voids warranties set forth by Carling Technologies.
- Please ensure that you read and understand this manual before undertaking installation and use.
- The CLMD16 must be wired in accordance with standards set forth by ABYC and other applicable agencies.

Introduction

Congratulations on your purchase of the Maretron MPower® CLMD16, 16 Channel DC Load Controller Module. Carling Technologies has designed and built your CLMD16 to the highest standards for years of dependable and accurate service.

The Maretron CLMD16 contains 16 output channels implemented by direct current (DC) Electronic Circuit Breakers (ECBs). Twelve breakers are rated at 12A max current capacity, and four breakers are rated for 25A max current capacity. The total current capacity of the CLMD16 is 125A. In addition to fast switching, low-loss solid state ON/OFF breakers, it provides accurate current measurement for each load as well as short circuit protection. Certain breakers can be configured to operate in full-bridge mode, making them ideal for control of electric motors where a reversing polarity function is needed.

The CLMD16 contains 8 voltage sensing input channels in which 'High', 'Low' or 'Float' voltage thresholds can be configured. The CLMD16 also contains two resistive input channels (250Ω and 1KΩ) and a single 4-20mA current loop input channel which could be used for indication of tank levels and also feature a configurable 'High', 'Low' or 'Float' threshold. The CLMD16 supplies a set of output terminals which can be connected to an external alarm LED, sounder or relay which can be activated under a wide variety of conditions. Additionally, the CLMD16 contains 4 input channels separate from other inputs reserved for digital addressing or future expansion of input capability.

The CLMD16 connects directly to one or two NMEA 2000® networks so you can control it from any device running Maretron N2KView® software, such as TSM-Series multifunction displays, MBB-Series black box. The CLMD16 may also be controlled directly from a VMM Switch or CKM keypad, or any other device transmitting the NMEA Binary Status Report PGN (127501) Additionally, since the CLMD16 supports standard NMEA 2000 messages for control, it can be controlled by many third-party multi-function displays.

The CLMD16 handles resistive DC loads like lights or inductive DC loads like pumps and motors as well as capacitive loads.

The Maretron CLMD16 is designed to operate within the harsh demands of the marine environment. However, no piece of marine electronic equipment can function properly unless installed, configured, and maintained in the correct manner. Please read carefully and follow these instructions for installation, configuration, and usage of the Maretron CLMD16 to ensure optimal performance.

Firmware Revision

This manual corresponds to CLMD16 firmware revision (1.0.3.66)

CLMD16 Features

- 16 Total Output Breakers
 - 12x12A, 4x25A Breaker Maximum Current Ratings (resistive, capacitive, and inductive load capable)
 - Short Circuit Protected
 - Up to 32VDC Switching Voltage
 - Voltage back feed protection [back-to-back Field Effect Transistor (FET)] for all breaker outputs
 - All Breaker Outputs Support Soft Start
 - Parallel Breaker Capability. (4 Groups, each group can have up to 2 breakers)
 - PWM breaker operation capable on Output Channels 1-12 (200Hz)
 - Current Measurement on all Breaker Outputs (accuracy is ± 0.5 Amps at 0.1 Amp resolution)
 - Two (2) full-bridge (H-bridge) outputs (Breakers 1 and 2, and 11 and 12)
- 125A Maximum Unit Current Capacity
- Capacitive Touch Switches for local override control of all loads
- (8) Voltage-Sensing Hardwired Inputs to sense DC (-), DC (+), "Float" or other configurable voltage thresholds
- (2) Resistive Hardwired Inputs (0-250 Ω) & (0-1000 Ω) for tank level sensing, 'High', 'Low', or 'Float' configurable resistive thresholds or both tank level sensing and threshold use
- (1) Current Loop Hardwired Input (4-20 mA) for tank level sensing, 'High', 'Low', or 'Float' configurable current thresholds or both tank level sensing and threshold use
- All Hardwired Inputs protected against short to DC(+) and short to DC(-)
- Alarm output (switched DC (+) and DC (-) (12 or 24 VDC))
- Dual Optically Isolated Controller Networks (CAN) over NMEA 2000 for zero potential of ground loops and redundant communication ability
- Ignition Protected Sealed Waterproof Enclosure and Connectors - Ingress Protection IP67
- Voltage Input: 8 to 32 VDC (reverse polarity protected)
- Power Stud: 125 DC Amps max current capacity, continuous @ 70°C
- Ground Stud: 25 DC Amps max current capacity
- Operating Temp: -30°C to 70°C
- Four (4) Hardwired Address Inputs (Active Low, For Future Use)

For Technical Specifications please refer to page 76.

Theory of Operation

The CLMD16 provides the ability to control DC power to load circuits using 16 independent solid-state PWM capable Electronic Circuit Breakers (ECBs). Each breaker contains protection against overcurrent, over-temperature, and short circuit. Traditionally, a bank of mechanical circuit breakers are located on a panel from where bundles of cables lead to the various loads. As the circuit breaker panel may be some distance from a load, extensive wiring could be required. By placing a CLMD16 close to the loads being serviced, wiring becomes reduced. The CLMD16 is simply connected to a suitable local power supply and an NMEA 2000 network. The output breakers on the CLMD16 are then connected to the loads that they control, often by cables considerably shorter than those that would be required using conventional circuit breaker panel systems. Several CLMD16 units may be placed in different locations can all be controlled electronically via one of the interfacing methods described below. An added advantage is that as requirements change, circuits can be reconfigured without making any physical changes to circuit breakers as would be required with traditional mechanical circuit breakers.

Each breaker output in the CLMD16 may be controlled using any of the following methods:

- 1) Maretron N2KView software running on a personal computer*
- 2) Maretron N2KView software running on a Maretron MBB-Series Black Box for Vessel Monitoring and Control
- 3) Maretron N2KView software running on a Maretron TSM-Series Vessel Monitoring and Control Touchscreen Computer
- 4) Maretron N2KView Mobile app running on an Android or iOS tablet or phone**
- 5) Maretron DSM-Series NMEA 2000 Multi-function Color Graphic Display
- 6) Any NMEA 2000-connected switch, such as an Maretron MPower CKM-Series network-connected keypad or VMM-Series network-connected switches
- 7) Any NMEA 2000 product that can transmit standard NMEA 2000 control messages such as a third-party MFD (please refer to Appendix A for details).
- 8) Any of the 8 hardwired inputs on this CLMD16, another CLMD16, CLMD12 and various other devices.

* Requires a USB100 or IPG100 gateway with a License Key

** Requires an IPG100 gateway

The breakers can be controlled and monitored through use of the Breaker/ Switch component in the Electrical Distribution category of the Maretron display products listed above. In addition, the current through each breaker may be monitored through the Breaker/ Switch Current component in the Electrical Distribution category of Maretron display products.

Since the output channels are implemented by electronic circuit breakers, if the unit's Main DC(+) is removed, all breakers will revert to the open (OFF) state. The state that the breaker will be in when the unit's Main DC(+) is restored can be configured to be On, Off, or in the last state the breaker was in before Main DC(+) was removed. If NMEA 2000 power is lost, the breakers will maintain their state and can be manually operated through the capacitive touch local override control panel located on the front of the unit. To place the unit into Override Mode, the 'Override' key must be held for 1s.

CLMD16 Hardware Description

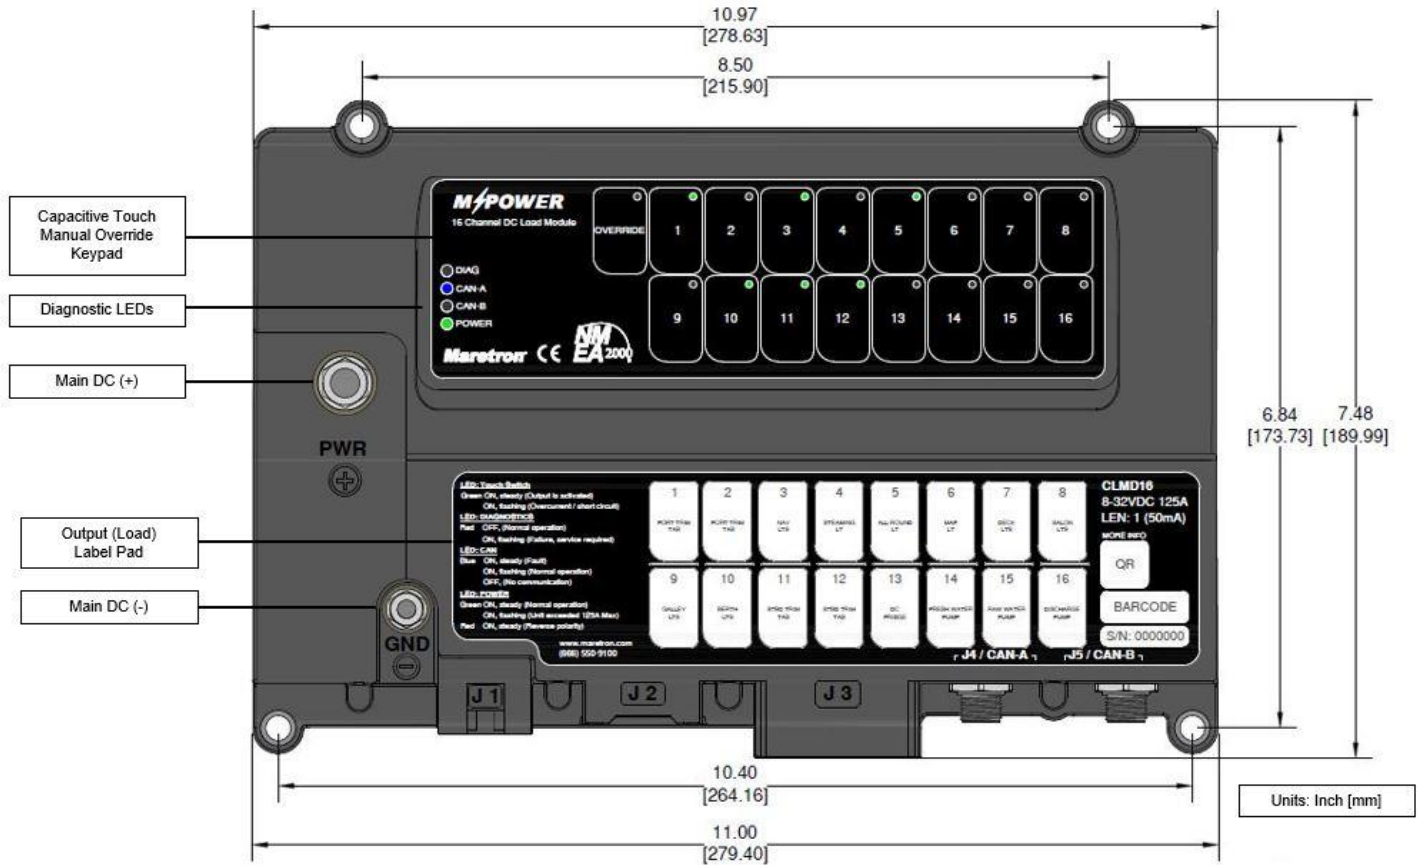


Figure 1 - Hardware Description Front View

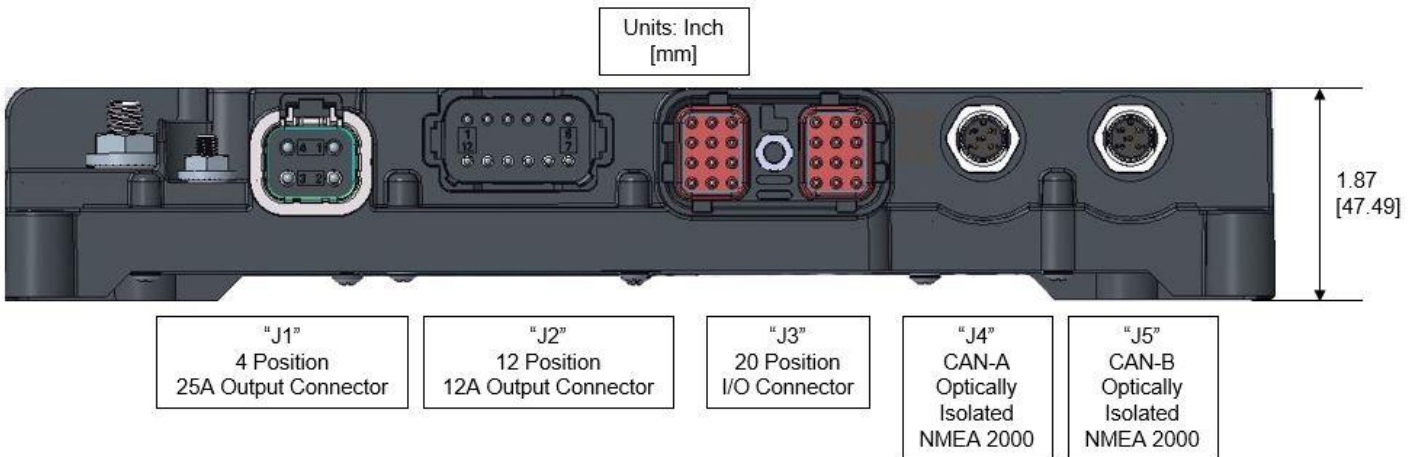


Figure 2 - Hardware Description Bottom View

Installation

Installing the Maretron CLMD16 involves the following steps.

Unpacking the Box

When unpacking the box containing the Maretron CLMD16, you should find the following items:

- 1 – CLMD16 – 16 Channel DC Load Controller Module
- 1 – CLMD16 'J1', 'J2' & J3' Connector Kits (CLMD16R Only)
- 1 – CLMD16 Load Label Sheet
- 1 – CLMD16 Quick Start Guide
- 1 – CLMD16 Mounting Template
- 1 – CLMD16 User's Manual QR Card
- 1 – Warranty Registration Card

If any of these items are missing or damaged, please contact Maretron Technical Support.

Choosing a Mounting Location

Please consider the following when choosing a mounting location.

- The CLMD16 is IP67 rated
- The CLMD16 is temperature-rated to 70°C (158°F)
- The CLMD16 is ignition protected
- The unit can be mounted vertically with the connectors coming from the side or horizontally with the connectors coming from the bottom of the unit.

Mounting the CLMD16

Locate and drill mounting holes according to the mounting template supplied with the CLMD16. Attach the CLMD16 securely using flange-headed screws or fasteners with washers through the four mounting holes at each corner of the unit. Do not use thread-locking compounds containing methacrylate ester, such as Loctite Red (271), as they will cause stress cracking of the plastic enclosure.

Connecting the CLMD16

Connecting the CLMD16 consists of making the following connections outlined below:

- Connecting the unit's (2) main DC connections
- Connecting used output and input connections in 'J1-J3' connectors
- Connecting to an NMEA 2000 network

Required connections for the CLMD16 are shown in Figure 3

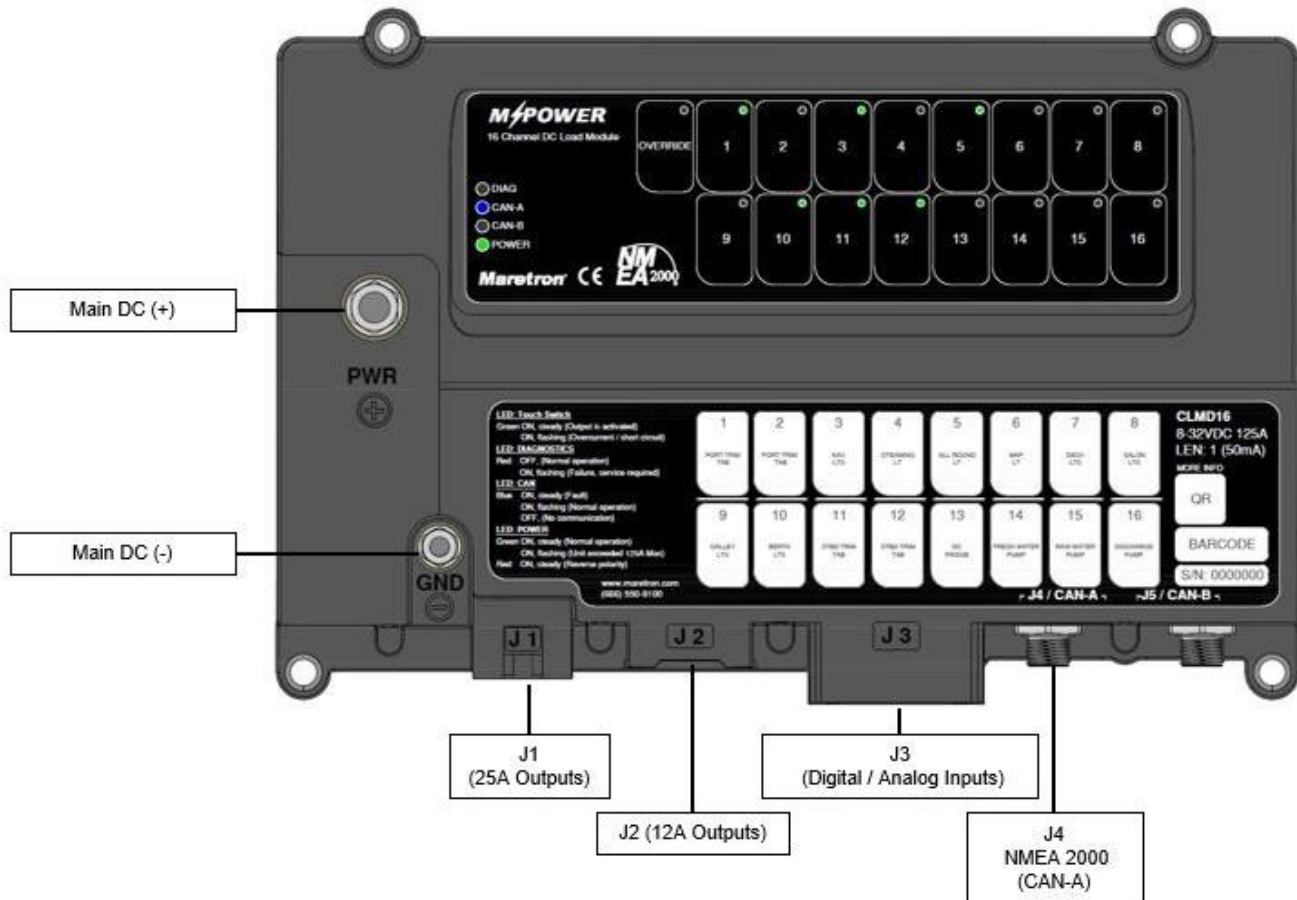


Figure 3 - Required Connections

Main DC (+) Connection

The unit's main DC (+) connection is made using commonly available components not included with the CLMD16.

Connect a source of DC (+) with a ring terminal to the 5/16"-18 stud on the front of the device and torque the connection within the specified range of 30 – 35 in-lbs. (3.39 – 3.95N·m). Ensure that the cable providing the Main DC (+) source is protected by a fuse or circuit breaker with a value appropriate to protecting the wire. Cable runs should be kept as short as possible to avoid unnecessary voltage drop. If unsure of appropriate cable sizing, the CLMD16 load calculation requirement can be found by using a load calculation reference table as outlined by ABYC 11.8.1. See Table 1 for an example of this load calculation method. Using the load table's findings, choose an appropriate feeder cable per ABYC E-11, Table 9 and 10. If unsure, consult a certified regulatory standard installer for your application type.

Note: Multiple CLMD16 units can be connected to the same Main DC (+) feeder source so long as the unit's main fuse / breaker overcurrent protection does not exceed 125A (The maximum specification of the CLMD16) and the feeder wire to each unit is sized identically.

Table 1 - Main DC (+) Load Calculation Table Example

In Column A, list the loads maximum operating current that must be available for continuous duty use during normal operation considering possible load usage during an emergency.

In Column B, list the loads maximum operating current for loads that are for intermittent use or would not be used in a continuous duty manor.

Example Load Calculation Table of (2) CLMD16's Loads with a single feeder source:

Note:

Enter current ratings of each load's actual maximum **operating current** and not In-Rush current or the device's fuse size.

Column A	
Loads:	Current (Amps):
Forward Bilge Pump	12.5
Aft Bilge Pump	12.5
Navigation Lights	3.5
All-Round Light	1.5
Stern Light	1.5
Map Light	2
Pilothouse lights	3
Windshield Wiper	14.5
Searchlight	12.5
DC Refrigerator	18
Alarm	1
Service / Bilge Lights	6.5
Generator Control	1

Total Amps Column A:	90
----------------------	----

Total Load Required Accommodation:	
Total Amps Column A:	90
Total Amps Column B:	15
Main DC (+) Feeder Sized for:	105 Amps

Column B	
Loads:	Current (Amps):
Berth Lights	3
Galley Lights	5.5
Salon Lights	5.5
Deck Lights	8
Fwd Spreader Light	5
Aft Spreader Lights	9
Fresh Water Pump	9
Raw Water Pump	9
Head	15
Head Vent	4
Discharge Pump	12
Aerator	5
Baitwell Pump	5
Port Trim Tab	7.5
Stbd Trim Tab	7.5

Total Amps Column B:	110
10% of Total Amps Column B:	11
Largest Load in Column B:	15

Enter the larger Number From Column B. (10% of Total Amps or Largest Load)

Example Load Calculation Table of a Single CLMD16's Loads:

Column A	
Loads:	Current (Amps):
Forward Bilge Pump	7.5
Aft Bilge Pump	7.5
Navigation Lights	3.5
Anchor Light	1.5
Map Light	1.5
Windshield Wiper	12
Searchlight	13
DC Refrigerator	16
Service / Bilge Lights	4.5

Total Amps Column A:	67
----------------------	----

Total Load Required Accommodation:	
Total Amps Column A:	67
Total Amps Column B:	9
Main DC (+) Feeder Sized for:	76 Amps

Column B	
Loads:	Current (Amps):
Console Lights	3
Deck Lights	5.5
Fwd Spreader Light	4
Aft Spreader Lights	8
Fresh Water Pump	9
Raw Water Pump	9
Livewell Pump	6

Total Amps Column B:	44.5
10% of Total Amps Column B:	4.45
Largest Load in Column B:	9

Enter the larger Number From Column B. (10% of Total Amps or Largest Load)

Main DC (-) Connection

The unit's main DC (-) connection is made using commonly available components and are not included with the CLMD16.

Connect the Main DC (-) connection with a ring terminal to the #10 stud on the front of the device and torque the connection within the specified value of 10 – 15 in-lbs. (1.13 – 1.69 N·m). Because the Main DC (-) connection has the potential to be a current carrying conductor, a 10 AWG minimum wire size is mandatory for this connection. Failure to adhere to this recommendation may void unit's warranty. It is recommended to increase the size of this connection if the length of the wire exceeds (20) Ft or (6.0) M. from the vessel / vehicle's main ground source. If unsure of appropriate cable sizing, use Table 2.

Table 2 - Main DC (-) Cable Length Table

12V Systems:			
≤ 30ft	≤ 40ft	≤ 60ft	≤ 100ft
10 Awg	8 Awg	6 Awg	4 Awg

24V Systems:			
≤ 40ft	≤ 60ft	≤ 80ft	≤ 100ft
10 Awg	8 Awg	6 Awg	4 Awg

Wiring J1 – J3 Connectors

The J1-J3 receptacles on the CLMD16 unit were designed to accept Deutsch brand DTP, DT, and DRC series plugs. If needed, Maretron can supply optional pre-made 2m harnesses for the J1 and J2 connections and a 2m wiring kit for the J3 connection.

Wiring a Harness Directly to J1-J3

If connecting harnessing directly to the J1-J3 receptacles, a Deutsch HDT- 48-00 crimp tool will be needed and possibly the Deutsch DTT-12-01 crimp tool (for 10 AWG Wire connections) (see: Figure 4). A description of the Deutsch brand components that will be needed for connecting to the J1-J3 connections are outlined in

Table 3.

HDT-48-00 Crimp Tool (20 AWG – 12 AWG Solid Contacts)



DTT-16-02 Crimp Tool (12 AWG Stamp & Form Contacts)



DTT-12-01 Crimp Tool (10 AWG Stamp & Form Contacts)



Figure 4 - Required Deutsch Wire Crimping Tools

Table 3 - Required Deutsch Plug Components

Part Number	Picture	Mating Receptacle	Description	Quantity Required
DTP06-4S		J1 (Output)	4 Pos. DTP Series Plug Housing	1
WP-4S		J1 (Output)	4 Pos. DTP Series Plug Wedgelock	1
0462-203-12141		J1 (Output)	12-14 Awg. Socket Solid Contact	Match Qty. to Positions Using 12-14 Awg.
1062-12-0222		J1 (Output)	10 Awg. Socket Stamp & Form Contact	Match Qty. to Positions Using 10 Awg.
114017-ZZ		J1 (Output)	12-16 Awg. Blanking Plug	Match Qty. to Unused Positions
DT06-12SA		J2 (Output)	12 Pos. DT Series Plug Housing	1
W12S		J2 (Output)	12 Pos. DT Series Plug Wedgelock	1
1062-16-1222		J2 (Output)	12 Awg. Socket Stamp & Form Contact	Match Qty. to Positions Using 12 Awg.
0462-209-16141		J2 (Output)	14 Awg. Socket Solid Contact	Match Qty. to Positions Using 14 Awg.
0462-201-16141		J2 (Output)	16-18 Awg. Socket Solid Contact	Match Qty. to Positions Using 16-18 Awg.
114017-ZZ		J2 (Output)	12-16 Awg. Blanking Plug	Match Qty. to Unused Positions
DRC26-24SA		J3 (I/O)	24 Pos. DRC Series Plug Housing	1
0462-005-20141		J3 (I/O)	16-18 Awg. Socket Solid Contact	Match Qty. to Positions Using 16-18 Awg.
0462-201-20141		J3 (I/O)	20 Awg. Socket Solid Contact	Match Qty. to Positions Using 20 Awg.
0413-204-2005		J3 (I/O)	20 Awg. Blanking Plug	Match Qty. to Unused Positions

Connecting J1-J3 Using Maretron Accessory Cable Assemblies (CLMD16R)

If you opt to use the premade cable assemblies, you will need to splice the ends of the cable assemblies or connect them to a terminal block. See Figure 6 for a depiction of a terminal block connection. Connectors J1 and J2 come with numbered leads, these numbers are indicators for the Breaker Output number and not the pin position. For a description of the cable assemblies available from Maretron see Figure 5.

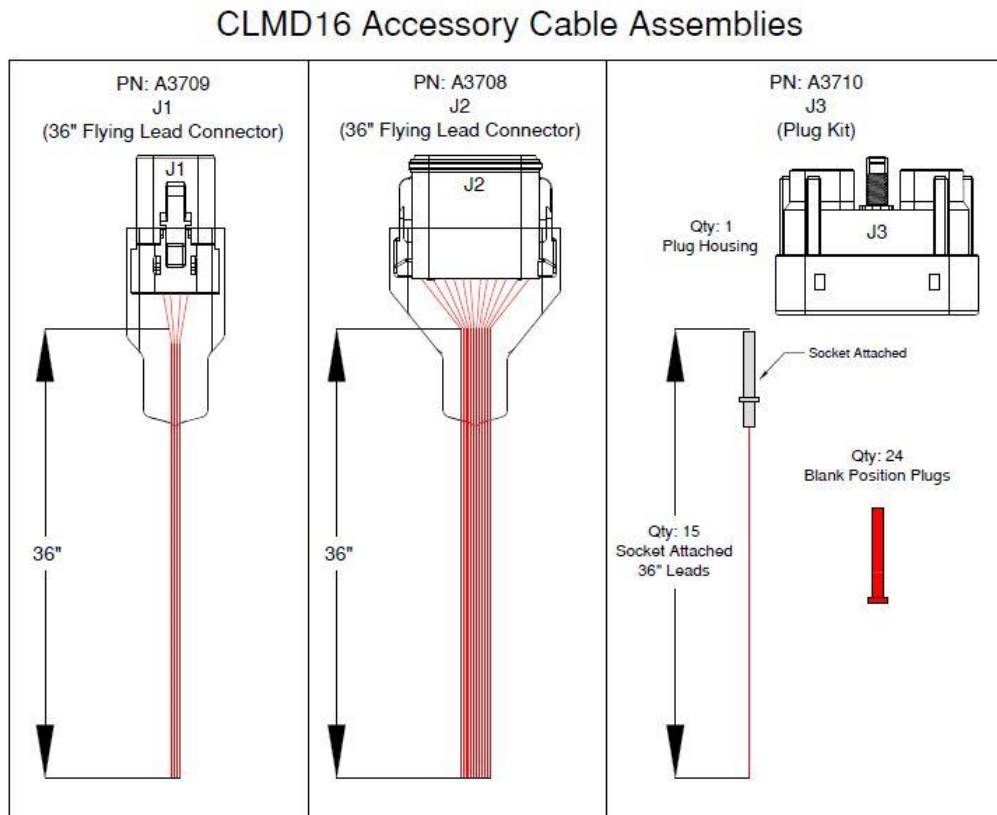


Figure 5 - Accessory Cable Assemblies


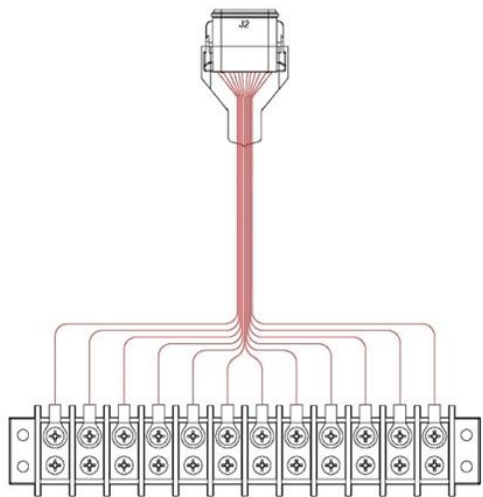


Figure 6 - Recommended Cable Assembly Connection Example

‘J1’ (25 Amp Breaker) Position Description

Table 4 - J1 Connector Pin Description


J1 Connector Pin No. (Location)	Description
1	25 A (Breaker #13)
2	25 A (Breaker #14)
3	25 A (Breaker #15)
4	25 A (Breaker #16)

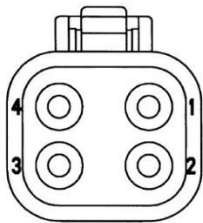

‘J2’ (12 Amp Breaker) Position Description

Table 5 - J2 Connector Pin Description


J2 Connector Pin No. (Location)	Description
1	12 A (Breaker #1 / Full Bridge #1)
2	12 A (Breaker #2 / Full Bridge #1)
3	12 A (Breaker #3)
4	12 A (Breaker #4)
5	12 A (Breaker #5)
6	12 A (Breaker #6)
7	12 A (Breaker #7)
8	12 A (Breaker #8)
9	12 A (Breaker #9)
10	12 A (Breaker #10)
11	12 A (Breaker #11 / Full Bridge #2)
12	12 A (Breaker #12 / Full Bridge #2)

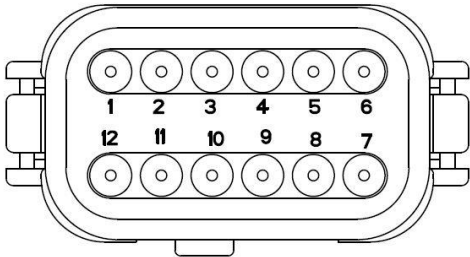

'J3' (General Purpose Plug) Position Description

Table 6 - J3 Connector Pin Description

J3 Connector Pin No. (Location)	Description
1	Address Input #1
2	Input #1
3	Input #5
4	4 to 20mA sense current loop (Positive)
5	Hardwired Input #9 (Resistive 0-1000 Ω)
6	Reserved for future use – do not connect
7	Address Input #2
8	Input #2
9	Input #6
10	4 to 20mA sense current loop (Negative)
11	Input #10 (Resistive 0-250 Ω)
12	Hardwired Input Reference Negative
13	Address Input #3
14	Input #3
15	Input #7
16	Relay / Alarm (Positive) (300mA Max)
17	Reserved for future use – do not connect
18	Reserved for future use – do not connect
19	Address Input #4
20	Input #4
21	Input #8
22	Relay / Alarm (Negative) (300mA Max)
23	Reserved for future use – do not connect
24	Reserved for future use – do not connect

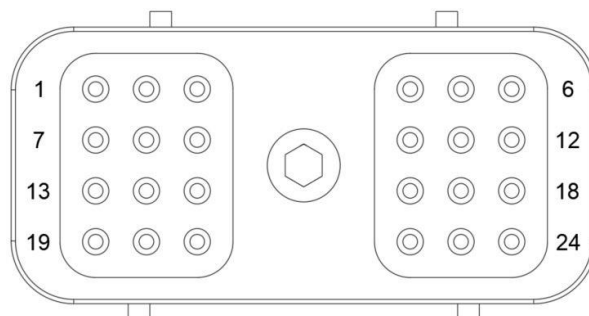

Checking Connections

Once all the connections to the CLMD16 have been completed, check to see that information is being properly transmitted by observing an appropriate NMEA 2000 display. If you do not see channel on/off status, refer to Section: Troubleshooting.

NMEA 2000 Connections

The NMEA 2000 connectors are round five-pin male connectors and can be found on the bottom of the CLMD16 enclosure labeled 'J4 / CAN-A' and 'J5 / CAN-B'. See these connectors in Figure 4. These connectors are known as DeviceNet or NMEA 2000 micro-C connectors. Connect the CLMD16 to a NMEA 2000 network using a Maretron NMEA 2000 cable (or compatible cable) by connecting the female end of the cable to one of the male NMEA 2000 connectors on the CLMD16 (note the key on the male connector and keyway on the female connector). Be sure the cable is connected securely and that the collar on the cable connector is tightened firmly. Connect the other end of the cable (male) to the NMEA 2000 network in the same manner. The CLMD16 is designed such that you can plug or unplug it from an NMEA 2000 network while the power to the network is connected or disconnected. Please follow recommended practices for installing NMEA 2000 network products.

NOTE: It is only necessary to connect one of the NMEA 2000 connectors to a network. Two connections are included for use with redundant parallel or independent networks. If only one network is used, it is recommended to cap the secondary unused network connector.

NMEA 2000 connections can be made using pre-assembled leads or may be made using field attachable connectors and cables (See: Figure 7).

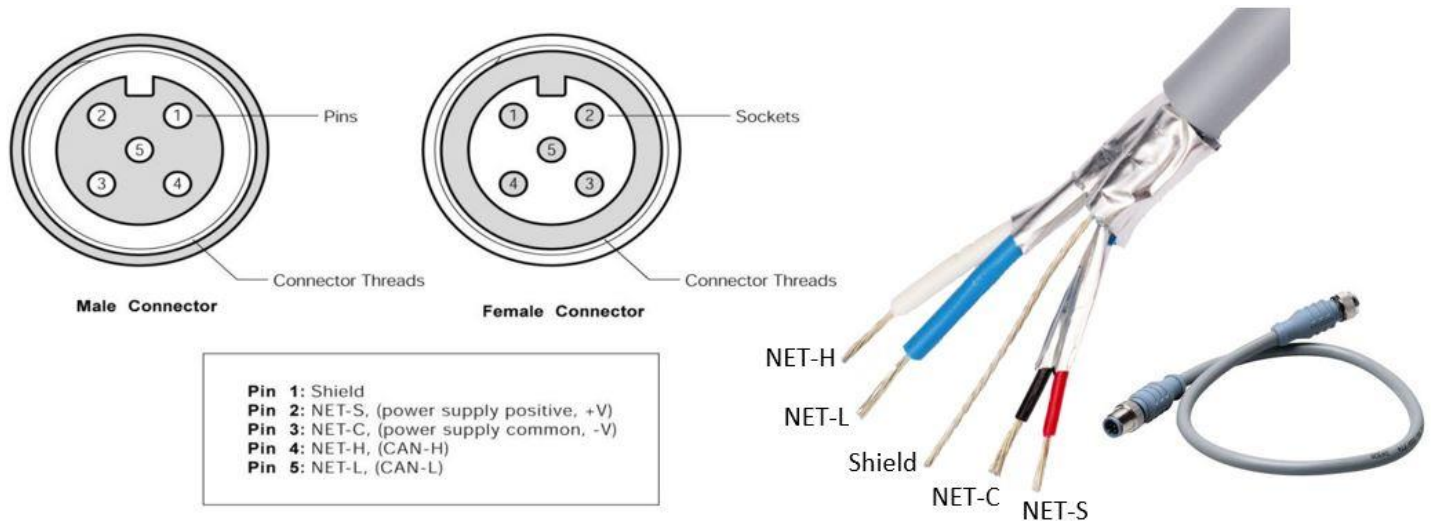


Figure 7 - NMEA 2000 Connectors

Please refer the Maretron website (www.maretron.com/products/cabling.php) for relevant products.

Labeling CLMD16

The CLMD16 provides an area where the load breakers which the CLMD16 are controlling can be labeled. This area is numbered 1-16 corresponding to the breaker numbers. Labeling your CLMD16 provides an easy method to understand what is connected to the device as well as providing a reference to the respective Manual Override switch functions. Maretron provides an 8 ½ x 11 size Label Sheet with each CLMD16R. The Label Sheet printing template is built-in to the CLMD16 Module Documentation Form and can be downloaded from:

<https://www.maretron.com/support/manuals/CLMD16%20Module%20Documentation%20Form%20Rev.7.pdf>

The label can be printed using a standard 8 ½ x 11 paper size Laser Printer. The label is not compatible to be printed on with inkjet printers.

Instructions for printing CLMD16 Label

On the top of the first page of the CLMD16 Documentation Form is a depiction of a CLMD16. Anywhere where a field is blue in color, text can be applied. Insert the desired label name for each of the 1-16 ECBs. See Figure 8 for an example of populating the load name for labeling the CLMD16.

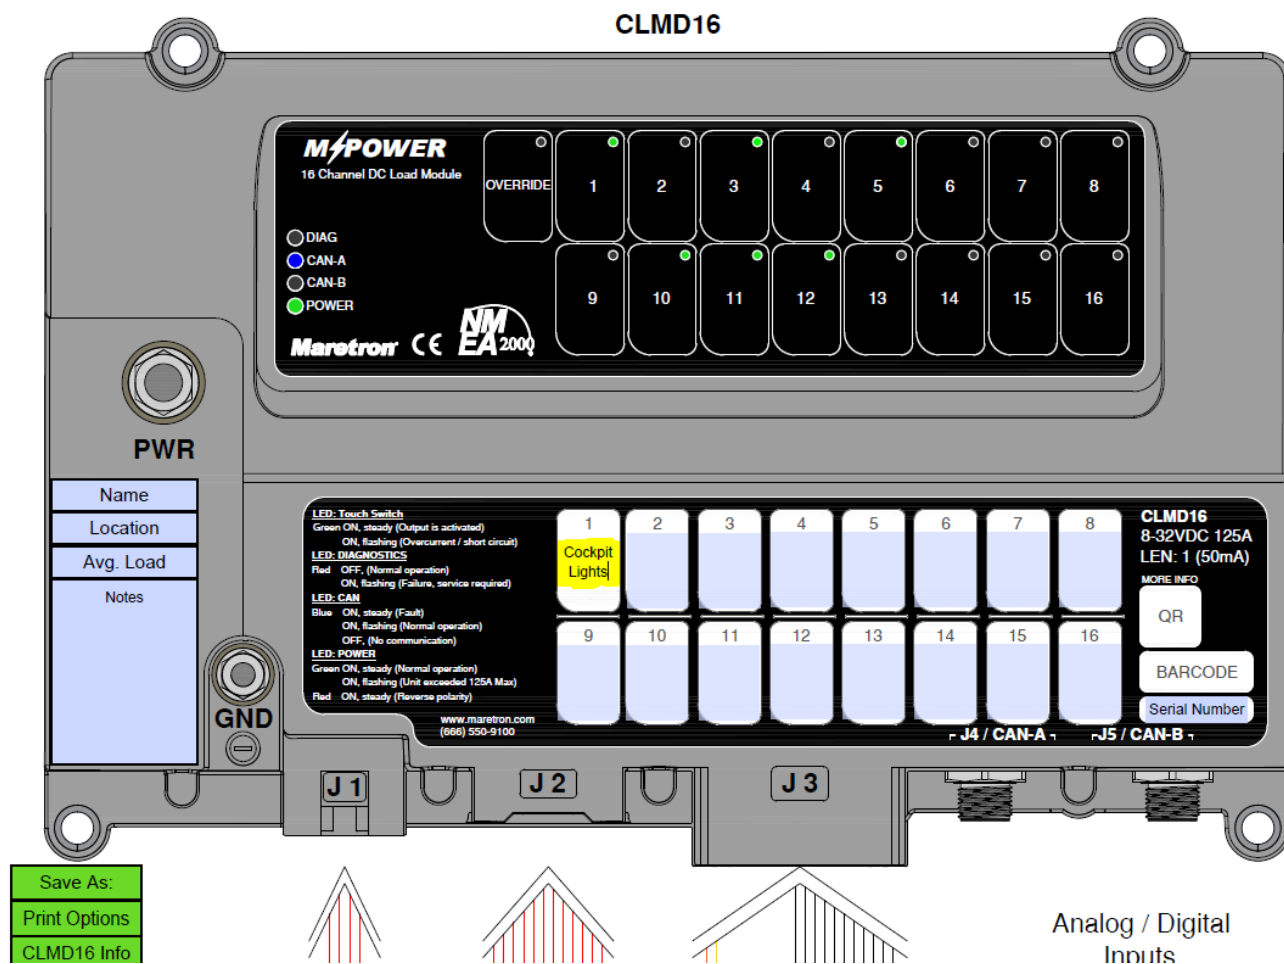


Figure 8 - Populating Label Contents

Once all the desired load names are populated into the label area of the CLMD16 Module Documentation Form, the print label field on page 2 of the form can be prepared. To prepare the label for printing, press the 'Load' button on the form for the label that is to be printed. There are a total of 4 labels provided on the label sheet; therefore, if load requirements for the CLMD16 ever change, a new label can be printed. If printing a second or replacement label, use the 'Reset' button to clear the fields for the particular label, then press the 'Load' button on the next desired label to be printed. Use the 'Font' buttons to change the font of the print as needed. See Figure 9 for an example of how populated label field values are migrated to the label template page (page 2) of the

Module Documentation Form.

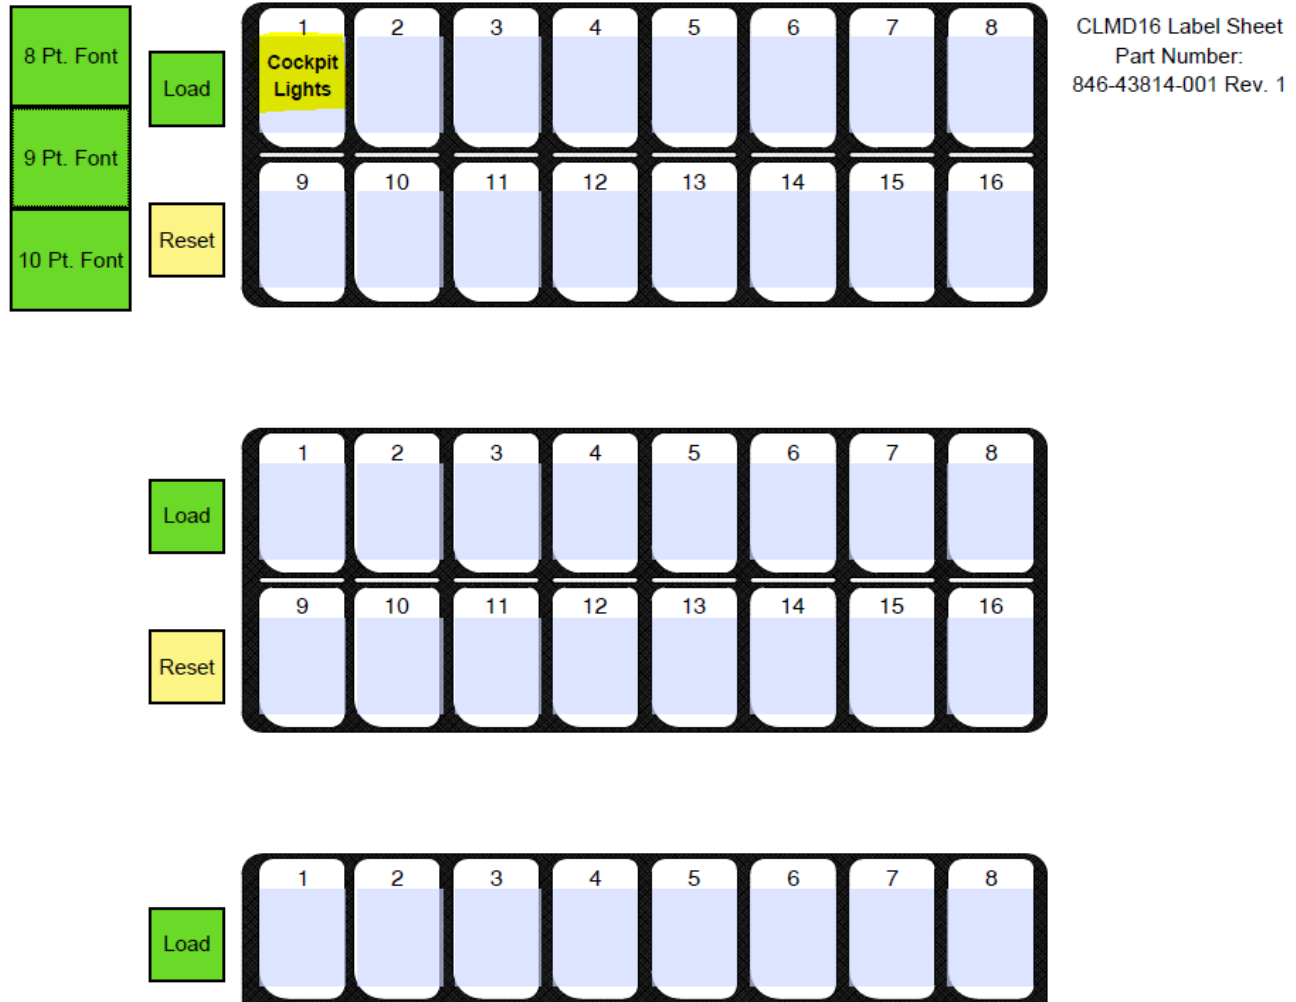


Figure 9 - Preparing Label Template

Once the label template is ready to print, place the label sheet into a compatible laser printer and ensure to print 'Actual Size' page 2 only. It is recommended to print a test page to ensure the printer's settings are correct before printing on the actual label.

Breaker (Output) Features

Overcurrent protection

The Electronic Circuit Breaker feature is fundamental to the CLMD16 product; the purpose of the feature is to automatically disconnect a load from the supply when an electrical fault is detected to protect the load and its supply wiring from damage.

The CLMD16 Electronic Circuit Breaker trip behavior mimics the operation of traditional circuit breakers. The time a mechanical circuit breaker takes to trip is governed by several factors,

including sensing time, unlatching time, mechanical operating time, and arcing time. In the CLMD16, this is replaced by configurable parameters.

The Electronic Circuit Breaker performs the following protective functions:

- Overload Protection (long time delay trip function)
- Short circuit protection with delayed trip (short time pickup)
- Instantaneous short circuit protection (instantaneous trip function)

Each Electronic Circuit Breaker uses a microprocessor to process the current signal and operate the circuit breaker opening in case of fault. By digital processing of the signal, they provide the following protection functions:

- Long Time-Delay trip function.
- Short Time-Delay trip function.
- Instantaneous trip function.

To mimic the function of traditional mechanical circuit breakers, it is possible to configure the time-delay trip function to suit connected loads. The CLMD16 can trip if there is an over-current or thermal event-based trip characterized by an Instantaneous, Short, or Long time delay curve. Each of these curves has an instant trip region, as shown in Figure 10.

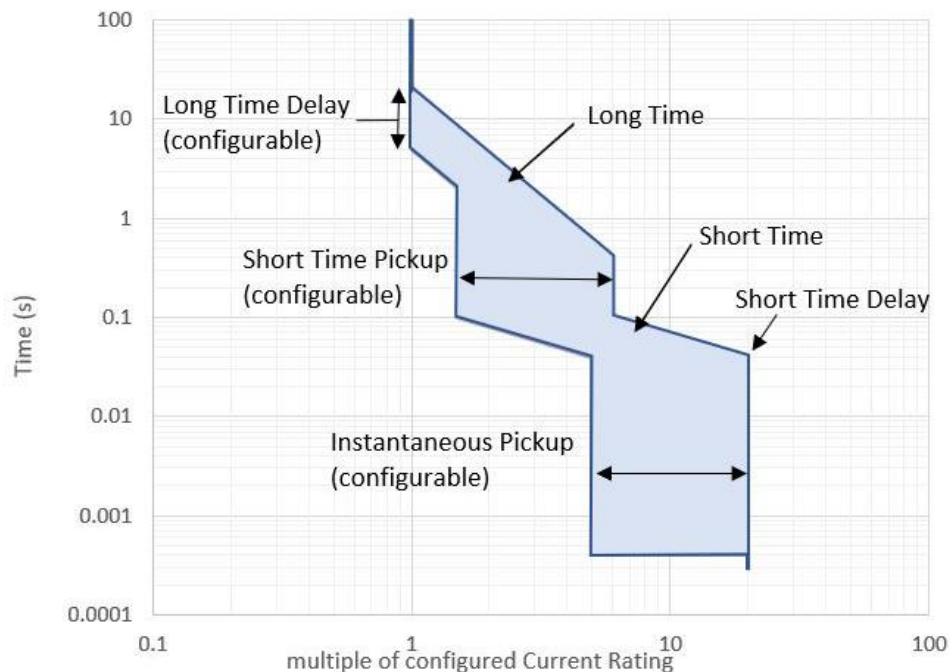


Figure 10 - Current vs Time Graph

The nominal current that can flow through a breaker is determined by the power it can dissipate continuously without exceeding its own thermal limits. When an overcurrent condition is detected, the CLMD16 will trip, turning off the current to the supplied load. The breaker can be reset by turning OFF and then ON again through the NMEA 2000® interface or at the capacitive touch local override control on the front of the unit.

The breakers in the CLMD16 are configurable so that nuisance tripping is avoided where the start-up current may be more than those experienced in a continuous duty cycle.

The system installer / configurator will need to know the current rating of the load, the maximum start-up peak current, and duration allowed for the peak in order to correctly configure the ECB settings.

Soft Start

Soft Start is a function that ramps up the voltage, of a breaker output when it is turned on to reduce the inrush current to the device being powered. (See: Figure 11)

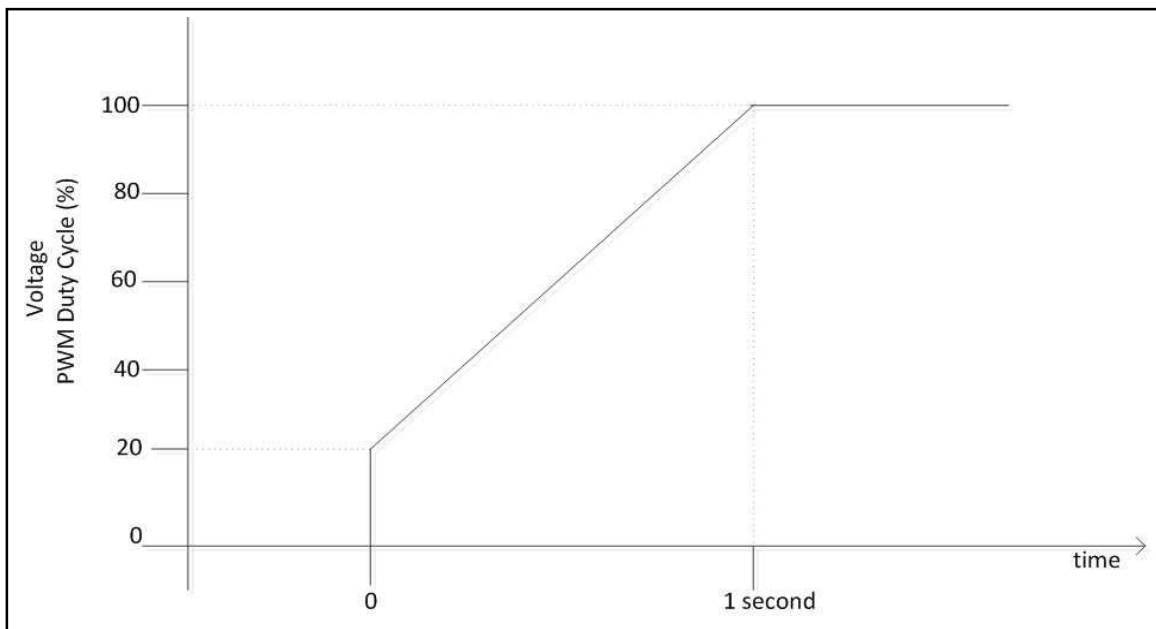


Figure 11 - Soft Start Voltage Ramp

Soft Start ramps the voltage of the breaker output over a 1 second period. This can be used to overcome initial inertia for certain (high in-rush current) loads at start-up.

Soft Start has a configurable initial voltage expressed as a percentage of whatever the CLMD16's full voltage is. The Soft Start Initial Duty Cycle defaults to 10%.

Pulse Width Modulation (PWM)

Some breakers can be operated in pulse width modulation (PWM) mode. For lighting, this is referred to as 'dimming' and used to control the brightness of lighting. The breaker may be configured to any value between 1% to 100% in increments of 1%.

Please note that the dimming function is not supported on breakers that have been configured to operate in parallel with other breakers.

**WARNING**

Use of a breaker in a PWM mode (duty cycle less than 100%) for control of inductive loads such as motors and transformers is prohibited, and may damage the CLMD16.

Soft Turn On / Off

If a breaker is configured as PWM type, *Soft Turn On/Off* can be enabled. *Soft Turn On/Off* applies a 1 second ramp for the breaker to 'ramp' from 0% PWM to the configured dimming level when turning On or from the configured dimming level PWM to 0% PWM when turning Off. This feature is meant for the purpose of a lighting effect to add an automatic dimming effect when lights are turned On and Off.

Paralleling Breakers

Some CLMD16 breakers can be configured to operate in parallel for higher current capacity:

Breakers #1 and #2

Breakers #3 and #4

Breakers #7 and #8

Breakers #13 and #14

- When connecting paralleled breakers to a load, both cable lengths connected to the load must be equal. Rather than running twin cables, it is often easier to connect the two outputs together at a terminal block by using a jumper, and then running a suitably sized single cable to the load. This ensures a matched impedance. (see: Figure 12)

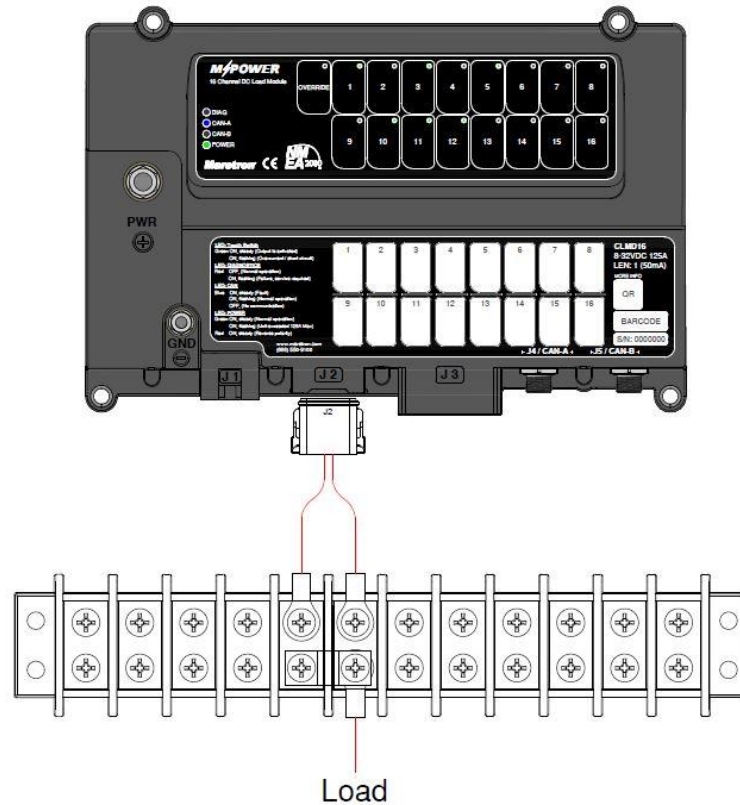


Figure 12 - Paralleled Breakers Connection Recommendation

Please note that the maximum current rating when multiple breakers are paralleled is typically, 180% of the single channel rating. (Example: 18A maximum for two 10A breakers in parallel). When two breakers are configured in parallel, the lowest-numbered breaker controls the pair. For example, if breakers #1 and #2 are configured to operate in parallel, commands that control breaker #1 will control the state of both paralleled breakers. The lowest-numbered breaker will also set the trip current for both breakers. The trip current will need to be configured to 50% of the desired trip current value. For example, if you parallel breaker #1 and breaker #2 and wish to use them to supply power to a load rated around 12 Amps, breaker #1 will need to be set to 6 Amps. Lastly, PWM and Soft Start operation is not supported on breakers that have been configured to operate in parallel with other breakers.

Full Bridge Operation

12-amp breakers 1 and 2, and 11 and 12, can be configured to offer polarity reversing capability by configuring the breaker type to 'Full-Bridge' (AKA: 'H-Bridge'). Loads such as actuators are a great application for this circuit type. Soft Start Full-Bridge mode is supported and configurable if needed. See: Figure 13 for Full-Bridge concept pertaining to CLMD16.

Note: Breakers 1,2 and 11,12 utilize Half-Bridge circuit topology. These breakers, when configured to Full-Bridge Mode utilize the two (2) half bridge circuits to drive Full-Bridge (Polarity Reversing). Full-Bridge mode makes the breaker output connect to DC (-) when the breaker is in the off state

rather than become high impedance. The connection to DC (-) when Off passively brakes DC motors by removing electrical fields that naturally occur when a motor coasts to stop.

CLMD16 Full Bridge (Concept)

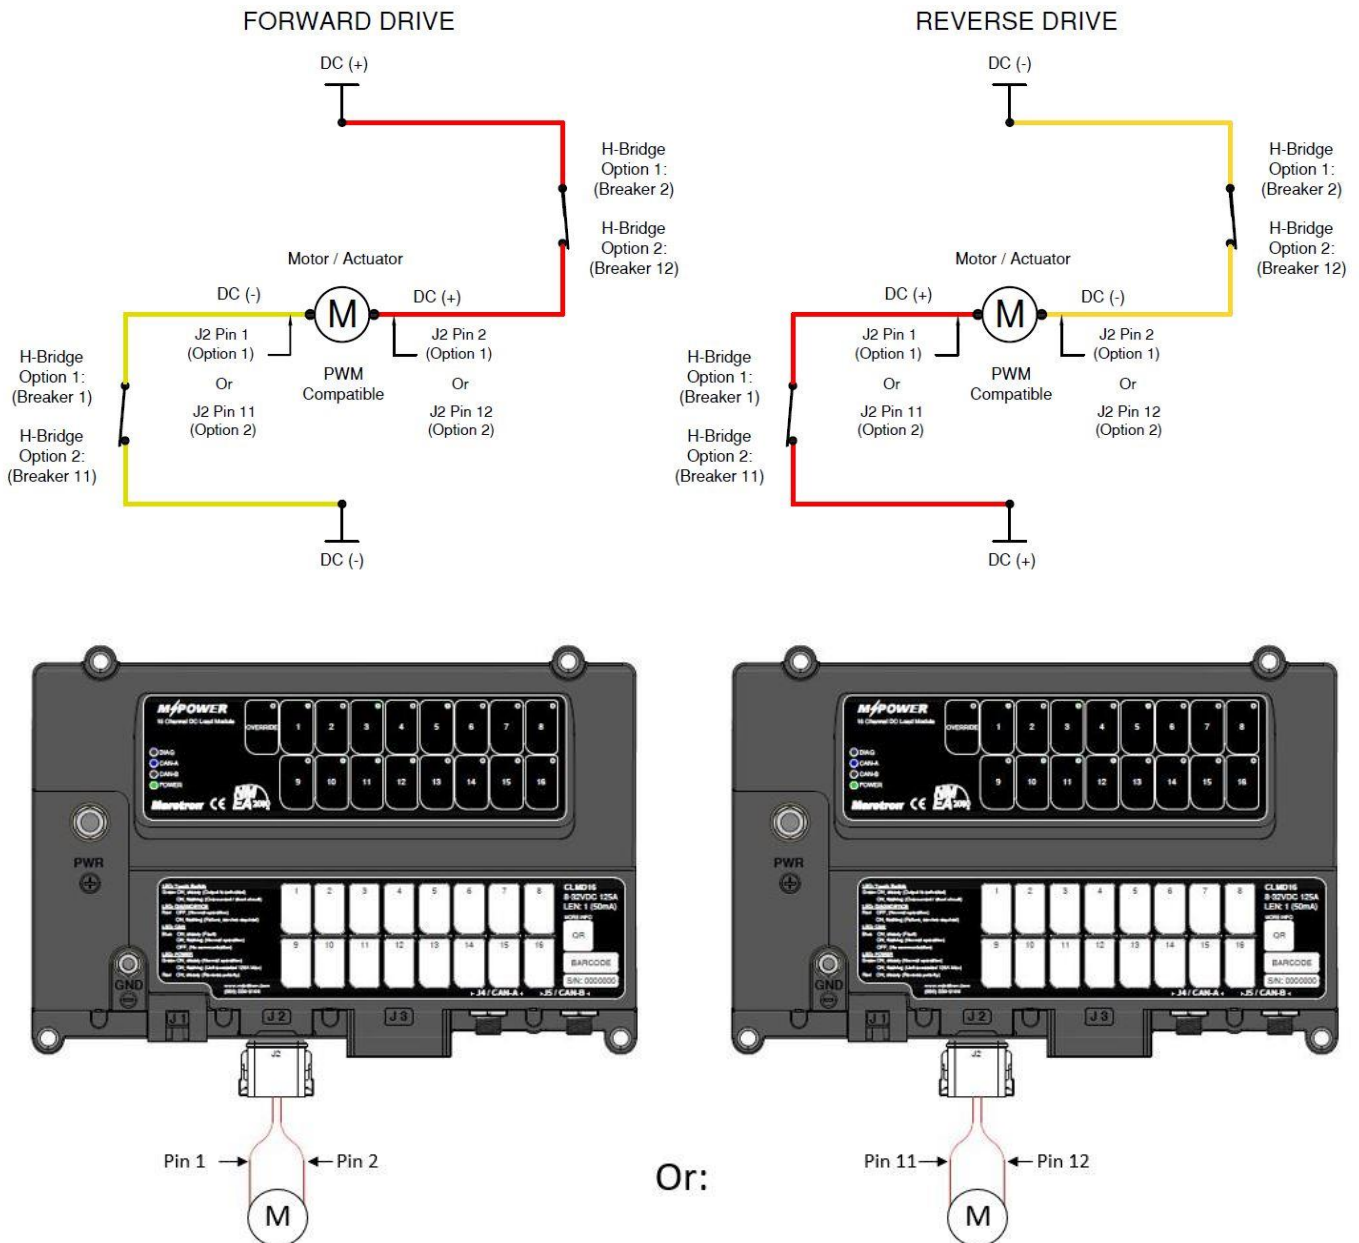


Figure 13 - Full Bridge Operation Concept

Load Shedding

Load shedding is a way to extend the time the system can keep working when the battery voltage is getting low. As the battery voltage drops, the CLMD16 will turn off low priority loads. This is based on 3 priority levels. These priority levels have configurable voltage thresholds. An example of this is depicted in the table below. As voltage rises, for instance, as batteries are recharged, loads will be reactivated in a reverse sequence of the order in which they were turned off. See Table 7 for an example of Load shedding Priority based on battery voltage.

Table 7 - Example of Load Shedding Priority Table

Battery Voltage	High Priority (always on)	Medium Priority	Low Priority
7	On	Off	Off
8	On	Off	Off
9	On	Off	Off
10	On	On	Off
11	On	On	Off
12	On	On	On
13	On	On	On

There are three load shedding levels:

- Low
- Medium
- High (default)

Each channel has a load shedding priority which is user configurable.

The Medium and Low load shedding priorities have a user-configurable deactivation threshold and an activation threshold voltage level.

The Load Shedding Medium Priority Deactivation-threshold voltages must always be lower than the Low Priority Deactivation-threshold.

Load shedding will never turn off (shed) channels assigned to the High Load Shedding Priority.

Input Monitor

High, Low and Float Thresholds

The CLMD16 can translate the voltages measured on the eight voltage-sensing hardwired inputs, the resistances monitored on the two resistive hardwired inputs, and the current monitored on the current loop hardwired input for use in controlling loads or for use as inputs to the various elements in the switching application (for example, counters, tank levels, timers, etc.).

This is done by using the input monitor. On the eight voltage sensing inputs, the input monitor will translate the input voltage signal from an input to one of three states:

- LOW (Typically describes a connection to DC -)
- FLOAT (Typically describes no connection)
- HIGH (Typically describes a connection to DC +)

The voltage levels at which these states are calculated are individually configurable for each of the input channels.

There are eleven input monitors in the CLMD16. Each of the eight hardwired voltage sensing inputs, the two hardwired resistive inputs, and the current loop input has an associated input monitor. The monitor operates the same way for the resistive hardwired inputs and the current loop input as the voltage sensing inputs only measuring resistance to DC (-) or Current in mA instead of measuring voltage.

There are two configurable voltage, resistive or current levels:

- Low Threshold
- High Threshold

Input Hysteresis

The input monitor also implements configurable hysteresis values. This is where the state of the input intentionally lags behind the actual input's value relative to the configured High or Low threshold value that may already be met. The purpose of hysteresis is to allow for a buffer to be applied onto either end of configured High or Low level thresholds. The benefit of applying a hysteresis value is that rather than having a single value threshold, this secondary hysteresis parameter must be met before the input's state will change. When applied, this causes the input monitor to behave where the input's state will not rapidly transition between On / Off states when the input's actual value is transitioning back and forth across the configured High or Low threshold. This is because when hysteresis is applied, the hysteresis value must be met as well as the threshold value before the CLMD16 will change the state of the input therefore applying a method to ensure affirmative input state when an input is noisy such as an input attached to a battery that is in use while charging. There are separate hysteresis value for each threshold:

- Low Hysteresis
- High Hysteresis

Figure 14 shows an example of how the hysteresis works on the voltage sensing inputs.

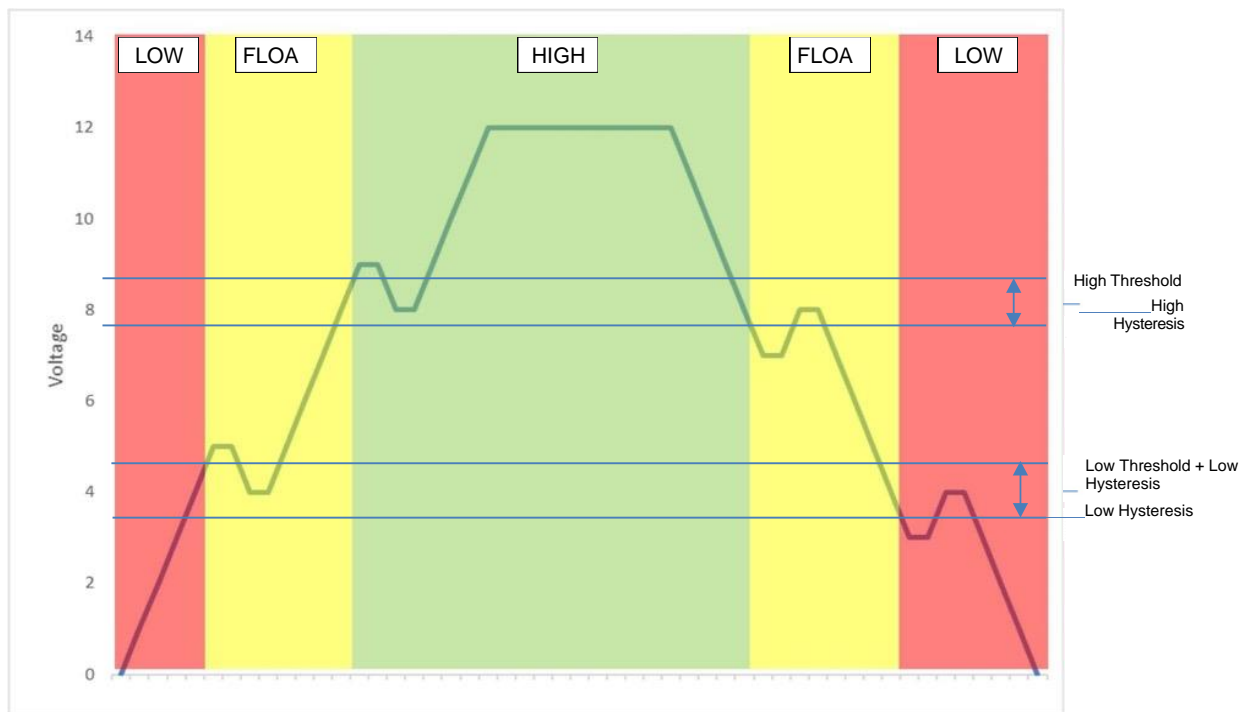


Figure 14 - Input Monitor Hysteresis

Each channel of the input monitor produces three signals that are available to the Switching Application:

Input (x) Low – the input monitor for the channel (x) is in the LOW state

Input (x) Float – the input monitor for the channel (x) is in the FLOAT state

Input (x) High – the input monitor for the channel (x) is in the HIGH state

Reference Ground

For maximum accuracy using voltage sensing or resistive inputs (Inputs 1-10), the CLMD16's reference ground (Pin 12 'J3' connector) must be used as the ground reference for the input where applicable. For example, if a resistance-to-ground tank sender is being applied to resistive inputs (input #9 or 10) the reference ground of the tank sender(s) shall be the supplied CLMD16 reference ground.

Input Voltage Broadcast

The CLMD16's voltage sensing inputs 1-8 data can be broadcast onto the NMEA 2000 network via PGN 127508. When enabled, the frequency of this broadcast is once every 1.5s. For further information on configuring this feature, see: 'Inputs Tab' section in this manual.

Switching Application

The CLMD16 contains a variety of combinatorial and sequential logic elements to allow the construction of control applications. These logic elements can be connected and configured in a wide variety of ways to create a wide variety of control applications.

Counters

The CLMD16 switching application contains sixteen instances of a counter function.

Each counter may be configured in one of the following modes:

- Active High – The counter increments or decrements as long as the increment or decrement input signal is in a high (active) state
- Active Low – The counter increments or decrements as long as the increment or decrement input signal is in a low (inactive) state
- Rising Edge – The counter increments or decrements once for every rising edge detected (detection of the input signal activating) on the increment or decrement input signal
- Falling Edge – The counter increments or decrements once for every falling edge detected (detection of the input signal deactivating) on the increment or decrement input signal
- Change Detected – The counter increments or decrements once for every rising or falling edge detected on the increment or decrement input signal
- One Button Smooth Scroll – This mode is designed to allow one button power and dimming control for lighting circuit. The counter operates differently in this mode. First, the Decrement input is ignored. Second, the Counter Active output becomes a power output for the lighting circuit. Here is how to use this mode: Apply the input signal you want to control the light to the Increment input. For the breaker controlling the lighting, connect the Counter Active output as the Input Signal of the breaker, set the breaker mode to "PWM", and select the counter you are configuring as the "PWM Counter". In this mode, a quick press

of the button (less than Hold Period) will cause Counter Active (and thus the breaker power) to toggle state. Holding the button longer than this will cause the dimming level to cycle from the configured min set point to the configured max set point and then back from the max set point to the min set point and repeat this loop behavior until you release the button. The dimming level value is remembered when you turn the circuit ON and OFF.

Each counter has the following input signals:

- Increment – causes the counter to increase in value
- Decrement – causes the counter to decrease in value
- Reset – causes the counter to be set to the Min Set Point value

Each counter has the following output signal:

- Counter Active – this is asserted high (Active) when the counter value is equal to or greater than the value of the Active Threshold parameter

Each counter has the following programmable parameters:

- Press Step Size – step size by which to increment or decrement the counter when the increment or decrement input is pressed
- Min Set Point – the value to which the counter is set when the Reset input is asserted high
- Max Set Point – the maximum value that the counter can reach
- Active Threshold – if the counter value is above the value of this parameter, the Counter Active output of the counter will be asserted high*
- Held Step Time – (Active High or Active Low mode) once the increment or decrement counter has been asserted high for Hold Period time, the counter is incremented or decremented. If the increment or decrement input signal remains asserted high for this amount of time afterwards, the counter will be incremented or decremented again.
- Hold Period – (Active High or Active Low mode) time after which the input signal is considered “held” if it remains active
- Hold Step Size – in Active High or Active Low mode, this is the value by which to increment or decrement the counter after the increment or decrement input signal has been asserted high for Hold Period time, and every Held Step Time thereafter. If the Rising Edge, Falling Edge, or Change mode, this is the value by which to increment or decrement the counter on each detected edge of the increment or decrement input signal.

* Please refer to the description of One Button Smooth Scroll mode to see how these items are treated differently when that mode is selected.

In Active High or Active Low mode, the increment input signal being in its active state is ignored if the decrement signal was already in its active state, and vice versa.

Input count detection can be achieved using a counter by configuring an active threshold value.

The output signals from the counter elements are numbered 1 through 16

Timer

The CLMD16 provides sixteen instances of a timer function.

The Timer function provides the Switching Application the ability to postpone the activation of load output channels upon receiving channel activation commands up to 65,535 seconds for each. This is not to be confused with the Soft Start function as the Timer function does not contribute to the load PWM output.

Each timer can be configured to one of the following modes:

- ON Delay – When the input signal is applied, the output is delayed by the delay period
- OFF Delay – When the input signal is removed, the output is delayed by the delay period
- No Delay – the output signal is a replica of the input signal

Each timer has the following input signals:

- Input – the signal whose delayed version will be produced on the output

Each timer has the following output signals:

- Timer Output – the delayed version of the Input signal

Each timer has the following programmable parameters:

- DelayPeriod – the amount of time by which to delay the appropriate edges of the input signal to produce the output signal.

If the timer is configured in ON Delay mode and the input signal is asserted high for less than the DelayPeriod time before being asserted low again, the output signal will remain asserted low. Conversely, if the timer is configured in OFF Delay mode and the input signal is asserted low for less than the DelayPeriod time before being asserted high again, the output signal will remain asserted high.

The output signals from the timer delay elements are numbered 1 through 16

Flash

The CLMD16 provides sixteen instances of a flash function.

The Flash function provides the Switching Application the ability to turn an output on and off at set frequencies.

This function can be used to generate unique visual error codes using a load output channel connected to an LED such as Indication of a network or power supply low voltage state. Or to flash a mast clearance strobe, Pulse an intermittent bilge pump, or for use with intermittent ON ventilation systems.

The Flash function has the following input signals:

- Input – the flashing function is enabled as long as this signal is asserted (ON)

The Flash function has the following output signals:

- Flash Output – while the input signal is asserted this signal will be enabled allowing for the configurable parameters to take control of the Flash Output function.

The Flash function has the following configurable parameters:

- Flash Cycles – once the Input signal is detected, the Flash Output signal will cycle for this number of cycles, or until the Input signal is removed, whichever occurs first.
- Flash On Period – during each flash cycle, the Flash Output signal will be On for this amount of time
- Flash Off Period – during each flash cycle, the Flash Output signal will be Off for this amount of time

The output signals from the flash elements are numbered 1 through 16

Latch

The CLMD16 provides sixteen set/reset latches, which, as an example, may be used for loads which use a push on/push off function.

The Latch function has the following input signals:

- Set Input – This signal will cause the Latch Output signal to turn On
- Reset Input – This signal will cause the Latch Output signal to turn Off

The Latch function has the following output signals:

- Latch Output – On when Set Input is detected or On, and Off when the Reset Input is detected or On

The Latch function has no configurable parameters.

The output signals from the latch elements are numbered 1 through 16

Set/Reset Latch

The truth table of a Set/Reset Latch is as shown in Table 8.

Table 8 - Latch Function Truth Table

Set Input	Reset Input	Latch Output
0	0	Previous State
0	1	0
1	0	1
1	1	Undefined

Toggle

The switching application provides sixteen instances of a toggle.

Each toggle maintains its logic state until the single input signal to the toggle transitions from a On to Off.

The Toggle function has the following input signals:

- Toggle Input – when this signal is changed from On to Off (Usually a momentary event), it will cause the Toggle Output signal to change to the opposite of its current state; for example, if the Toggle Output signal is On, then will change to Off, and if the Toggle Output signal is Off, it will change to On

The Toggle function has no configurable parameters.

The output signals from the toggle elements are numbered 1 through 16.

Where “1” is On and “0” is Off, each state change of the Toggle Input from *Off* to *On* changes the state of the Toggle Output. (see: Table 9)

Table 9 - Toggle Function Truth Table

Toggle Input	Previous Toggle Output	Toggle Output
0	0	0
0	1	1
1	0	0
1	1	1
1→0	0	0
1→0	1	1
0→1	0	1
0→1	1	0

Logic

The switching application provides forty-eight instances of three-input logic operations.

The Logic (Combinatorial Logic) function provides the Switching Application the ability to take up to three signals and logically combine them using Boolean logic to create a logical signal. The three-input lookup table allows any binary function of three variables to be realized. The outputs of the logic functions may be used as inputs to other logic functions (allowing logic functions of more than three inputs to be realized) or as inputs to other types of functions.

Each Logic Function has the following input signals:

- Input A – first input to the logic function
- Input B – second input to the logic function
- Input C – third input to the logic function

Each Logic function has the following output signals:

- Logic Output – the logical output of the of Input A, Input B, and Input C as defined by the lookup table

Each Logic function consists of a three-input lookup table. There are eight rows in the table, one row for each possible combination of values of the three inputs. For each of the eight rows, you specify an output value for the logic function, either 0 or 1. For an example, where “1” is On and “0” is off, consider the logic function ((A and B) or not C). This function outputs a 1 value when A=1 and B=1, or when C=0. The lookup table defining this function appears in Table 10.

Table 10 - Logic Function Truth Table Example

Input A	Input B	Input C	Output
0	0	0	1
0	0	1	0
0	1	0	1
0	1	1	0
1	0	0	1
1	0	1	0
1	1	0	1
1	1	1	1

Functions of more than three variables may be constructed by using the output of one logic element as the input to a second logic element, and so on.

The Logic Output signals are numbered 1 through 48.

Alarm Output

The CLMD16 provides a single alarm output circuit to drive an alarm or relay. There are two terminals: Alarm Power (pin J3-16), and Alarm Ground (pin J3-22). Both of these pins are switched. They are connected to power and ground, when an Alarm Input signal is detected, and both become high impedance when the Alarm Input signal is Off or not detected. The max capacity of this output is 300mA.

The Alarm function has the following input signals:

Alarm Enable – when the *Input Signal* is detected, this signal will cause the alarm output circuit to be connected.

Group Switching

The CLMD16 provides a Group Switching feature. When configured, this feature allows for the CLMD16 to become a network-wide digital switching commander. Inputs to the Group Switching application can be any instance / channel indicator of NMEA 2000 PGN 127501 Binary Status Report. Based on the configured channel input becoming active, the CLMD16 can command any digital switching breaker the NMEA 2000 network contains On or Off as well as set the PWM value of the breaker via NMEA 2000 PGN 127500. This feature can be used as a way to command a desired 'mode' or used for mood lighting. The Group Switching feature can detect and act upon the number of times an instance / channel indicator of the NMEA 2000 Binary Status Report becomes active. This counting feature allows for the CLMD16 to command different digital switching breaker actions for each '*Sequence Count*' of the channel input becoming active. There are up to 4 *Sequence Counts* allowable to configure for each instance / channel indicator of NMEA 2000 PGN 127501 Binary Status Report. The CLMD16 will determine the first count of a *Sequence Count* when it first detects the input channel becoming active after the unit is initialized. The CLMD16 will loop the configured *Output Commands* and *Sequence Count* from the configured number of sequences back to the first sequence in a continuous loop. The Group Switching application can handle up to 256 *Input Events* and *Output Commands* summed.

Available Signals

There are many signals that are available to connect as inputs for the various logic elements in the switching application. The Table 11 is a complete list of the available signals.

Table 11 - Available Signal Table

Signal Name	Description
None Selected	This connects the specified input to a constant Logic '0','Off','None' value
Input (1-12) Low	The input signal (1-12) configured 'Low' voltage range
Input (1-12) Float	The input signal (1-12) configured 'Float' voltage range
Input (1-12) High	The input signal (1-12) configured 'High' voltage range
Network Input (1-16)	The state of the NMEA 2000 Network Input signal (127500 or 127501 command) respective to the breaker number (1-16)
Logic Output (1- 48)	The state of the output of Logic Element (1-48)
Latch Output (1-16)	The state of the output of Latch Element (1-16)
Toggle Output (1-16)	The state of the output of Toggle Element (1-16)
Timer Output (1-16)	The state of the output of Delay Timer Element (1-16)
Flash Output (1-16)	The state of the output of Flash Element (1-16)
Counter Active (1-16)	The state of the output of Counter Element (1-16)
Over Current Fault (1-16)	An Over Current Fault has been detected on the ECB (1-16)
Ch (1-16) Tripped	The ECB is tripped (1-16)
Ch (1-16) Thermal Limit Hit	The ECB channel has reached its thermal limit (1-16)
Discrete I/O (1-32)	The state of the Discrete I/O channel (1-32)
Breaker On (1-16)	The On state of an ECB (1-16)

Configuring the CLMD16

The CLMD16 will transmit data over the NMEA 2000 network as it is shipped from the factory however it may require configuration depending on the application. There are several configurable items within the CLMD16, which are detailed in the remainder of this section.

The CLMD16 is configured using Maretron N2KAnalyzer V3 software. The following subsections describe the configurable parameters in the CLMD16.

Detailed descriptions of NMEA 2000 PGN messages (127500, 127501, 127505, 127508, etc.) may be found in Appendix A of this manual.

General Tab

The General Tab contains commonly used configuration items. See Figure 15 for General Tab detail.

CLMD16 (0x00) 1540225 - Configuration Dialog - CLMD16_Blank_

General | Control | Alarm | Advanced | Counter | Flash | Grouping | Inputs | Tanks | Latch | LoadShedding | Logic | Timer | Toggle

CLMD16 #32 Instance: 32

Breaker #1 (12A)

Label: Cabin Lights Manual Mode: ON Type: PWM

State: OFF Long Time Delay: FAST Input Signal: Logic Output 1

PWM Default: 100 % Instantaneous Pickup: 6 Toggle Mode: OFF

Current Rating: 3.5 A Short Time Pickup: 2.0 PWM Counter: None

☒ Soft Turn On/Off Default State: OFF

Status

☐ Tripped ☐ Thermal Protection ☐ Short To Battery

☐ Instant Trip ☐ Load Shed ☒ Open Load

☐ Short Time Trip ☐ Hardware Fault ☐ Over Current

☐ Long Time Trip ☐ Short To Ground

Def. Lock State: Unlocked

Current: 0.700 A

Voltage: 0.700 V

Breaker #2 (12A)

Label: Livewell Light Manual Mode: OFF Type: DC

State: OFF Long Time Delay: FAST Input Signal: None Selected

Instantaneous Pickup: 6 Toggle Mode: OFF

Current Rating: 2 A Short Time Pickup: 2.0

Load Config From File... Save Config To File... Restore Factory Defaults

Get Config From Device Put Config To Device Close

RED text indicates a changed parameter that has not yet been put to the device

Figure 15 - General Configuration Tab Dialog Box

Label

This text box allows you to assign a text label to the device. This label is visible in Maretron analysis and supported display products and allows you to easily identify the particular device.

Instance

NMEA 2000 requires a unique instance number for each breaker box on a vessel. This read-only field shows the instance number assigned to this device. This instance number value is reflected in the 127501 Binary Status Report message. The instance number can be configured by changing the 'Device Instance' field on the 'Advanced' configuration tab.

Breaker #(n)

The *General Tab* section contains settings for the specified electronic circuit breaker. One of these

sections is present for each of the breakers in the unit.

Label

This text box allows you to configure a text label for the breaker to identify it (for example, “RUNNING LIGHTS” or “HATCH”). For each breaker, set this to a value which describes the breaker so that you can easily identify it in display devices.

Manual Mode

This drop-down selection allows you to enable or disable *Manual Mode*. By default, devices such as an MFD or N2KView will have direct access to control all CLMD16 breakers. These devices communicate to the breakers by NMEA 2000 PGN 127500 via 126208 Command Group Function. When *Manual Mode* is enabled, commands from devices using this PGN are ignored; however the CLMD16's '*Network Inputs*' 1-16 from the *Available Signals List* can still be used as inputs within the switching application. Please refer to section 5.7 '*Available Input Signals*' for more information on '*Network Inputs* 1-16'. The *Manual Mode* feature can be used so that commands from any device using 127500 via 126208 PGN will no longer directly command the breakers directly, then those commands can be funneled into the CLMD16 *Switching Application* logic. For example, with *Manual Mode* On, a breaker's *Network Input* signal received from an MFD may be directed into any CLMD16 *Switching Element(s)* such as *Timer*, *Flash*, *Logic*, etc., then the output of the *Switching Element(s)* can be inputted into a breaker control, allowing for ultimate configurability of what the *Network Input* functionality is when using an MFD, whereas this function would not be possible using direct breaker control (*Manual Mode* Off). *Manual Mode* can also be used to simply ignore direct breaker commands for breakers that are designated for load sequencing or sub-routines controlled elsewhere, or for breakers needing to be controlled by single designated points rather than allowing network-wide access to command the breaker.

State

This read-only field indicates the current state of the breaker. It will contain one of the following values:

- OFF – the breaker is currently off (not supplying power)
- ON – the breaker is currently on (supplying power)
- TRIP/ ERROR – the breaker is currently off (not supplying power) due to an overcurrent or error condition

PWM Default

This value will be the value that the PWM% will be when the breaker is turned On for the first time after the CLMD16 is initialized. If the PWM value is changed after the CLMD16 is first powered On / initialized, the value of PWM the next time the channel is turned On will be the last state of PWM and the *PWM Default* will not be applicable until the next power cycle.

Default State

This allows you to configure the state of the breaker when the CLMD16 is powered on. You can set this to one of the following values:

- OFF – the breaker will be OFF after the CLMD16 is powered on
- ON – the breaker will be ON after the CLMD16 is powered on
- LAST STATE – after the CLMD16 is powered on, the breaker will be set to the state it was in when power was last removed

Default Lock State

This parameter allows you to configure whether the breaker is locked when the CLMD16 is powered on. You can set this to one of the following values:

- LOCKED – the breaker is locked, i.e., its state will not change due to network inputs
- UNLOCKED – the breaker is unlocked, and its state will respond normally to network inputs

Type

This parameter allows you to configure the desired operating mode for this breaker. You can choose one of the following:

- DC – the breaker may be controlled OFF and ON.
- PWM – this breaker may be controlled OFF and ON and may be dimmed by altering the changing duty cycle of the PWM counter assigned to the breaker.
- Soft Start DC – the breaker may be controlled OFF and ON. When the breaker is turned ON, the power starts in PWM mode with the duty cycle set by “Soft Start %” parameter, and then ramps to fully ON over the next one second time interval.
- Full-Bridge – if both breakers in a full-bridge pair (i.e., 1 and 2, or 11 and 12) are configured to Full-bridge, then the two breakers will work together as a full bridge (H- bridge). The full bridge may be controlled OFF and ON, and its direction may be controlled.
- Soft Start Full-Bridge – if both breakers in a full-bridge pair (i.e., 1 and 2, or 11 and 12) are configured to Soft Start Full-bridge, then the two breakers will work together as a full-bridge (H-bridge) with the soft start feature enabled. The full bridge may be controlled OFF and ON, and its direction may be controlled. When the breaker is turned ON, the power starts in PWM mode with the duty cycle set by Soft State % parameter, and then ramps to full ON over the next one second time interval.

Current Rating

This parameter allows you to configure the desired trip level for this breaker. Exceeding this current for a time period set by the value of the Long Time Delay parameter will initiate a trip.

Instantaneous Pickup

This parameter allows you to configure the Instantaneous Pickup for the breaker. This can be set in the range of 5 to 20 with a resolution of 1. This parameter is a multiplier of the current rating. For example, if the current rating for the breaker is set to 6 A and the Instantaneous Pickup parameter is set to a value of 10, then the Instantaneous Pickup current will be 60 A (6 A * 10).

Short Time Pickup

This parameter allows you to configure the Short Time Pickup for the breaker. This can be set in the range of 1.5 to 6.0 with a resolution of 0.1. This parameter is a multiplier of the current rating. For example, if the current rating for the breaker is set to 6 A and the Short Time Pickup parameter is set to a value of 4, then the short time pickup current will be 24 A ($6A * 4$).

Input Signal

This parameter allows you to select the internal signal that determines the state of this breaker. You may choose a signal from the list in Table 11 - Available Signal Table

Toggle Mode

This parameter allows you to select Toggle Mode On or Off. When this mode is enabled, the state of the ECB will change to the opposite state, whether On or Off, with every Rising Edge of an ECB Input Signal.

PWM Counter

This parameter allows you to select which PWM Counter controls the dimming level for this breaker. You may choose any of the sixteen Counter elements. You may also choose No Counter, which allows you to directly control the dimming level for this breaker from the network.

Soft Turn On / Off

Soft Turn On/Off applies a 1s ramp for the breaker to 'ramp' from 0% PWM to 100% PWM when turning On or 100% PWM to 0% PWM when turning Off. This feature is meant for purposes of a lighting effect to add an automatic dimming effect when lights are turned On and Off.

Long Time Delay

This parameter allows you to configure the long-time delay for the breaker. This can be set to one of the following values:

- FAST (5 seconds)
- MEDIUM (10 seconds)
- SLOW (20 seconds)

Voltage

This read-only field shows the real-time voltage at the load terminal of the breaker.

Current

This read-only field shows the real-time current passing through the breaker.

Status

This group of indicators show real-time status of the breaker.

Tripped

When lit, this read-only field shows that the breaker is in the TRIP state.

Instant Trip

When lit, this read-only field indicates that the breaker has tripped due to the instant trip feature.

Short Time Trip

When lit, this read-only field indicates that the breaker has tripped due to the short time trip feature.

Long Time Trip

When lit, this read-only field indicates that the breaker has tripped due to the long time trip feature.

Thermal Protection

When lit, this read-only field indicates that the breaker has been turned off due to the thermal protection feature.

Load Shed

When lit, this read-only field indicates that the breaker has been turned off due to the load shedding feature.

Hardware Fault

When lit, this read-only field indicates that the breaker has been turned off due to a hardware fault being detected.

Short To Ground

When lit, this read-only field indicates that the breaker has been turned off due to it being detected shorted to ground.

Short To Battery

When lit, this read-only field indicates that the breaker has been turned off due to it being detected shorted to the DC supply voltage.

Over Current

When lit, this read-only field indicates that the breaker has tripped due to an overload being detected.

Open Circuit

When lit, this read-only field indicates an Open Circuit (no load) condition. The breaker is turned ON but there is little, or no current being drawn. There are several possible reasons:

- External switch controlling load is in the OFF position
- If the connected load is a light, the bulb could be defective
- The load is incorrectly wired
- The load is very small (less than 1.0 Amps)

Breaker Locked

When lit, this read-only field indicates that the breaker has been locked and will not respond to switch commands on the network. The purpose of the lock feature is to avoid inadvertent or accidental breaker state changes. The breaker must be unlocked before the breaker state can be remotely changed again.

Control Tab

The Control tab allows you to toggle the configured Network Input channels of the CLMD16. Each On / Off control number corresponds with Network Input numbers 1-16. When a Network Input is turned on in this dialog, the associated circuit that the Network Input is configured to control will be controlled. See Figure 16 for Control Tab detail.

General | **Control** | Alarm | Advanced | Counter | Flash | Grouping | Inputs | Tanks | Latch | LoadShedding | Logic

1	2	3	4	5	6	7	8
<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
ON	ON	ON	ON	ON	ON	ON	ON
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

9	10	11	12	13	14	15	16
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
ON	ON	ON	ON	ON	ON	ON	ON
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

Load Config From File... | Save Config To File... | Restore Factory Defaults

Get Config From Device | Put Config To Device | Close

RED text indicates a changed parameter that has not yet been put to the device

Figure 16 - Control Tab Dialog Box

Alarm Tab

The Alarm tab allows you to select an internal signal to be used to control the alarm outputs of the CLMD16. You may select from the list of signals in Table 11 - Available Signal Table. See Figure 17 for Alarm Tab detail.

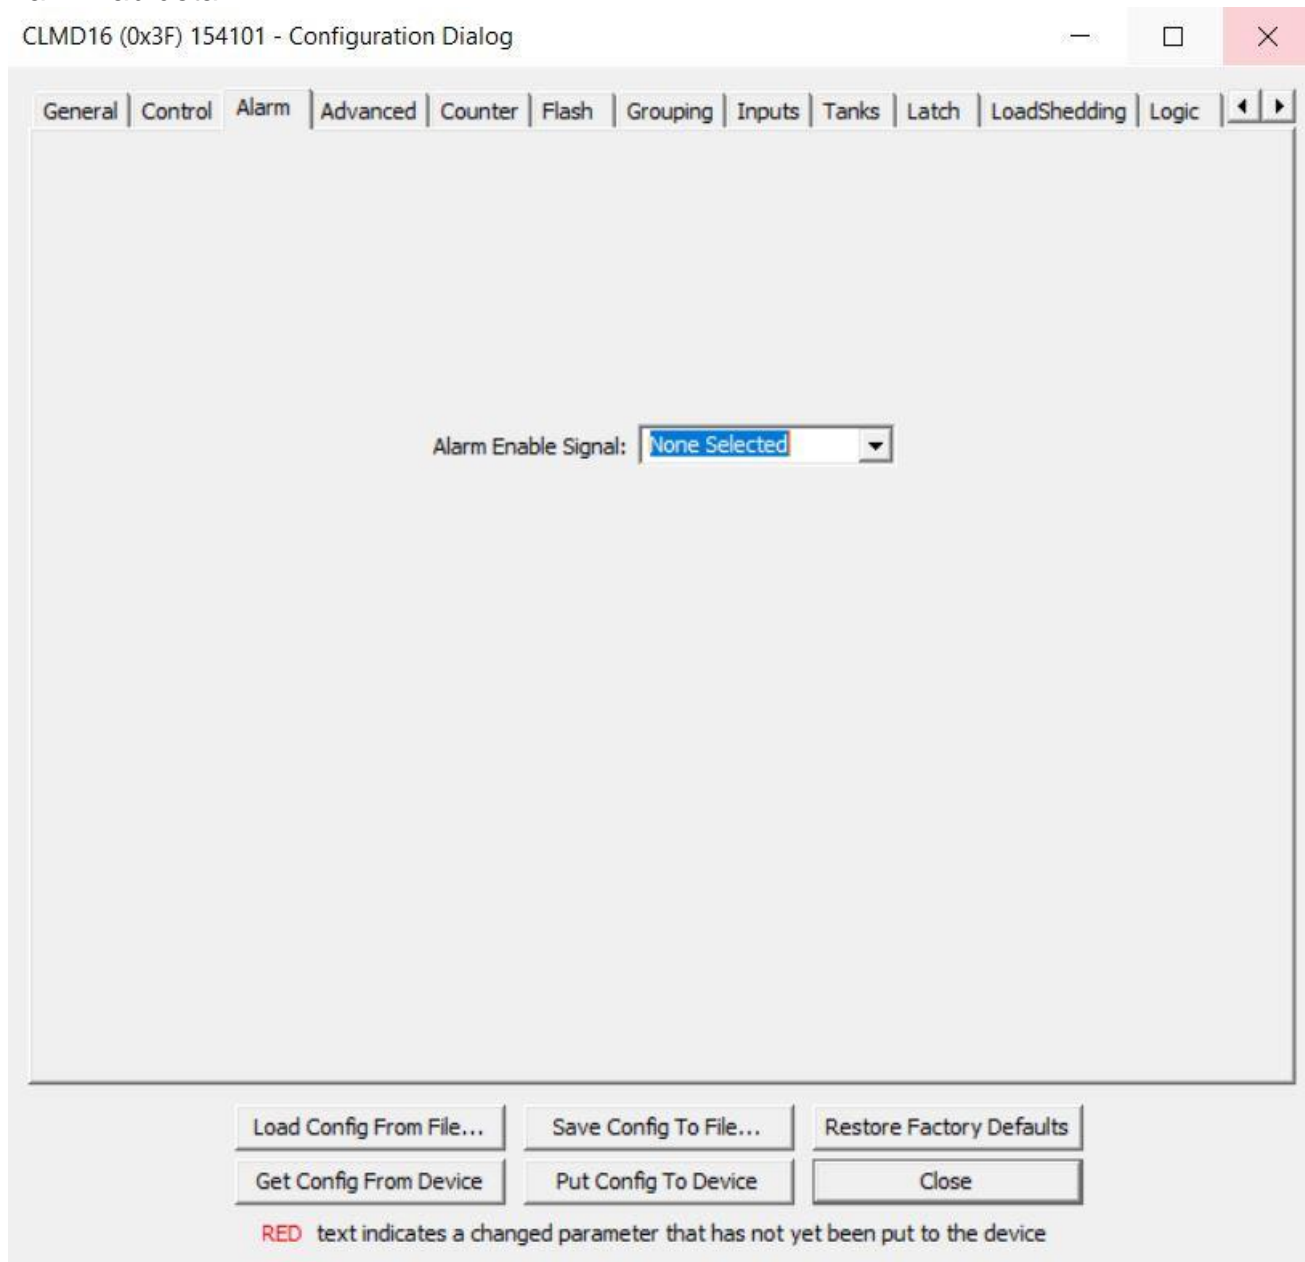


Figure 17 - Alarm Configuration Tab Dialog Box

Alarm Enable Signal

This parameter allows you to select an internal signal to control the alarm outputs. The alarm outputs are connected whenever this signal is activated. You may select from the list of signals in Table 11 - Available Signal Table.

Advanced Tab

The Advanced tab is used to configure and observe parameters that do not normally require changing. See figures Figure 18 & Figure 19 for Advanced Tab detail.

CLMD16 (0x01) 1540225 - Configuration Dialog

General | Control | Alarm | **Advanced** | Counter | Flash | Grouping | Inputs | Tanks | Latch | LoadShedding | Logic | Timer | Toggle

Temperatures

Temp 12A Group 1 - a:	34.850 °C	b:	34.850 °C
Temp 12A Group 2 - a:	34.850 °C	b:	34.850 °C
Temp 12A Group 3 - a:	34.850 °C	b:	34.850 °C
Temp 25A Group - a:	34.850 °C	b:	34.850 °C
c:	34.850 °C	d:	34.850 °C
Temp MCU - a:	35.850 °C	b:	35.850 °C

Supply Voltage

Input Supply: 13.944 V

Battery Voltage Instance (255 to disable):

☐ Over Voltage Fault

☐ Under Voltage Fault

Runtime Metrics

Max Time: 11.6 ms

Min Time: 5.1 ms

Difference Time: 8.2 ms

Runtime Metrics

Run Time: 359 s

Load Config From File... Save Config To File... Restore Factory Defaults

Get Config From Device Put Config To Device Close

Figure 18 - Advanced Configuration Tab (Upper Portion) Dialog Box

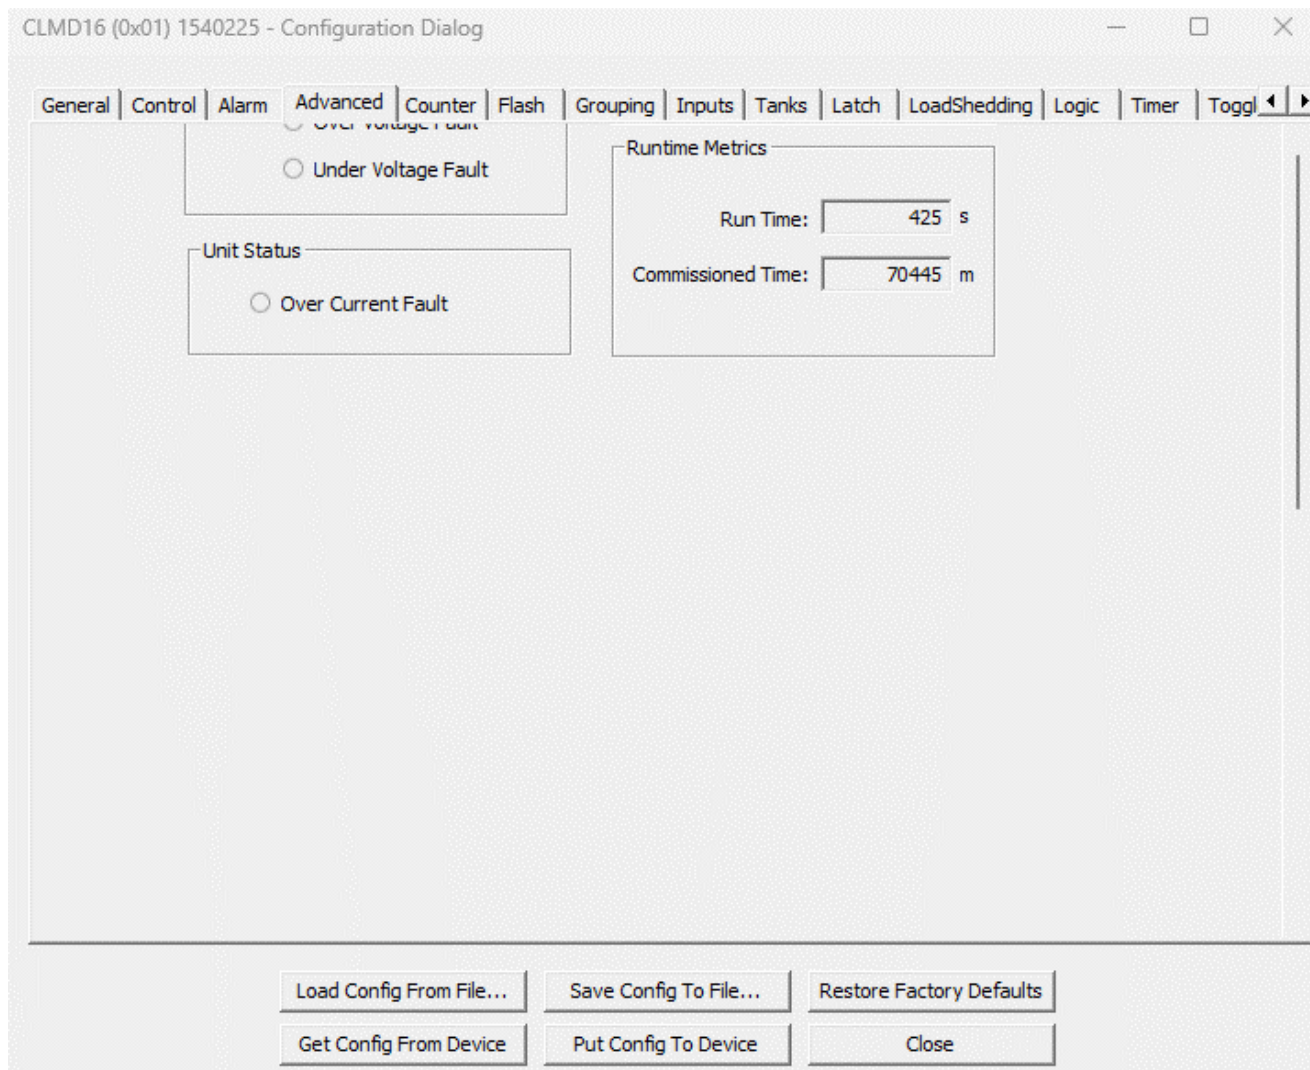


Figure 19 - Advanced Configuration Tab (Lower Portion) Dialog Box

Device Instance

This parameter allows you to configure the NMEA 2000 device instance used by the device. This value is also used as the data instance in the 127501 Binary Status Report messages transmitted by the device and can be seen on the General Tab as well as the Inputs Tab labeled as "Instance".

Location Address

This read-only field displays the value of the four active-low Address #1 through Address #4 inputs. Address #4 is the most significant bit, and Address #1 is the least significant bit.

Model Version

This read-only field shows the internal version number of the CLMD16 application software.

Temperatures

Temp 12A Groups 1 to 3

These read-only fields (a and b) display the temperature measured by the two temperature sensors

in the CLMD16 located near the 12 Amp channels 1,2, and 3.

Temp 25A Group

These four read-only fields (a, b, c, and d) display the temperature measured by the four temperature sensors in the CLMD16 located near the 25 Amp Group channels.

Temp MCU

These two read-only fields (a and b) display the temperature measured by the two temperature sensors in the CLMD16 located near the system microcontroller.

Supply Voltage

Input Supply

This read-only field displays the voltage that is present on the DC Power Connection Stud with respect to the DC Ground Connection Stud.

Battery Voltage Instance

This field allows you to enable an instance of NMEA 2000 PGN 127508 for purposes of broadcasting battery voltage data onto the NMEA 2000 network. By placing an instance number in this field, the PGN broadcast will be enabled and broadcast the voltage sensed by the CLMD16 main power input onto the NMEA 2000 network with the data instance that was placed into the field. Place '255' in the field to disable the broadcast.

Over Voltage Fault

This read-only indicator is lit red if the voltage between the DC Power Connection Stud and the DC Power Ground Stud is higher than the recommended operating range.

Under Voltage Fault

This read-only indicator is lit red if the voltage between the DC Power Connection Stud and the DC Power Ground Stud is lower than the recommended operating range.

Execution Time Metrics

Max Time

This read-only field displays the longest loop time used by internal calculations.

Min Time

This read-only field displays the shortest loop time used by internal calculations.

Difference Time

This read-only field displays the average loop time used by internal calculations.

Unit Status

Over Current Fault

This read-only indicator shows steady red if the CLMD16 has been shut down because the total

current through the CLMD16 is more than the 125 Amp specification.

Runtime Metrics

Run Time

This read-only field displays the total amount of time the CLMD16 has been operational since it was last powered on.

Commissioned Time

This read-only field displays the total amount of the time the CLMD16 has been operational since it was built

Counter Tab

The CLMD16 has sixteen counter elements. See: Figure 20 for Counter Tab detail. Please refer to “Counters” on page 27 for details on the implementation of this function.

The screenshot shows the 'Counter' tab in a configuration window. It contains three sections for Counter #1, Counter #2, and Counter #3. Each section has a set of controls for increment/decrement signals, step sizes, reset signals, counter types, and set points. Counter #1 has 'Increment Signal' set to 'Input 1 Low' (in red), 'Press Step Size' at 0, 'Decrement Signal' empty, 'Hold Step Size' at 1, 'Reset Signal' set to 'None Selected', 'Hold Step Time' at 0.02 s, 'Counter Type' set to 'One Button Smooth !' (in red), 'Hold Period' at 0.50 s, 'Min Set Point' at 5, and 'Max Set Point' at 100. Counter #2 has 'Increment Signal' set to 'None Selected', 'Press Step Size' at 0, 'Decrement Signal' set to 'None Selected', 'Hold Step Size' at 0, 'Reset Signal' set to 'None Selected', 'Hold Step Time' at 0.00 s, 'Counter Type' set to 'Active High', 'Hold Period' at 0.00 s, 'Min Set Point' at 0, 'Active Threshold' at 0, and 'Max Set Point' at 0. Counter #3 has 'Increment Signal' set to 'None Selected', 'Press Step Size' at 0, 'Decrement Signal' set to 'None Selected', and 'Hold Step Size' at 0. At the bottom, there are buttons for 'Load Config From File...', 'Save Config To File...', 'Restore Factory Defaults', 'Get Config From Device', 'Put Config To Device', and 'Close'. A red text note at the bottom states: 'RED text indicates a changed parameter that has not yet been put to the device'.

Figure 20 - Counter Configuration Tab Dialog Box

Increment Signal

This parameter allows you to select a signal to cause the counter to increment in value. You may select from the list of signals in Table 11 - Available Signal Table. When One Button Smooth Scroll Counter Type is selected the Increment Signal is used as the primary input signal for One Button Smooth Scroll operation.

Decrement Signal

This parameter allows you to select a signal to cause the counter to decrement in value. You may

select from the list of signals in Table 11 - Available Signal Table. When One Button Smooth Scroll Counter Type is selected the Decrement Signal is ignored as a control input.

Reset Signal

This parameter allows you to select a signal to cause the counter to reset to a chosen value as selected in the Min Set Point field. You may select from the list of signals in Table 11 - Available Signal Table.

Counter Type

This field allows you to configure the operating mode of the counter. Each counter may be configured in one of the following modes:

- Active High – The counter increments or decrements as long as the increment or decrement input signal is in a high (active) state
- Active Low – The counter increments or decrements as long as the increment or decrement input signal is in a low (inactive) state
- Rising Edge – The counter increments or decrements once for every rising edge detected (detection of the input signal activating) on the increment or decrement input signal
- Falling Edge – The counter increments or decrements once for every falling edge detected (detection of the input signal deactivating) on the increment or decrement input signal
- Change Detected – The counter increments or decrements once for every rising or falling edge detected on the increment or decrement input signal
- One Button Smooth Scroll – The Increment Signal input controls One Button Smooth Scroll, The Decrement Signal input is ignored in the One Button Smooth Scroll Counter Type selection.

Function:

An input signal shorter than Hold Period will turn the assigned breaker's load on to last PWM state, with the next input signal shorter than Hold Period the breaker's load will turn off.

An input signal longer than the Hold Period time will temporarily disable the decrement function and increment the counter and will continue to increment the counter on the next input signal detected longer than Hold Period time until Maximum Set Point is reached.

Once Maximum Set Point is reached, an input signal longer than the Hold Period time will temporarily disable the increment function and decrement the counter and will continue to decrement the counter on the next input signal detected longer than Hold Period time until Minimum Set Point is reached.

(Once Maximum or Minimum Set Point in the counter cycle is reached the system will toggle from ascending (increment) PWM to descending (decrement) PWM or vice versa. For definition of Hold Period see "Hold Period" on following page.

Min Set Point

This parameter allows you to configure the minimum value that the counter can reach. This is also

the value to which the counter is set when the Reset input is asserted high

Max Set Point

This parameter allows you to configure the maximum value that the counter can reach.

Press Step Size

This parameter allows you to configure the step size by which to increment or decrement the counter when the increment or decrement input is pressed.

Hold Step Size

This parameter allows you to configure in *Active High* or *Active Low* mode, the value by which to increment or decrement the counter after the increment or decrement input signal has been asserted high (On) for Hold Period time, and every Held Step Time thereafter. In the Rising Edge, Falling Edge, or Change mode, this is the value by which to increment or decrement the counter on each detected edge of the increment or decrement input signal.

Hold Step Time

This parameter allows you to configure, in Active High or Active Low mode, the time interval after which the action performed by a “held” input signal repeats while it remains active.

Hold Period


This parameter allows you to configure, in Active High or Active Low mode, the time after which the input signal is considered “held” if it remains active.

Active Threshold

This parameter allows you to configure the counter value above which the Counter Active output of the counter will be asserted high (On).

Flash Tab

The CLMD16 has sixteen flash elements. See: Figure 21 for Flash Tab detail. Please refer to “Flash” on page 29 for details on the implementation of this function.

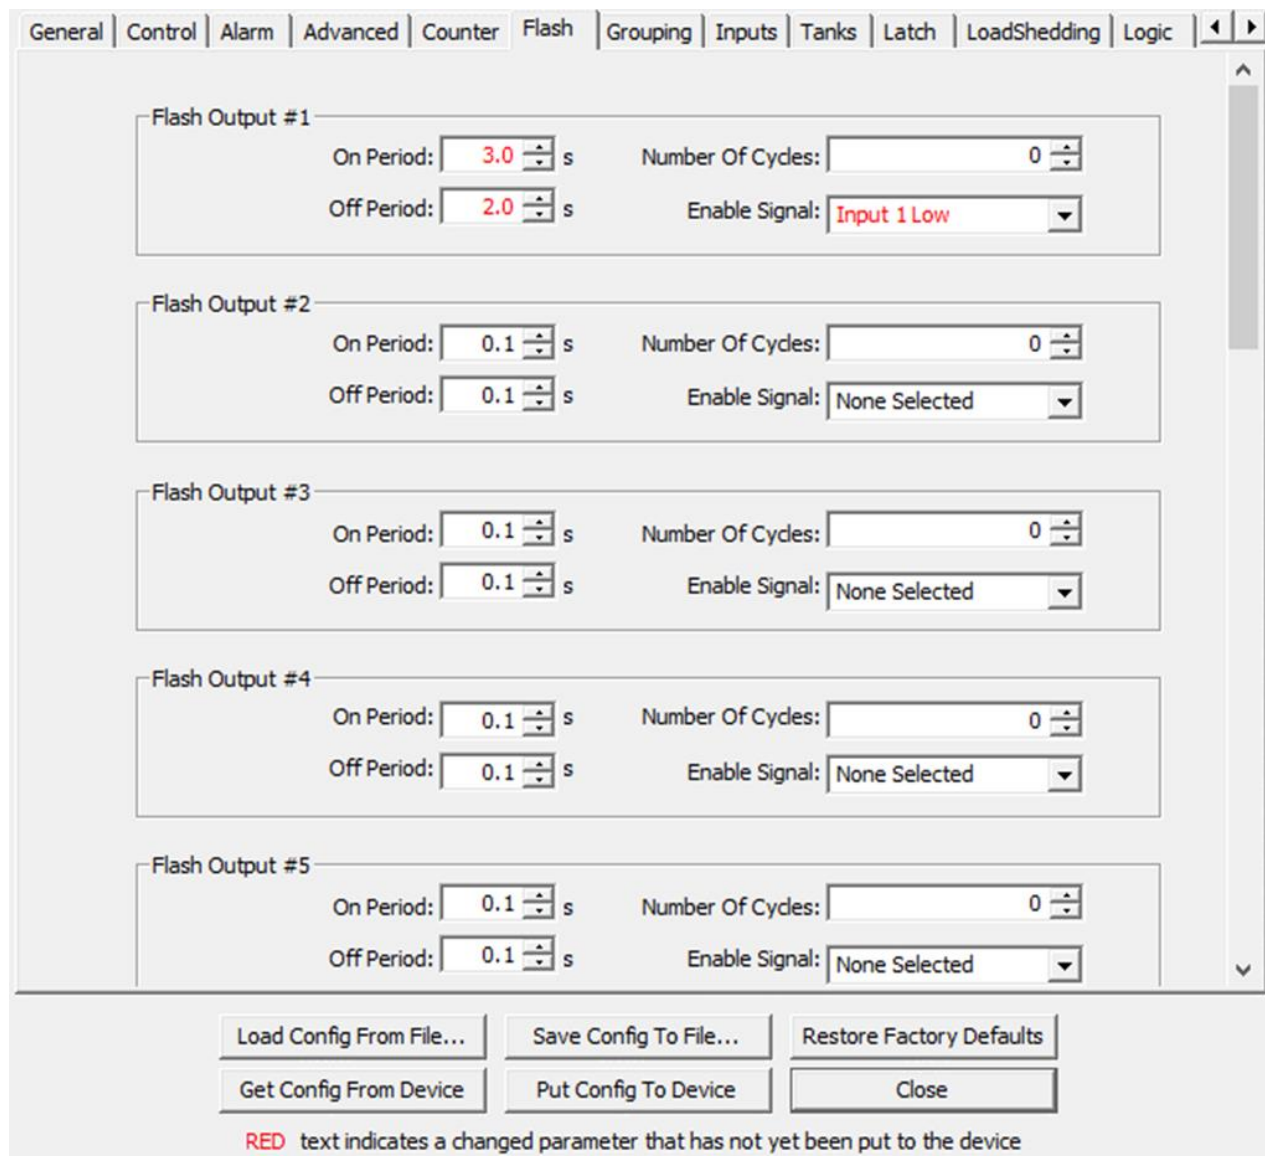

The image shows a software interface for configuring flash elements. At the top is a tabbed menu with options: General, Control, Alarm, Advanced, Counter, Flash (selected), Grouping, Inputs, Tanks, Latch, LoadShedding, and Logic. Below the tabs are five configuration sections for Flash Output #1 through #5. Each section contains three controls: 'On Period' (a numeric spinner with a unit 's'), 'Off Period' (a numeric spinner with a unit 's'), and 'Number Of Cycles' (a numeric spinner). For Flash Output #1, the 'On Period' is 3.0 s, 'Off Period' is 2.0 s, and 'Number Of Cycles' is 0. The 'Enable Signal' for each output is shown in a dropdown menu; for Output #1 it is 'Input 1 Low' (highlighted in red), and for Outputs #2 through #5 it is 'None Selected'. At the bottom of the dialog are six buttons: 'Load Config From File...', 'Save Config To File...', 'Restore Factory Defaults', 'Get Config From Device', 'Put Config To Device', and 'Close'. A red text note at the very bottom states: 'RED text indicates a changed parameter that has not yet been put to the device'.

Flash Output	On Period (s)	Off Period (s)	Number Of Cycles	Enable Signal
Flash Output #1	3.0	2.0	0	Input 1 Low
Flash Output #2	0.1	0.1	0	None Selected
Flash Output #3	0.1	0.1	0	None Selected
Flash Output #4	0.1	0.1	0	None Selected
Flash Output #5	0.1	0.1	0	None Selected

RED text indicates a changed parameter that has not yet been put to the device

Figure 21 - Flash Configuration Tab Dialog Box

On Period

This parameter allows you to configure the time period during which the Flash output signal will be asserted high (ON) for each flash cycle.

Off Period

This parameter allows you to configure the time period during which the Flash output signal will be asserted low (Off) for each flash cycle.

Number of Cycles

This parameter allows you to configure the number of cycles that the Flash element will run once the input signal is turned on. If the Flash input is turned off before this number of cycles has been run, then the Flash output signal will stop changing.

Enable Signal

This parameter allows you to configure which internal signal will enable the Flash function as long as this signal is turned on. You may select from the list of signals in Table 11 - Available Signal Table.

Grouping Tab

Various combinations of the breakers in the CLMD16 can be paralleled together to enable the paralleled breakers to handle higher currents than a single breaker can handle. See Figure 22 for channel grouping tab detail. See Paralleling Breakers on page 21 for additional details.

The screenshot shows the 'Grouping' tab in a configuration window. At the top, there is a horizontal menu with tabs: General, Control, Alarm, Advanced, Counter, Flash, Grouping (selected), Inputs, Tanks, Latch, LoadShedding, and Logic. Below the menu, the 'Channel Grouping' section contains four rows, each with a label and a dropdown menu:

- Group 1: 1 & 2
- Group 2: 3 & 4
- Group 3: 7 & 8
- Group 4: 13 & 14

At the bottom of the dialog box, there are five buttons: 'Load Config From File...', 'Save Config To File...', 'Restore Factory Defaults', 'Get Config From Device', and 'Put Config To Device'. A 'Close' button is also present. Below the buttons, a red text label states: 'RED text indicates a changed parameter that has not yet been put to the device'.

Figure 22 - Grouping Configuration Tab Dialog Box

Groups 1 through 4

This parameter allows to configure which breakers operate in parallel.

Group 1

You may choose from the following:

- No Parallel Outputs – All four breakers operate independently.
- 1 & 2 – Breakers 1 and 2 operate in parallel, while breakers 11 and 12 operate independently.

Group 2

You may choose from the following:

- No Parallel Outputs – All four breakers operate independently.
- 3 & 4 – Breakers 3 and 4 operate in parallel, while breakers 5 and 6 operate independently.

Group 3

You may choose from the following:

- No Parallel Outputs – All four breakers operate independently.
- 7 & 8 – Breakers 7 and 8 operate in parallel, while breakers 9 and 10 operate independently.

Group 4

You may choose from the following:

- No Parallel Outputs – All four breakers operate independently.
- 13 & 14 – Breakers 13 and 14 operate in parallel, while breakers 15 and 16 operate independently.

Inputs Tab

This tab allows you to configure the operation of the hardwired input signals.
See: Figure 23 & Figure 24 for Inputs Tab details.

CLMD16 (0x00) 1540225 - Configuration Dialog

General | Control | Alarm | Advanced | Counter | Flash | Grouping | **Inputs** | Tanks | Latch | LoadShedding | Logic | Timer | Toggle

Input 1 (Channel/Indicator 17)

Label: High Water Alarm OnLevel(s): High Analog Reference: Supply

Battery Voltage Instance (255 to disable): 255

State: FLOAT

Voltage: 4.256000 V

Input Thresholds Configuration

High Level

Threshold: 9.000 V

Hysteresis: 0.500 V

Low Level

Threshold: 2.000 V

Hysteresis: 0.500 V

Input 2 (Channel/Indicator 18)

Label: Engine Battery Voltage OnLevel(s): Low Analog Reference: Supply

Battery Voltage Instance (255 to disable): 0

State: FLOAT

Voltage: 4.221000 V

Input Thresholds Configuration

High Level

Threshold: 14.500 V

Hysteresis: 0.500 V

Low Level

Threshold: 2.000 V

Hysteresis: 0.500 V

Load Config From File... Save Config To File... Restore Factory Defaults

Get Config From Device Put Config To Device Close

RED text indicates a changed parameter that has not yet been put to the device

Figure 23 - Inputs Configuration Tab Dialog Box

General | Control | Alarm | Advanced | Counter | Flash | Grouping | Inputs | Tanks | Latch | LoadShedding | Logic

Input 10 (Channel/Indicator 26, 250 Ohm Resistive)

Label: OnLevel(s):

State:

Resistance: Ohms

Input Thresholds Configuration

High Level

Threshold: Ohms

Hysteresis: Ohms

Low Level

Threshold: Ohms

Hysteresis: Ohms

Input 11 (Channel/Indicator 27, 4-20mA Current Loop)

Label: OnLevel(s):

State:

Current: mA

Input Thresholds Configuration

High Level

Threshold: mA

Hysteresis: mA

Low Level

Threshold: mA

Load Config From File... Save Config To File... Restore Factory Defaults

Get Config From Device Put Config To Device Close

RED text indicates a changed parameter that has not yet been put to the device

Figure 24 - Inputs Configuration Tab (Resistive Input and Current Loop Channels Dialog Box)

Input # (n)

Label

This box allows you to configure a text label to identify the input signal, (for example, "HIGH WATER ALARM" or "BILGE BLOWERS"). It is suggested that a descriptive name is chosen so that you can easily identify it on display devices.

On Level(s)

This field allows you to select the input signal level that causes the corresponding field in the 127501 Binary Status Report message to be set to ON. You may select from one of the following values:

- LOW

When the input is set to Low, the corresponding field in the 127501 Binary Status Report message will be set to ON when the input signal level is less than the Low Threshold.

- HIGH

When the input is set to High the corresponding field in the 127501 Binary Status Report message will be set to On when the input signal level is greater than the High Threshold.

Analog Reference

This field allows you to select the reference voltage for the input. You may select from one of the following values:

- 5 VDC – select this option if the input signal will be limited to voltages between 0 – 5 VDC. This will allow higher resolution measurements over this limited voltage range.
- Supply – select this option if the input signal will have voltages ranging from 0 VDC to the supply voltage. This will allow the signal to be measured over the entire voltage range at the expense of lower resolution.

Battery Voltage Instance

This field allows you to enable an instance of NMEA 2000 PGN 127508 for purposes of broadcasting battery voltage data onto the NMEA 2000 network. By placing an instance number in this field, the PGN broadcast will be enabled and broadcast the voltage sensed by the input onto the NMEA 2000 network with the data instance that was placed into the field. Place '255' in the field to disable the broadcast.

State

This read-only field reflects the current state of the corresponding binary input signal. This field will take one of the following three values:

- LOW – the input signal voltage is between 0 V and the set Low Threshold
- FLOAT – the input signal voltage is between the set Low and the High Thresholds
- HIGH – the input signal voltage is between the High Threshold and the Supply Voltage

Voltage/Resistance/Current

This read-only field reflects the present measured voltage (for channels 1-8), resistance (for channels 9-10), or current (channel 11).

High Threshold

This numeric field allows you to program a voltage, resistance, or current value such that when the detected value on the input signal transitions from below this value to above this value, the state of the signal shall change from FLOAT to HIGH.

High Hysteresis

This numeric field allows you to program a hysteresis voltage, resistance, or current value such that when the detected value on the corresponding input signal transitions from above the High Threshold minus this value, the state of the output signal shall change from HIGH to FLOAT.

Low Threshold

This numeric field allows you to program a voltage, resistance, or current value such that when the detected value on the input signal transitions from below this value to above this value, the state of the signal shall change from LOW to FLOAT.

Low Hysteresis

This numeric field allows you to program a hysteresis voltage, resistance, or current value such that when the detected voltage on the corresponding input signal transitions from above the Low Threshold plus this value, the state of the output signal shall change from FLOAT to LOW.

Tanks Tab

This Tanks Tab contains parameters for configuring tank measurement via the two resistive channels and the current loop channel. See Figure 25 for Tanks Tab detail.

The screenshot displays the 'Tanks' tab within a configuration window. The window has a tabbed interface at the top with the following tabs: General, Control, Alarm, Advanced, Counter, Flash, Grouping, Inputs, Tanks (selected), Latch, LoadShedding, and Logic. The 'Tanks' tab is active, showing three input channel configurations.

Input 9 (1 kOhm Resistive Channel)

- ☒ Enable
- Label: Fresh Water
- Tank Capacity: 60 Gal
- Tank Type: Fresh Water
- Tank Number: 0
- Data Damping Period: 0.0 sec
- Realtime Resistance: Ohms
- Realtime Level:
- Tank Levels Calibration button

Input 10 (250 Ohm Resistive Channel)

- ☒ Enable
- Label: Fuel
- Tank Capacity: 600 Gal
- Tank Type: Fuel
- Tank Number: 0
- Data Damping Period: 0.0 sec
- Realtime Resistance: Ohms
- Realtime Level:
- Tank Levels Calibration button

Input 11 (4-20mA Current Loop)

- ☐ Enable
- Label:
- Pressure at 4mA: 0.0 PSI
- Tank Capacity: 0.0 Gal
- Tank Type: Fuel
- Pressure at 20mA: 0.0 PSI
- Tank Number: 0
- Data Damping Period: 0.0 sec
- Realtime Current: mA
- Realtime Level:
- Tank Levels Calibration button

At the bottom of the dialog box, there are six buttons: Load Config From File..., Save Config To File..., Restore Factory Defaults, Get Config From Device, Put Config To Device, and Close. Below these buttons, a note states: RED text indicates a changed parameter that has not yet been put to the device.

Figure 25 - Tanks Configuration Tab Dialog Box

Enable

Each resistive/current loop measurement tool can be enabled or disabled. If this box is checked, the tank level corresponding to this channel will be shown. If this box is unchecked, no tank level will be shown. As shipped from the factory, tank level channels are disabled.

The following sections describe in detail the configuration of the current loop measurement channel when it is enabled.

Label

Type a description of the tank being monitored in the field marked Label. Maretron display products will display this label text when you are selecting data to display. If the channel is disabled, no further configuration is required.

Pressure

Pressure at 4mA (Current Loop channel only)

Program this parameter to match the pressure reading of the current loop pressure transducer when it is sourcing a current of 4mA. You can determine this value by examining the specification of the pressure transducer being used.

Pressure at 20mA (Current Loop channel only)

Program this parameter to match the pressure reading of the current loop pressure transducer when it is sourcing a current of 20mA. You can determine this value by examining the specification of the pressure transducer being used.

Tank Capacity

In addition to indicating the fluid level within a tank, the channel also can be configured or programmed with the attached tank's capacity. This way, you will be able to view the tank's capacity as well as the amount of liquid remaining anywhere on the vessel where there is an NMEA 2000 compatible display.

Tank Number

Use this parameter to set the tank number for the tank level channel being configured.

The channel supports up to sixteen potential tank numbers (0 through 15) for a given type of tank.

Tank Type

This parameter allows you to set the fluid type in the tank for identification by display devices. You can configure the channel for any of these tank types:

- Fuel
- Fresh Water
- Waste Water
- Live Well
- Oil
- Black Water
- Reserved-1 through Reserved-7 (if none of the above types apply)

Data Damping Period

You can configure a damping parameter to smooth the tank level or pressure/ vacuum readings or make them more responsive. The data damping is configurable between 0.2 – 25.0 seconds. The default data damping for a channel is 3s.

Realtime Resistance

(Resistive Channels Only)

This read-only field shows the resistance currently being measured on the applicable resistive input signal.

Realtime Current

(Current Loop Channel Only)

This read-only field shows the current being measured on the current loop input signal.

Tank Levels Calibration

Pressing this button opens the Tank Calibration dialog, shown in Figure 25.

There are two methods of calibration: Manual Table and Step Fill Table

Manual Table

Using the manual table method, you enter each entry of the measured parameter (depth) and the level of fluid in the tank. The table may have as few as 2 entries (for a tank with rectangular cross-section) or as many as 16 entries (for a tank with a complex cross-section).

CLMD16 (0x0A) 1540097 - Tank Calibration

Manual Table | Step Fill

Current Tank Calibration

	Resistance	Level (%)
1	204	0.00
2	33	100.00
3	-	-
4	-	-
5	-	-
6	-	-
7	-	-
8	-	-
9	-	-
10	-	-
11	-	-
12	-	-
13	-	-
14	-	-
15	-	-
16	-	-

Set to American Standard (240-33 ohm)

Set to European Standard (10-180 ohm)

Meas. Resistance (Ohms):

93

Number of Table Entries: 2

Load Config From File... Save Config To File...

Get Config From Device Put Config To Device

Close

RED text indicates a changed parameter that has not yet been put to the device

Figure 26 - Current Loop Manual Table Calibration Tank, Initial Window Dialog Box

Fluid Density

To convert the pressure measured the channel must know the density of the fluid being measured. This control allows you to program the channel with the proper fluid density. You may choose from Diesel Fuel 20, Diesel Fuel 60, Fresh Water, or you may enter a different numeric density value appropriate to the fluid whose depth is being measured.

Number of Table Entries

You may choose the number of entries to be in the calibration table. Two is sufficient for a tank with a rectangular cross-section. The channel supports up to 16 table entries for supporting tanks with more complex cross-sections.

Current Tank Calibration

This grid shows the values of the tank calibration table. Each line of the grid has two entries:

- 1) Tank Depth – this is the height of the fluid above the pressure sensor port
- 2) Level (%) – this is the percent full the tank is at the specific tank depth

Step Fill Table

In the Step Fill Table method, you start with an empty tank, and then fill the tank with fluid, stopping at intermediate points to enter the amount of fluid put into the tank thus far, ending once the tank is full. You may enter between two and sixteen calibration points. (see: Figure 27, Figure 28 & Figure 29),

The screenshot shows a software window titled "CLMD16 (0x0A) 1540097 - Tank Calibration". It has two tabs: "Manual Table" and "Step Fill", with "Step Fill" being the active tab. The main area contains three numbered instructions: 1. Confirm that your pressure sensor really measures 0.0 PSI at 4mA and 1.5 PSI at 20mA. 2. Select estimated Tank Capacity. Below this is a label "Tank Capacity (Gal) :" followed by a numeric input field showing "100.0". 3. With empty tank, press "Start Calibration" to begin calibration process. Below this is a button labeled "Start Calibration". At the bottom of the window, there are five buttons: "Load Config From File...", "Save Config To File...", "Get Config From Device", "Put Config To Device", and "Close". A red text note at the very bottom states: "RED text indicates a changed parameter that has not yet been put to the device".

Figure 27 - Current Loop Step Fill Calibration Tank, Initial Window Dialog Box

To use this method, use the following steps:

- 1) Enter the estimated total capacity of the tank into the 'Total Capacity' text box.
- 2) Press the 'Start Calibration' button. You will now see the Step Fill Calibration window displayed, as shown below.

Tank Calibration - Step Fill Calibration

Current Tank Calibration

Entry	Depth (")	Level (%)	Volume (Gal)	Current
1	-	-	-	-
2	-	-	-	-
3	-	-	-	-
4	-	-	-	-
5	-	-	-	-
6	-	-	-	-
7	-	-	-	-
8	-	-	-	-
9	-	-	-	-
10	-	-	-	-
11	-	-	-	-
12	-	-	-	-
13	-	-	-	-
14	-	-	-	-
15	-	-	-	-
16	-	-	-	-

Tank Capacity (Gal) : **100.0**

Measured Current (mA): **4.0**

Current Level (Gal) : **0.0**

Step 1 of 16

Complete

Abort

Figure 28 - Current Loop Step Fill Tank Calibration Dialog Box

- 3) Enter '0' into the Current Level text box, and press 'Step'. You have now entered the first point of the table.
- 4) Partially fill the tank. Enter the amount of fluid pumped into the tank into the 'Current Level' text box, and press 'Step' (if you make a mistake entering a level, you can press 'Back' and re-enter the level. If you want to cancel the process, press the 'Abort' button).
- 5) Repeat the previous step until the tank is filled.

Once you have entered the last point, where the tank is 100% full, press 'Complete'. This will cause the table to be stored in the device.

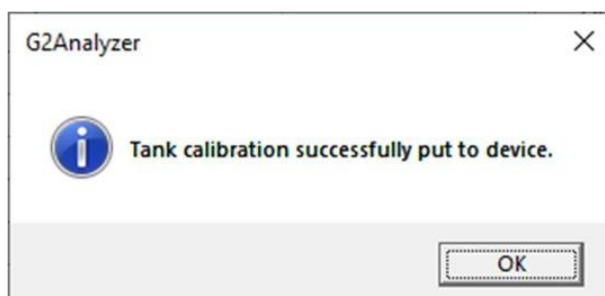


Figure 29 - Current Loop Tank Fill Confirmation Dialog Box

Latch Tab

The CLMD16 provides sixteen latches for use in the development of switching applications. Each latch element consists of a single SET-RESET latch. Please refer to 'Latch' on page 30 for details on the implementation of this function. See Figure 30 for Latch Tab detail.

General | Control | Alarm | Advanced | Counter | Flash | Grouping | Inputs | Tanks | Latch | LoadShedding | Logic

Latch Output #1
Set Signal: **Input 1 High** Reset Signal: **Input 1 Float**

Latch Output #2
Set Signal: None Selected Reset Signal: None Selected

Latch Output #3
Set Signal: None Selected Reset Signal: None Selected

Latch Output #4
Set Signal: None Selected Reset Signal: None Selected

Latch Output #5
Set Signal: None Selected Reset Signal: None Selected

Latch Output #6
Set Signal: None Selected Reset Signal: None Selected

Latch Output #7
Set Signal: None Selected Reset Signal: None Selected

Load Config From File... Save Config To File... Restore Factory Defaults
Get Config From Device Put Config To Device Close

RED text indicates a changed parameter that has not yet been put to the device

Figure 30 - Latch Configuration Tab Dialog Box

Set Signal

This parameter allows you to select the internal signal to be connected to the SET input of the latch element. You may select from the list of signals in Table 11 - Available Signal Table.

Reset Signal

This parameter allows you to select the internal signal to be connected to the RESET input of the latch element. You may select from the list of signals in Table 11 - Available Signal Table.

Load Shedding Tab

The CLMD16 can implement load shedding, which allows specified loads to be turned off when the DC supply voltage drops below configured levels. Please refer to ‘

Load Shedding' on page 24 for details on the implementation of load shedding. See Figure 31 for Load Shedding tab detail.

CLMD16 (0x3F) 154101 - Configuration Dialog

General | Control | Alarm | Advanced | Counter | Flash | Grouping | Inputs | Tanks | Latch | LoadShedding | Logic

Load Shedding

Channel 1 Priority: **HIGH**

Channel 2 Priority: HIGH

Channel 3 Priority: HIGH

Channel 4 Priority: HIGH

Channel 5 Priority: HIGH

Channel 6 Priority: HIGH

Channel 7 Priority: HIGH

Channel 8 Priority: HIGH

Channel 9 Priority: HIGH

Channel 10 Priority: HIGH

Channel 11 Priority: HIGH

Channel 12 Priority: HIGH

Channel 13 Priority: HIGH

Channel 14 Priority: HIGH

Channel 15 Priority: HIGH

Channel 16 Priority: HIGH

Supply Voltage Threshold Configuration

Medium Priority

Deactivate Loads Below: 12.3 V

Activate Loads Above: 12.6 V

Low Priority

Deactivate Loads Below: 12.4 V

Activate Loads Above: 12.8 V

Voltages above must follow these rules:

Valid voltage range 7VDC to 32VDC

Low Priority Activate > Low Priority Deactivate

Low Priority Activate > Medium Priority Activate

Low Priority Deactivate > Medium Priority Deactivate

Medium Priority Activate > Medium Priority Deactivate

Load Config From File... Save Config To File... Restore Factory Defaults

Get Config From Device Put Config To Device Close

RED text indicates a changed parameter that has not yet been put to the device

Figure 31 - Load Shedding Configuration Tab Dialog Box

Channel (x) Priority

This programmable parameter allows you to specify the priority level of the breaker channel. You may select from one of the following values:

- HIGH – channels with this priority are never turned off
- MEDIUM
- LOW

Medium Priority Deactivate Loads Below

This programmable parameter allows you to specify a voltage value such that when the DC supply voltage drops below this level, channels with MEDIUM priority will be disabled.

Medium Priority Activate Loads Above

This programmable parameter allows you to specify a voltage value such that when the DC supply voltage rises above this level, channels with MEDIUM priority will be enabled.

Low Priority Deactivate Loads Below

This programmable parameter allows you to specify a voltage value such that when the DC supply voltage drops below this level, channels with LOW priority will be disabled.

Low Priority Active Loads Above

This programmable parameter allows you to specify a voltage value such that when the DC supply voltage rises above this level, channels with LOW priority will be enabled.

Voltages above must follow these rules

There are several rules the voltage settings must adhere to. Each rule is highlighted in green when the rule is satisfied, and in red when the rule is not satisfied. Please ensure that all fields are highlighted in green before putting the configuration to the device or saving the configuration to a file.

Logic Tab

The CLMD16 provides forty-eight logic elements for use in development of applications. Each logic element consists of a three-input lookup table, enabling any three-input Boolean logic function to be realized. See Figure 32 for Logic Tab detail. Please refer to 'Logic' on page 32 for details on the implementation of this function.

General
Control
Alarm
Advanced
Counter
Flash
Grouping
Inputs
Tanks
Latch
LoadShedding
Logic

Logic Output #1

Input A: Network Input 1
Input B: Discrete I/O 1
Input C: None Selected

A	B	C	Output
0	0	0	0
0	0	1	1
0	1	0	1
0	1	1	1
1	0	0	1
1	0	1	1
1	1	0	1
1	1	1	1

Logic Output #2

Input A: Network Input 7
Input B: Discrete I/O 2
Input C: None Selected

A	B	C	Output
0	0	0	0
0	0	1	0
0	1	0	1
0	1	1	1
1	0	0	1
1	0	1	1
1	1	0	1
1	1	1	1

Logic Output #3

A	B	C	Output
0	0	0	in

Load Config From File...
Save Config To File...
Restore Factory Defaults
Get Config From Device
Put Config To Device
Close

RED text indicates a changed parameter that has not yet been put to the device

Figure 32- Logic Confirmation Tab Dialog Box

Input A

This signal is connected to the first input of the lookup table for this logic element. You may select from the list of signals in Table 11 - Available Signal Table.

Input B

This signal is connected to the second input of the lookup table for this logic element. You may select from the list of signals in Table 11 - Available Signal Table.

Input C

This signal is connected to the third input of the lookup table for this logic element. You may select from the list of signals in Table 11 - Available Signal Table.

Lookup Table

The lookup table consists of eight rows, one for each possible combination of values for the three input signals. Set the value in the Output row of the table to the desired output signal value corresponding to the A, B, and C signal values for that row.

Timer Tab

The CLMD16 provides sixteen timer elements for use in constructing switching applications. Please refer to 'Timer' on page 29 for details on the implementation of this function. See Figure 33 for Timer Tab detail.

The screenshot shows the 'Timer' tab in a configuration dialog. It features six sections for 'Timer Output #1' through 'Timer Output #6'. Each section contains a 'Delay Signal' dropdown, a 'Delay Time' spinner, and a 'Delay Type' dropdown. The 'Delay Signal' for Output #1 is 'Input 1 High' (in red), and its 'Delay Time' is 1 s. Output #2 has 'Input 2 High' (in red) and a 'Delay Time' of 3 s. Outputs #3 through #6 have 'None Selected' and a 'Delay Time' of 0 s. The 'Delay Type' for Output #1 is 'ON Delay', while for the others it is 'No Delay'. At the bottom, there are buttons for 'Load Config From File...', 'Save Config To File...', 'Restore Factory Defaults', 'Get Config From Device', 'Put Config To Device', and 'Close'. A note at the bottom states: 'RED text indicates a changed parameter that has not yet been put to the device'.

Timer Output	Delay Signal	Delay Time (s)	Delay Type
Timer Output #1	Input 1 High	1	ON Delay
Timer Output #2	Input 2 High	3	ON Delay
Timer Output #3	None Selected	0	No Delay
Timer Output #4	None Selected	0	No Delay
Timer Output #5	None Selected	0	No Delay
Timer Output #6	None Selected	0	No Delay

RED text indicates a changed parameter that has not yet been put to the device

Figure 33 - Timer Configuration Tab Dialog Box

Delay Signal

This parameter allows you to select the internal signal to connect to the input of the timer element. You may select from the list of signals in Table 11 - Available Signal Table.

Delay Type

This parameter allows you to select the type of delay implemented by this timer function. You may select from one of the following choices:

- No Delay – the input signal is passed through to the output signal with no delay introduced.
- OFF Delay – the input signal is passed through to the output signal with ON to OFF transitions delayed by the time specified by the Delay Time parameter.
- ON Delay – the input signal is passed through to the output signal with OFF to ON transitions delayed by the time specified by the Delay Time parameter.

Delay Time

This parameter allows you to select the amount of time by which to delay the appropriate edges of the input signal to produce the output signal.

Toggle Tab

The CLMD16 provides sixteen toggle flip-flop elements for use in developing switching applications. Please refer to

Toggle on page 31 for details on the implementation of this function. See Figure 34 for Toggle Tab detail.

Alarm | Advanced | Counter | Flash | Grouping | Inputs | Tanks | Latch | LoadShedding | Logic | Timer | Toggle | D ◀ ▶

Toggle Signal #1
Toggle Signal: Logic Output 1 ▼

Toggle Signal #2
Toggle Signal: Logic Output 2 ▼

Toggle Signal #3
Toggle Signal: Logic Output 3 ▼

Toggle Signal #4
Toggle Signal: Logic Output 4 ▼

Toggle Signal #5
Toggle Signal: Logic Output 5 ▼

Toggle Signal #6
Toggle Signal: None Selected ▼

Toggle Signal #7
Toggle Signal: None Selected ▼

Toggle Signal #8
Toggle Signal: None Selected ▼

Load Config From File... Save Config To File... Restore Factory Defaults

Get Config From Device Put Config To Device Close

RED text indicates a changed parameter that has not yet been put to the device

Figure 34 - Toggle Configuration Tab Dialog Box

Toggle Signal

This parameter allows you to select the internal signal to connect to the input of the timer element. You may select from the list of signals in Table 11 - Available Signal Table.

Discrete I/O Tab

When a device transmitting the NMEA 2000 127501 Binary Status Report PGN is part of the installation, it can be configured to create an input signal for the CLMD16. Up to thirty-two Discrete I/O signals can be programmed.

See Figure 35 for Discrete I/O Tab detail.

Grouping | Inputs | Tanks | Latch | LoadShedding | Logic | Timer | Toggle | Discrete I/O | Installation Description

Discrete I/O #1
Data Instance: 50 Indicator: 1

Discrete I/O #2
Data Instance: 50 Indicator: 3

Discrete I/O #3
Data Instance: 50 Indicator: 7

Discrete I/O #4
Data Instance: 50 Indicator: 5

Discrete I/O #5
Data Instance: 50 Indicator: 9

Discrete I/O #6
Data Instance: 52 Indicator: 3

Discrete I/O #7
Data Instance: 51 Indicator: 1

Discrete I/O #8

Load Config From File... Save Config To File... Restore Factory Defaults

Get Config From Device Put Config To Device Close

RED text indicates a changed parameter that has not yet been put to the device

Figure 35 - Discrete I/O Configuration Tab Dialog Box

Data Instance

This parameter allows you to configure the Data Instance of the NMEA 2000 127501 Binary Status Report PGN that is desired to be used as a Discrete I/O input to the CLMD16.

Indicator

This parameter allows you to configure the Channel / Indicator number within the NMEA 2000

127501 Binary Status Report PGN that is desired to be used as a *Discrete I/O* input to the CLMD16.

Group Switching Tab

This tab is where Group Switching feature is configured. Inputs to the Group Switching application can be any instance / channel indicator of NMEA 2000 PGN 127501 Binary Status Report. The Group Switching feature can support up to 4 input sequences for any instance and channel / indicator of an 127501 Binary Status Report PGN. These parameters are configured in the *Input Events* dialog. The *Output Commands* support On / Off and PWM control of any breaker on the NMEA 2000 network. The maximum *Input Events* and / or *Output Commands* summed that is allowable is 256 entries. See Figure 36 for further details on how to configure Group Switching.

CLMD16 (0x00) 1540225 - Configuration Dialog

Inputs | Tanks | Latch | LoadShedding | Logic | Timer | Toggle | Discrete I/O | **Group Switching** | Installation Description

Input Events

Instance (0-254)	Indicator (1-28)	Sequence Count (1-4)
33	13	1
33	13	2
33	13	3
33	13	4

Insert Delete

Output Commands

Instance (0-254)	Indicator (1-28)	On(1)/Off(0)	PWM/Dimming Level (0-100)
32	1	1	100
32	5	1	100
32	7	1	100
32	8	1	100

Insert Delete

Load Config From File... Save Config To File... Restore Factory Defaults

Get Config From Device Put Config To Device Close

RED text indicates a changed parameter that has not yet been put to the device

Figure 36 - Group Switching Dialog Box

Input Events

Instance

This parameter allows you to configure the data instance of the NMEA 2000 127501 Binary Status

Report PGN that is desired to be used as the Group Switching input.

Indicator

This parameter allows you to configure the Channel / Indicator of the NMEA 2000 127501 Binary Status Report PGN that is desired to be used as the Group Switching input related to the configured Input's Data Instance

Sequence Count

This parameter enables 'Count Detection' of each occurrence of the NMEA 2000 127501 Binary Status Report PGN becoming active on the network. The maximum Sequence Count for any Instance is 4. The CLMD16 will execute the Output Commands configured for each Sequence Count in a continuous loop where once the last Sequence Count is executed, the next time the particular input becomes active, the CLMD16 will execute 'Sequence 1' over again.

Output Commands

Instance

This parameter allows you to configure the Data Instance of the Load Controller (CLMD16, CLMD12, etc.) being commanded.

Indicator

This parameter allows you to configure the Channel of the Load Controller being commanded related to the configured Output Command's Load Controller (CLMD16, CLMD12, etc.) Data Instance.

On / Off

This parameter allows you to configure the breaker at the configured Data Instance and Channel for the Output Command either 'On' or 'Off' when it's corresponding (Highlighted) Input Event occurs.

PWM / Dimming Level

This parameter allows you to configure the breaker at the configured Data Instance and Channel for the Output Command PWM / Dimming Level when it's corresponding (Highlighted) Input Event occurs.

Installation Description Tab

This tab allows you to set values for the installation description properties of the device. See Figure 37 for Installation Description Tab detail.

CLMD16 (0x3F) 154101 - Configuration Dialog

Grouping | Inputs | Tanks | Latch | LoadShedding | Logic | Timer | Toggle | Discrete I/O | Installation Description

Installation Description #1 :
☒ ASCII (English language only, Max. 70 characters)
☐ Unicode (Max. 35 characters)

Installation Description #2 :
☒ ASCII (English language only, Max. 70 characters)
☐ Unicode (Max. 35 characters)

Manufacturer Information
Maretron 1-866-550-9100 www.maretron.com

Load Config From File... Save Config To File... Restore Factory Defaults
Get Config From Device Put Config To Device Close

RED text indicates a changed parameter that has not yet been put to the device

Figure 37 - Installation Description Tab Dialog Box

This device, along with all other certified NMEA devices, has two user-programmable installation description fields. You may program these fields with information specific to the device, such as date installed, the initials/name of the installer, the physical location of the device, etc. This configuration option will allow you to program the values of these fields.

Operating the CLMD16

LED Indicators

The CLMD16 has four LED indicators to show system status.

DIAG

This LED is used to indicate the state of operation of the touch controls. It can be in one of the following states:

- Dark: this indicates normal operation
- Flashing red: this indicates a failure requiring service

CAN-A

This LED indicates the state of the NMEA 2000 network connected to the connector labelled "J4 / CAN-A". It can be in one of the following states:

- Flashing blue: this indicates normal operation
- Dark: this indicates no communication is taking place
- Steady Blue: this indicates a fault on the NMEA 2000 network

CAN-B

This LED indicates the state of the NMEA 2000 network connected to the connector labelled "J5 / CAN-B". It can be in one of the following states

- Flashing blue: this indicates normal operation
- Dark: this indicates no communication is taking place
- Steady blue: this indicates a fault on the NMEA 2000 network

POWER

This Bicolor LED indicates the condition of the power being supplied to the CLMD16

- Steady green: this indicates normal operation
- Flashing green: this indicates that the unit's 125A total current limit has been exceeded
- Steady red: this indicates that the power and ground connections to the unit have been connected with reverse polarity

Breaker Status LED Indicators

Each breaker in the CLMD16 has a green LED indicator that is located on the correspondingly numbered switch on the touch panel. This LED can be in one of the following states:

- Dark: the breaker is turned OFF
- Steady green: the breaker is turned ON
- Flashing green: the breaker has been commanded to turn ON, but is turned OFF due to an overcurrent or short circuit condition

Override Switches

The CLMD16 includes a touch panel made up of capacitive touch switches to allow you to manually control the state of the breakers in the CLMD16 in the event of loss of NMEA 2000 network communication or for service purposes.

To enter override mode, press and hold the OVERRIDE switch until the green LED on the OVERRIDE switch is lit (1-2 seconds). While the green LED on the OVERRIDE switch is lit, the state of the CLMD16 breakers is controlled only by the individually numbered switches on the control panel, and all network control inputs are ignored.

Each switch has an LED that will be dark when the corresponding breaker is turned OFF and will be lit green when the corresponding breaker is turned ON. To toggle the state of a breaker, press and hold the corresponding breaker control switch until the LED changes state (about 0.5 seconds).

To exit override mode, press and hold the OVERRIDE switch until the green LED on the OVERRIDE switch is dark (about 1 second). The breakers will immediately revert to their automatically controlled state.



WARNING

The CLMD16 DC 16 Channel Load Module is operated under remote control. Before servicing any load-device connected to the CLMD16, you must first disconnect the wire between the CLMD16 load terminal and the load device. Failure to do so can result in serious bodily harm.

Maintenance

Regular maintenance is important to ensure continued proper operation of the Maretron CLMD16. Perform the following tasks periodically:

- Clean the unit with a soft cloth. Do not use chemical cleaners as they may remove paint or markings or may corrode the CLMD16 enclosure or seals. Do not use any cleaners containing acetone, as they will deteriorate the plastic enclosure.
- Ensure that the unit is mounted securely and cannot be moved relative to the mounting surface. If the unit is loose, tighten the mounting screws.
- Check the security of the cable connected to the NMEA 2000 connector and tighten if necessary.
- Check the security of all input and output connections to the unit and tighten if necessary.

Troubleshooting

If you notice unexpected operation of the Maretron CLMD16, follow the troubleshooting procedures in this section to remedy simple problems. If these steps do not solve your problem, please contact Maretron Technical Support. Refer to page 79 for contact information.

Table 12 - Troubleshooting Symptoms and Check Procedure

Symptom	Troubleshooting Procedure
No breaker/switch data visible on NMEA 2000 network.	<ul style="list-style-type: none">• Ensure that the CLMD16 is properly connected to the NMEA 2000 network.• Ensure that the CLMD16 instance of the breaker/switch component matches the instance programmed into the CLMD16, as described in Advanced Tab on page 42
A breaker/switch always reads "Error"	<p>The CLMD16 may have shut down the affected channel due to an over-temperature or over-current condition detected on the CLMD16 breaker itself.</p> <ul style="list-style-type: none">• Ensure that the current drawn by the load is less than the current rating for the connected channel.• Ensure that no short circuits or other wiring problems exist on the load circuit, and reset the channel by turning it OFF, then ON.• If the breaker or switch control returns to the error state, closely examine the load wiring for problems and ensure that the load draws the appropriate amount of current.

A breaker/switch is "ON", but the load is not powered.	<ul style="list-style-type: none">• Ensure that the load is connected to the load terminal of the same CLMD16 channel that the breaker/switch component is controlling.• Ensure that the load's terminal which is not connected to the CLMD16 is connected to vessel ground.• Ensure that the connection between the breaker and the channel's power terminal is good.• Ensure that the breaker supplying power to the channel is not tripped.
You can see, but not control, the state of a breaker/switch	<ul style="list-style-type: none">• If you are controlling the load via a DSM-Series display, ensure that it is running at least firmware revision 1.4.10.• If you are controlling the load via N2KView software, ensure that you have a switch control license for the software.
Any other problems	<ul style="list-style-type: none">• Please refer to the CLMD16 product page on the Maretron website for additional troubleshooting suggestions.

Technical Specifications

As Carling is constantly improving its products, all specifications are subject to change without notice.

Certifications

Parameter	Comment
NMEA 2000 Standard	Certified
CE Mark	Recreational Craft Directive 2014/35/EU ISO 8846 Ignition Protection

NMEA 2000 Parameter Group Numbers (PGNs)

Description	PGN #	PGN Name	Default Rate
Periodic Data PGNs	127500	Load Controller Connection State & Control	1 time / 1.5s and on status change
	127501	Binary Status Report	Default: 1 time / 15s and on status change (Configurable Frequency)
	127505	Fluid Level	1 time / 2.5s
	127508	Battery Status (Battery Voltage)	1 time / 1.5s
	127751	DC Voltage / Current	1 time / 1.5s
Response to Requested PGNs	126464	PGN List (Transmit and Receive)	N/A
	126996	Product Information	N/A
	126998	Configuration Information	N/A
	130060	Label	N/A
	126720	Proprietary	N/A
	130818	Proprietary	N/A
Protocol PGNs	130825	Proprietary	N/A
	059392	ISO Acknowledge	N/A
	059904	ISO Request	N/A
	060928	ISO Address Claim	N/A
	065240	ISO Address Command	N/A
	126208	NMEA Request/Command/Acknowledge	N/A
	126993	Heartbeat	1 time / 60s

Electrical

Parameter	Value	Comment
Voltage Input Range	8 to 32 VDC	DC Voltage
Power Consumption	50 mA	NMEA 2000 Interface
Load Equivalence Number (LEN)	1	NMEA 2000 Spec. (1LEN = 50 mA)
Reverse Battery Protection	Yes	5 minutes
Load Dump Protection	Yes	12V: 87V, 200ms pulse, 1 Ω impedance 24V: 173V, 100ms pulse, 2 Ω impedance
12 A ECB peak current capacity	120 A	Peak Duration 400 μ S
25 A ECB peak current capacity	250 A	Peak Duration 400 μ S
Channel Current Measurement Accuracy	+/- 0.5 Amps	Typical
Channel Current Measurement Resolution	0.1 Amps	
Minimum Channel Current Measurement	0.5 Amps	
PWM Frequency	200 Hz	Breakers 1-12
Load	Inductive load interface	
Duty Cycle Range	1% - 100%	
Duty Cycle Resolution	1%	
Programmable Trip Level Resolution	1 Amp	
Analog/Digital Input Channels		
Absolute Voltage Limits	-2.3 – 36 VDC	
Input Resistance	1k Ω	
Input Voltage, Open Circuit	2.75 V	
Alarm Output		
Maximum Supplied Current	300mA	
Resistive Input Measurement Accuracy	2 Ω	
Resistive Input Measurement Resolution	1 Ω	

Mechanical

Parameter	Value	Comment
Size	11.0" x 7.48" x 1.871" (279.4mm x 190.0mm x 47.5mm)	Including Flanges for Mounting
Weight	2.5 lb. (1.2 kg)	
Material	Polybutylene Terephthalate (PBT) (Housing) 6061 Aluminum (Back Plate)	
Power Stud Torque Value	30 to 35 in-lbs. (3.39 – 3.95 N·m)	
Ground Stud Torque Value	10 to 15 in-lbs. (1.13 – 1.69 N·m)	

Environmental

Parameter	Value
IEC 60945 Classification	Exposed
Degree of Protection	IP67
Operating Temperature	-30°C to 70°C
Storage Temperature	-40°C to 70°C
Electric Field	30V/m
Ignition Protection	Ignition Protected

Environmental Testing

Parameter	Standard	Conditions
High Temperature Soak	EN 60068-2-2:2007	Duration 96hrs, T _{max} = 70°C
Low Temperature Soak	EN 60068-2-1:2007	96 hrs, T _{min} = -30°C
Temperature Cycling (Operating)	IEC 60068-2-14:2009	T _{min} = -30°C, T _{max} = 70°C
Temperature Shock (Storage)	IEC 60068-2-14:2009	T _{min} = -40°C, T _{max} = 70°C
External Surface Temperature Test	ISO 8846	Paragraph 4
Simulated Solar Radiation	EN 60068-2-5:2010	Procedure = B, 10 days @ 40°C
Ignition Protection	ISO 8846	
Humidity (Soak)	EN 60068-2-78:2002	RH = 93% +/-3%, Exposure 10 days
Humidity - Cyclic	EN 60068-2-30:2005	RH (> 90%), 6 cycles of 24hrs
Dust Ingress	IEC 60529:2001	Method EN60529 Section 13 Result IP6X
Water Ingress	DIN 40050-9:1993 IEC 60529:2001	Method as DIN 40050-9 Result IPX7
Mechanical Shock - Drop Test	EN 60068-2-32:1993	1000mm free-fall, all faces of 3 axes
Mechanical - Shock	60068-2-27:2009	500m/s ² , pulse duration 11ms
Mechanical - Bump	60068-2-29:1993	400m/s ² 6ms shock pulses, 3 axes
Vibration (General)	60068-2-6: 1996	Sine shaped sweep 5 Hz to 500 Hz
Vibration (Random)	EN 60068-2-64:1995	Method 1
Vibration (Resonant Search)	60068-2-6: 1996	frequency range 10 Hz – 2 kHz @ 5G
Chemical Resistance	EN 60068-2-74:2000	Test method = B
Salt Spray	EN 60068-2-52: 1996	Severity=4, Duration: 96 hours
Electrical (Operating Voltage)	SAE J1455:2011 Sect 4.13.1	Test for impaired function
Electrical (Over Voltage)	SAE J1455:2011 Sect 4.13.1	Test for impaired function +24V, +36V
Electrical (Reverse Polarity)	SAE J1455:2011 Sect 4.13.1	Test for impaired function -24V, -36V
Electrostatic Discharge (ESD)	ISO 13766:2006	+/- 8 kV (Direct), +/- 15 kV (Air)

Technical Support

If you require technical support for Maretron products, you can reach us in any of the following ways:

Telephone: 1-866-550-9100

Fax: 1-602-861-1777

E-mail: marine.support@carlingtech.com

World Wide Web: <http://www.maretron.com>

Mail: Carling Technologies, Inc.

Attn: Maretron Technical Support 120 Intracoastal Pointe Dr.

Jupiter, FL 33477 USA



Figure 38 - Product Manual QR Code

Scan this QR code with your smartphone for full technical information and a copy of this installation manual.

Maretron (2 Year) Limited Warranty

Carling Technologies warrants the Maretron® CLMD16 to be free from defects in materials and workmanship for two (2) years from the date of original purchase. If within the applicable period any such products shall be proved to Carling's satisfaction to fail to meet the above limited warranty, such products shall be repaired or replaced at Carling's option. Purchaser's exclusive remedy and Carling's sole obligation hereunder, provided product is returned pursuant to the return requirements below, shall be limited to the repair or replacement, at Carling's option, of any product not meeting the above limited warranty and which is returned to Carling; or if Carling is unable to deliver a replacement that is free from defects in materials or workmanship, Purchaser's payment for such product will be refunded. Carling assumes no liability whatsoever for expenses of removing any defective product or part or for installing the repaired product or part or a replacement therefore or for any loss or damage to equipment in connection with which Maretron® products or parts shall be used. With respect to products not manufactured by Carling, Carling's warranty obligation shall in all respects conform to and be limited to the warranty actually extended to Carling by its supplier. The foregoing warranties shall not apply with respect to products subjected to negligence, misuse, misapplication, accident, damages by circumstances beyond Carling's control, to improper installation, operation, maintenance, or storage, or to other than normal use or service.

THE FOREGOING WARRANTIES ARE EXPRESSLY IN LIEU OF AND EXCLUDES ALL OTHER EXPRESS OR IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE.

Statements made by any person, including representatives of Carling, which are inconsistent or in conflict with the terms of this Limited Warranty, shall not be binding upon Carling unless reduced to writing and approved by an officer of Carling.

IN NO CASE WILL CARLING BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, DAMAGES FOR LOSS OF USE, LOSS OF ANTICIPATED PROFITS OR SAVINGS, OR ANY OTHER LOSS INCURRED BECAUSE OF INTERRUPTION OF SERVICE. IN NO EVENT SHALL CARLING'S AGGREGATE LIABILITY EXCEED THE PURCHASE PRICE OF THE PRODUCT(S) INVOLVED. CARLING SHALL NOT BE SUBJECT TO ANY OTHER OBLIGATIONS OR LIABILITIES, WHETHER ARISING OUT OF BREACH OF CONTRACT OR WARRANTY, TORT (INCLUDING NEGLIGENCE), OR OTHER THEORIES OF LAW WITH RESPECT TO PRODUCTS SOLD OR SERVICES RENDERED BY CARLING, OR ANY UNDERTAKINGS, ACTS OR OMISSIONS RELATING THERETO.

Carling does not warrant that the functions contained in any software programs or products will meet purchaser's requirements or that the operation of the software programs or products will be uninterrupted or error free. Purchaser assumes responsibility for the selection of the software programs or products to achieve the intended results, and for the installation, use and results obtained from said programs or products. No specifications, samples, descriptions, or illustrations provided Carling to Purchaser, whether directly, in trade literature, brochures or other documentation shall be construed as warranties of any kind, and any failure to conform with such specifications, samples, descriptions, or illustrations shall not constitute any breach of Carling's limited warranty.

Warranty Return Procedure:

To apply for warranty claims, contact Carling Technologies or one of its Maretron dealers to describe the problem and determine the appropriate course of action. If a return is necessary, place the product in its original packaging together with proof of purchase and complete a Return Merchandise Authorization (RMA) on the following web page:

https://www.maretron.com/rma_request.php

You will be contacted by email with instructions on where to send the unit for repair / evaluation. You are responsible for all shipping and insurance charges. Carling will return the replaced or repaired product with all shipping and handling prepaid except for requests requiring expedited shipping (i.e., overnight shipments). Failure to follow this warranty return procedure could result in the product's warranty becoming null and void.

Carling reserves the right to modify or replace, at its sole discretion, without prior notification, the warranty listed above. To obtain a copy of the then current warranty policy for Maretron® products, please go to the following web page:

<http://www.maretron.com/company/warranty.php>

Appendix A – NMEA 2000 Interfacing

This appendix is intended to relate specific characteristics of the CLMD16 to how they are communicated via NMEA 2000 messages in order to help ascertain whether the messaging implemented by the CLMD16 is compatible with other NMEA 2000 products. It is not a complete description of the messages. If you require detailed information on the messages, please obtain a copy of the NMEA 2000 standard documents from the National Marine Electronics Association (www.nmea.org).

CLMD16 NMEA 2000 Periodic Data Transmitted PGNs

PGN 127500 – Load Controller Connection State/Control

The CLMD16 uses this PGN to transmit the state of each of the breakers. A separate occurrence of this message will be transmitted for each breaker. The state of each breaker may be controlled by issuing a 126208 NMEA Command for this message addressed to this device.

- Field 1: Sequence ID – This field is transmitted with a value of 255.
- 2: Connection ID – This field identifies the output channel (breaker) whose status is being reported in this message. The value of this field will be in the range of 0 (Breaker #1) through 15 (Breaker #16).
 - 3: State – This field indicates the state of the solid-state breaker.
 - 4: Status – This field indicates the status of the solid-state breaker.
 - 5: Operational Status & Control – This field is used to lock and unlock the solid-state breaker.
 - 6: PWM Duty Cycle – This field is used to control and report the PWM duty cycle of the solid-state breaker.
 - 7: Time ON – This field is used to report the ON time if the solid-state breaker is running under the control of a flash element.
 - 8: Time OFF – This field is used to report the OFF time if the solid-state breaker is running under the control of a flash element.

PGN 127501 – Binary Status Report

The CLMD16 uses this PGN to transmit the state of each of the breakers and connected switch inputs. The state of the breakers may be controlled by issuing a 126208 NMEA Command for this message addressed to this device. The frequency in which this PGN is transmitted is configurable. (See **Error! Reference source not found.** configuration section of this manual for information on how to change the transmission frequency of this PGN)

- Field 1: Indicator Bank Instance – This field identifies the particular switch bank to which this PGN applies. Please refer to Instance on page 35 for instructions on how to program the value of this field.
- 2: Indicator #1 – This field indicates the state of the solid-state breaker on output channel #1. The state will be one of the following values:
- “OFF” – The breaker is open – no current is supplied to the load.
 - “ON” – The breaker is closed – current is supplied to the load.
 - “Error” – The breaker is open due to an error condition.
- 3 to 16: indicates the state of the solid-state breaker on outputs on channels 2 to 16 respectively.
- 18: Indicator #17 – This field indicates the state sensed by the digital input on input channel #1. The state will be one of the following values:
- “OFF” – The digital input voltage level is outside the range(s) programmed for “ON” levels
 - “ON” – The digital input voltage level is inside the range(s) programmed for “ON” levels
- Please refer to Input Monitor on page 25 for details
- 19 to 28: Indicates the state sensed by the input channels 2 -11 respectively.
- 29: Indicates the state of the Alarm Output

PGN 130314 – Actual Pressure

The CLMD16 uses this PGN to provide a regular transmission of various pressures. The factory default for periodic transmission rate is once every two seconds. The transmission of this PGN can be disabled (see PGN 126208 – NMEA Request Group Function – Transmission Periodic Rate).

- Field 1: SID – The sequence identifier field is used to tie related PGNs together. For example, the CLMD16 will transmit identical SIDs for 130312 (Temperature) and 130311 (Environmental Parameters) to indicate that the readings are linked together (i.e., the data from each PGN was taken at the same time although they are reported at slightly different times).
- 2: Pressure Instance – The CLMD16 sets this field to identify a particular pressure measurement from the source specified in Field 3. Every pressure measurement from a given source type on the network should have a distinct instance value, so that monitoring devices and displays can identify which measurement is which.
- 3: Pressure Source – This field is used to indicate the type of pressure measurement being taken. Possible values for this field include Atmospheric Pressure, Water Pressure, Steam Pressure, Compressed Air Pressure, Hydraulic Pressure, and 16 User Defined pressure sources.
- 4: Pressure – This field is used to indicate the pressure, whose source is specified in field 2, in units of 0.1 Pa.
- 6: Reserved bits – The CLMD16 sets all bits in this field to a value of “1”.

PGN 127505 – Fluid Level

The CLMD16 uses this PGN to indicate the attached tank's fluid instance, fluid type, fluid level, and tank capacity.

- Field 1: Fluid Instance – This field is used to identify the tank number and ranges between 0 and 15. There can be up to 16 tanks of a given type as defined by the Fluid Type field. This field is programmable through the NMEA command PGN. The CLMD16 ships from the factory with a default value of zero.
- 2: Fluid Type – This field identifies the type of fluid contained within the tank. Currently the defined fluid types are fuel, fresh water, wastewater, live well, oil, and black water. This field is programmable through the NMEA command PGN. The CLMD16 ships from the factory with a default value of 0x0 indicating "Fuel".
- 3: Fluid Level – This field is used to indicate the current fluid level in percentage. The value transmitted in this field depends on the distance from the sender to the top of the fluid or tank bottom.
- 4: Tank Capacity – This field is used to indicate the tank capacity. This field is programmable through the NMEA command PGN. The CLMD16 ships from the factory with a default value of 0xFFFFFFFF indicating "Data Not Available".
- 5: Reserved – This field is reserved by NMEA; therefore, the CLMD16 sets all bits to a logic 1

PGN 127751 – DC Voltage/Current

The CLMD16 uses this PGN to transmit DC voltage and current information.

- Field 1: Sequence ID – This field is transmitted with a value of 255.
- 2: Connection ID – This field identifies the output channel (breaker) whose status is being reported in this message. The value of this field will be in the range of 0 (Breaker #1) through 15 (Breaker #16) or 16 (Hardwired Input #1) through 23 (Hardwired Input #8)
- 3: DC Voltage – This field indicates the DC voltage sensed on a breaker or hardwired input.
- 4: DC Current – This field indicates the DC current sourced by the load (this field shall be set to "Data Not Available" for hardwired inputs 1-8)
- 5: Reserved bits – The CLMD16 sets all bits in this field to a value of "1"

PGN 127508 – Battery Status

When enabled, the CLMD16 uses this PGN to broadcast metered battery voltage values for its hardwired voltage-sensing inputs. The CLMD16 ships from the factory without PGN 127508 enabled.

- Field 1: Battery Instance – When enabled, the CLMD16 allows the configurator to choose the instance value of this field
- 2: Battery Voltage – This field indicates the DC voltage sensed on the corresponding hardwired input.
- 3: Battery Current – this field shall be set to "Data Not Available"
- 4: Battery Case Temperature – this field shall be set to "Data Not Available"

5: Sequence ID – This field is transmitted with a value of 255.