



Smartfind M15 AIS RECEIVER USER MANUAL

Smartfind M15, M15S & M15SW

AIS Receiver

User Manual

General Information

i. Copyright

The entire contents of this instruction manual, including any future updates, revisions, and modifications, shall remain the property of Orolia Ltd at all times. Unauthorized copies or reproduction of this manual, either in part or whole, in any form of print and electronic media, is prohibited. The contents herein can only be used for the intended purpose of this manual.

ii. Disclaimer

The information and illustrations contained in this publication are to the best of our knowledge correct at the time of going to print. We reserve the right to change specifications, equipment, installation and maintenance instructions without notice as part of our policy of continuous product development and improvement. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form, electronic or otherwise without

permission in writing from Orolia Ltd. No liability can be accepted for any inaccuracies or omissions in the publication, although every care has been taken to make it as complete and accurate as possible.

This manual is applicable for all versions of the McMurdo Smartfind M15 devices manufactured after March 2014.

iii. Safety Warning



It is important to know that AIS is designed for the purpose of anti-collision and serves as a complement to navigation. It is not the absolute navigational equipment and does not replace any navigational system installed on board.

Any AIS device cannot guarantee monitoring and receiving signals from all vessels in the surroundings unless those vessels are equipped with AIS devices.



ELECTRICAL SHOCK HAZARD

Improper disassembly or modification could cause electrical shocks, fire, or personal injury. Contains no user-serviceable parts.

CORRECT POWER SOURCE



An incorrect power source will damage the equipment and may even result in a fire. Ensure that the correct power source is provided at all times.



AVOID DIRECT CONTACT WITH RAIN OR SPLASHING WATER

Electrical shock or fire could be resulted if water leaks into the equipment.



AVOID USING CHEMICAL SOLVENTS TO CLEAN THE CASE

As some solvents can damage the case material.



NOTE/INFORMATION

Throughout this manual this symbol indicates important information.

iv. Product Category

This product is categorized as "protected" in accordance with the requirements as defined in IEC 60945.

v. Hardware / Software Version

The model name/number, hardware information, and firmware (software) version of the receiver can be identified through using the McMurdo AIS Receiver Config software supplied. The

software maintenance/upgrade of the receiver can be carried out via the USB interface.

vi. Declaration of Conformity

Hereby Orolia Ltd declares that the Type Z604 (M15), Z605 (M15S), & Z606 (M15SW) is in compliance with the essential requirements and other relevant provisions of the Council Directive 1995/5/EC on radio and telecommunications terminal equipment. A copy of the Declaration of Conformity can be obtained on-line from: www.mcmurdomarine.com/documents

vii. FCC Interference Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction

manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation

viii. Disposal Instruction

The Waste Electrical and Electronic Equipment (WEEE) Directive aims to minimize any adverse impact of electronic equipment on the environment, both during the product lifetime and when it becomes waste. Within the European Union this legislation is mandated by Directive

2002/96/EC, and there is similar legislation in most other continents. The directive applies to all electronic products such as IT, household appliances, portable electronics etc., and imposes requirements to collect, treat, recover and recycle each product at its end of life. Electronic end-user products must also carry a WEEE label (as below) and recovery and recycling information has to be provided to the recycler.



ix. IMO Green Passport Ship Recycling Information

Orolia Ltd hereby declares potentially hazardous content in

some of its electronic products. Small amounts of the following substances may be present: beryllium oxide, lithium, lead, brominated flame retardants, glass. In keeping with European directive 2002/96/EC (Waste Electronic and Electrical Equipment) and the provisions of IMO Resolution A.962 (23) (Guidelines On Ship Recycling), Orolia Ltd strongly recommends that its products, including any battery packs, be disposed of in a considerate and legal manner.

x. Maintenance

All servicing must be carried out by an Orolia Ltd. approved service agent. Always call your nearest agent and talk to their service department before returning equipment. You can find your nearest service agent from:

- The McMurdo web site: www.mcmurdomarine.com
- Contacting Orolia Ltd. direct (see warranty page).
- Contacting a McMurdo distributor

xi. Contact Information

For sales, services, and technical supports, please contact your local Orolia Ltd representatives or Orolia Ltd at www.mcmurdomarine.com or sales.mcmurdo@orolia.com or service.mcmurdo@orolia.com or service.mcmurdo@orolia.com or

Table of Content

1	INT	RODU	CTION	1
	1.1	About	t This Manual	1
	1.2	Smart	tfind M15 Overview	1
	1.3	Comp	parison of Smartfind M15 Series	4
	1.4	Type o	of AIS	5
	1.5	AIS M	essage Type	6
	1.6	Impor	tant Notice	8
2	GE	TTING	STARTED	9
	2.1	Items	in the Package	9
	2.2	Powe	r ON / OFF	11
	2.3	Smart	tfind M15 LED Indicators	12
3	INS	TALLA	ATION NOITA	14
	3.1	Smart	tfind M15 Connection Interface	14
	3.2	Instal	lation Precautions	16
	3.3	Moun	ting Instructions	16
	3.4	Wiring	g Details	19
	3.5	NMEA	Wiring Instructions	20
		3.5.1	NMEA0183 RS422 Connection	20

	;	3.5.2	RS232 Connection	21
	;	3.5.3	Twin RS232 Connection	22
	3.6	VHF A	Antenna Installation	23
	3.7	Wi-Fi	Antenna Installation (M15SW only)	26
	3.8	USB [Oriver Installation	27
	3.9	Smart	tfind M15 Configuration Software	29
	;	3.9.1	Software Installation	29
	;	3.9.2	Configuration	33
	;	3.9.3	WiFi Option (M15SW model only)	35
	;	3.9.4	Diagnosis	36
	3.10	NMEA	A 0183 Multiplexer	39
	3.11	McMu	ırdo AIS Viewer Software	41
4	APF	PENDI	X	42
	4.1	Produ	ıct Specifications	42
	4.2	Dimer	nsions	45
	4.3	Acces	ssories (Optional)	46
	4.4	NMEA	A 2000 PGN Information (M15SW Model only)	47
5	Oro	Orolia Ltd WORLDWIDE WARRANTY		
6	ACI	RONYI	MS	53

1 INTRODUCTION

1.1 About This Manual

This manual contains installation instructions and operating information for different McMurdo Smartfind M15 models. While most of the installation can be performed by the owner or the crew, a final commissioning can be carried out by your local agent/dealer when needed or required. Orolia Ltd and the local agent/dealer will not bear any responsibilities over any damages resulted in improper installation by unauthorized agent/dealer.

1.2 Smartfind M15 Overview

The McMurdo Smartfind M15 (including variants) is an AIS receiver. It receives AIS navigation data from AIS-equipped vessels nearby and improves navigation safety. Smartfind M15 is designed to inter-operate with AIS Class A, Class B

transponders, AIS SART, AIS MOB, and any other AIS station operating on the AIS VHF data link.

The Smartfind M15 is built with two parallel AIS receivers in one box monitoring the default marine VHF AIS channels, i.e. 161.975 and 162.025 MHz with optimized sensitivity. Having a Smartfind M15 AIS receiver on board, not only can you monitor the status of the vessels in the surrounding area, but also receive the dynamic information (position, speed, SOG, etc.), static information (ship name, MMSI, call sign, etc.), and voyage related information (cargo type, destination, etc.) from any vessels nearby that are equipped with AIS transponders.

The receivers are equipped with standard USB and NMEA0183, the Smartfind M15 allows connectivity to most available peripherals in the market.

The units can be either powered via the USB connection (for M15, serial number 21-305-000106 onwards only) or from an external 12/24V power supply.

Users are able to view AIS information on their preferred PC based navigation systems via the USB interface.

The Smartfind M15 is IPX2 water resistant providing acceptable protection against water, but it does require a protected installation environment away from water.



Figure 1 Smartfind M15

1.3 Comparison of Smartfind M15 Series

Description	Smartfind M15	Smartfind M15S	Smartfind M15SW
Number of AIS Channels	2	2	2
USB port	1	1	1
NMEA 0183	Independent 1 input, 1 output	Independent 1 input, 1 output	Independent 1 input, 1 output
Built-in VHF/AIS antenna splitter	No	Yes	Yes
NMEA 2000	No	No	Yes
Wi-Fi	No	No	Yes

1.4 Type of AIS

The different types of AIS devices are described below. The Smartfind M15 is an AIS receiver.

Class A AIS Transponder	 Transmits and receives AIS signal. Intended for vessels meeting the requirements of IMO AIS carriage requirement. It is mandatory for all commercial vessels that exceed 300 tons to be equipped with Class A AIS.
Class B AIS Transponder	 Transmits and receives AIS signal. Not necessarily in full accord with IMO AIS carriage requirements. It is not mandatory for vessels to be equipped with Class B AIS. Suitable for recreational vessel, in enhancing its safety at sea.
AIS Receiver	 Only receives AIS signal. Does not have transmitter to send out AIS signal. Suitable for recreational vessel that does not want to send out its vessel information.

1.5 AIS Message Type

The Smartfind M15 can receive AIS messages from both Class A and Class B AIS transponders as well as from AIS Base Stations, AIS AtoN's, and AIS SART/MOB devices. The message types are listed as below table. The messages in grey colour are transmitted only from a Class A AIS device.

Type of Message	Data Details	
	Maritime Mobile Service Identity (hereinafter	
	called "MMSI") number	
	IMO number	
Static Data	Call sign and name	
	Type of ship	
	Length and beam	
	GPS Antenna location	
	Draught of the ship	
Variation Datata	Cargo information	
Voyage Related	Destination	
Data	Estimate Time of Arrival (hereinafter called	
	"ETA")	

	Position of the vessel
	Coordinated Universal Time (hereinafter called
	"Time in UTC".)
Dynamic Data	Course Over Ground (hereinafter called "COG")
Dynamic Data	Speed Over Ground (hereinafter called "SOG")
	Heading
	Rate of turn
	Navigational status
Dynamic	Speed of the ship
_	'
Reports	Status of the ship
Safety Related	Alarm
Message	Safety
(SRM)	

1.6 Important Notice

The intended use of the McMurdo Smartfind M15 series Automatic Identification System Receiver is to enhance the safety of vessels at sea. However, a few points must be addressed:

- Under certain regulations, some specified vessels it is compulsory for AIS to be installed. However, this does NOT mean that all vessels will be equipped with AIS. Any AIS will NOT guarantee to monitor and to receive signals from every ship in the surroundings.
- AIS acts as an aid to navigation in the purpose of decreasing or preventing the possibility of vessel collision. It is not the absolute navigational equipment and does not replace any navigational system installed on board.
- This product is a marine AIS receiver intended for worldwide use on NON SOLAS vessels.

2 GETTING STARTED

2.1 Items in the Package

No.	Diagram	Description	Qty
1	M15S M15SW	Smartfind M15 AIS Receiver with integrated Power/USB/ NMEA0183 Cable, 1m	1

2		User's Manual	1
3		CD-ROM (User's manual in digital format, Configuration Utility, USB driver, AIS Viewer)	1
4		Mounting screws 4 M3.5x25	4
5	M15SW only	Wi-Fi antenna	1
6	M15S, M15SW only	VHF cable, 1m (with PL-259 male connectors)	1

Please contact your supplier immediately if there is any item missing.

2.2 Power ON / OFF

All Smartfind M15 models are designed having no physical On/Off switch. Thus, either the vessel's operation determines the unit's power status if connected via the power lead to the vessels power, or the PC that the device is connected via the USB cable if not using vessels power.



Note the unit should be wired using suitable fusing to ensure safe operation and to protect it from damage. A 2 amp fuse or circuit breaker is recommended for this in the cabling from the vessels power source.



If the PC does not recognise the unit after a power cycle, un-plug and re-plugin the USB connection to the PC.

2.3 Smartfind M15 LED Indicators




Figure 2 Smartfind M15 LED Indicators

	LED INDICATIONS					
Indicator	Indication	Model	Description			
Power	Steady Green	M15, M15S, M15SW	Device in normal operation			
Error	Flashing Red	M15, M15S, M15SW	Error is detected by the on-board system			
AIS Rx	Flashing Green	M15, M15S, M15SW	Receiving of AIS message on either AIS Channel 1 or Channel 2			

	Flashing	M15S,		
Radio Tx	Green	M15SW	VHF radio is transmitting	
Wi-Fi	Flashing Green	M15SW	Wireless activity	

3 INSTALLATION

3.1 Smartfind M15 Connection Interface

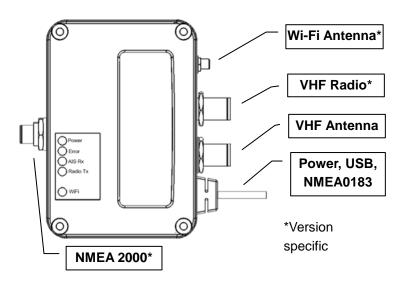


Figure 3 Smartfind M15 Connection Interface

M15 Connections					
Connection	Model	Description			
Power, USB, NMEA 0183	M15, M15S, M15SW	Cables for connecting unit to external devices and power			
VHF Antenna	M15, M15S, M15SW Antenna connector				
VHF Radio	M15S, M15SW	Radio connector			
Wi-Fi Antenna M15SW Wi-Fi ante		Wi-Fi antenna connector			
NMEA 2000 M15SW NMEA 2000 connecto		NMEA 2000 connector			

3.2 Installation Precautions

The Smartfind M15 is IPX2 water resistant providing acceptable protection against water, but it does require a protected installation environment away from water. Find a proper location prior to the installation process.

If drilling holes are necessary, always wear eye goggles for protection.

3.3 Mounting Instructions

McMurdo Smartfind M15 can be installed and mounted on either a flat surface or a wall.



The mounting instructions apply to all Smartfind M15 models.

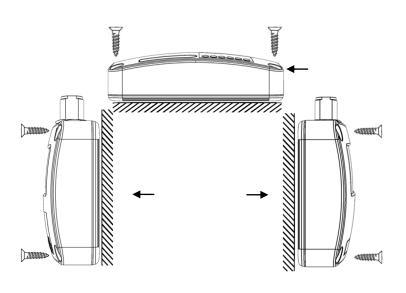


Figure 4 Mounting Instructions (1)

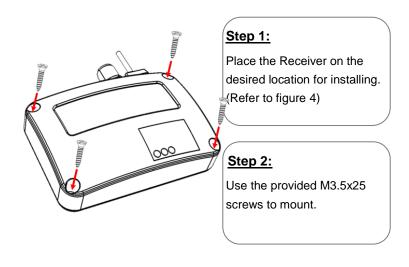


Figure 5 Mounting Instructions (2)

3.4 Wiring Details


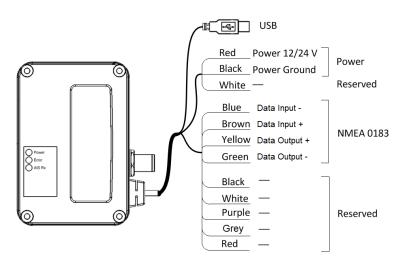


Figure 6 Wiring Details

3.5 NMEA Wiring Instructions

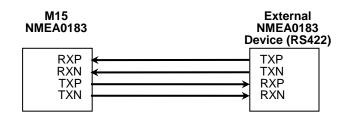


3.5.1 NMEA0183 RS422 Connection

Core Colour at M15	NMEA 0183 Signal	Signal Direction (M15)	External NMEA0183 Device
Brown	Data Input + (RXP)	Input	Data Output + (TXP)
Blue	Data Input – (RXN)	Input	Data Output – (TXN)
Yellow	Data Output + (TXP)	Output	Data Input + (RXP)
Green	Data Output – (TXN)	Output	Data Input – (RXN)

Figure 7 NMEA0183 Connection illustration


3.5.2 RS232 Connection



Core Colour at M15	NMEA 0183 Signal	Signal Direction (M15)	External RS-232 Device
Brown	Data Input + (RXP)	Input	Data Output (TXD)
Blue	Data Input – (RXN)	-	Ground
Yellow	Data Output + (TXP)	Output	Data Input (RXD)
Black	Power Ground, (GND)	-	Ground

Figure 8 NMEA0183 to RS232 Connection

3.5.3 Twin RS232 Connection

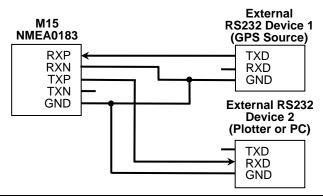

Core Colour at M15	NMEA 0183 Signal	Signal Direction (M15)	External RS-232 Devices
Brown	Data Input + (RXP)	Input	Data Output @ Device 1 (TXD)
Blue	Data Input – (RXN)	-	Ground @ Device 1 (GND)
Black	Power Ground (GND)	-	Ground @ Device 1 (GND)

Yellow	Data Output +	Output	Data Input @ Device 2
	(TXP)		(RXD)
Blue	Data Input –	-	Ground @ Device 2
	(RXN)		(GND)
Black	Power Ground	-	Ground @ Device 2
	(GND)		(GND)

Figure 9 NMEA0183 to RS232 Connection (Multiplexing)

When wiring NMEA0183 to AIS-ready equipment, please refer to your equipment manual first. Smartfind M15 supports three baud rates: 4800, 9600, and 38400. The default baud rate is 38400. Use the provided McMurdo AIS configuration utility to change the baud rates (See section 3.9).

3.6 VHF Antenna Installation

The quality and positioning of the antenna is the most important factor dictating AIS performance. It is recommended that a VHF antenna with omni-directional vertical polarization and specifically tuned for AIS operation band is used. Since the range of VHF signals is largely decided by line of sight distance,

AIS antenna should be placed as high as possible and at least 5 meters away from any constructions made of conductive materials.

When connecting the cable(s) with the Smartfind M15, take note of the following precautions.



DO NOT BEND CABLES

Excessive or tight bending of the cables may cause damage to the inner wires and impair overall the performance.

To avoid interference, the VHF antenna location should be placed in accordance to figure 10.

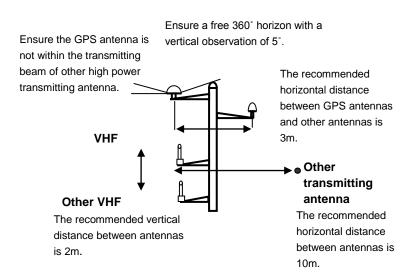


Figure 10 VHF Antenna Installation

3.7 Wi-Fi Antenna Installation (M15SW only)

Installation of the Wi-Fi antenna is straight forward, screw on the antenna firmly to the Wi-Fi connector and then align the antenna in a vertical position.



Ensure that a minimum separation distance of 20cm is maintained between the Wi-Fi antenna and any personnel in the vicinity.

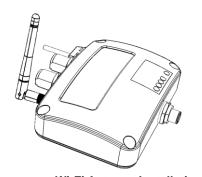


Figure 11 Wi-Fi Antenna Installation

3.8 USB Driver Installation

Your PC needs to install the USB driver in able to connect the AIS receiver. Locate the USB driver in the CD-ROM. Follow the instructions below to finish the installation.

Step 1: Open the USB CDC Driver folder and double click on USBDriverInstaller.exe to install the driver. Please click on Install Drivers to continue.




Figure 12 USB Driver Installation (1)

Step 2: A security reminder appears and asks for your confirmation. Click Install to proceed.



Figure 13 USB Driver Installation (2)

Step 3: Driver installation is completed. Close the window directly using the close window icon.

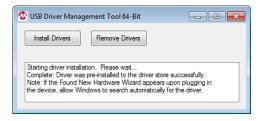


Figure 14 USB Driver Installation (3)

3.9 Smartfind M15 Configuration Software

3.9.1 Software Installation

Find the installation software McMurdo AIS Receiver Config.exe from the CD-ROM.

Step 1: Double click on the application

Step 2: You may either connect the receiver automatically or manually (see detail blow) by using the determined USB serial port number assigned by the PC.

Step 3: Accept Licence agreement, and press Next.

Step 4: Accept Product Registration, and Press Next.

Step 5: Select destination folder, and press Next.

Step 5: Select Users, and press next.

Step 6: press Finish.

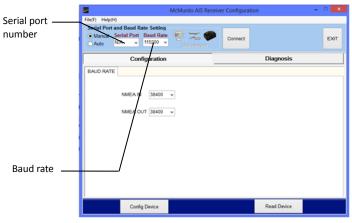


Figure 15 Software Installation (1)

To find the serial port number manually, click Start \rightarrow Control Panel \rightarrow Device Manager.

Expand the Ports section and look for USB Communications Port. In the sample picture below (figure 16), the serial port number is 30.

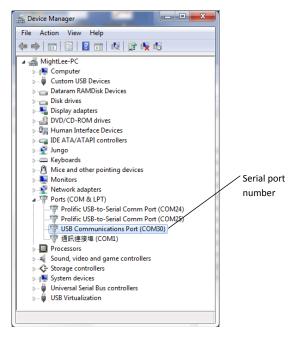


Figure 16 Software Installation (2)

Enter the value and hit "Connect" to link the computer to the receiver.

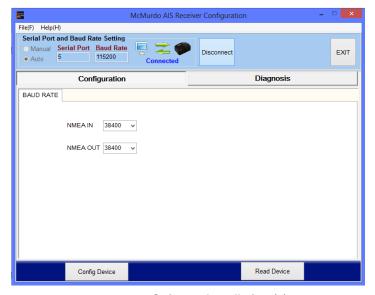


Figure 17 Software Installation (3)

3.9.2 Configuration

The Configuration tab has one submenu, Baud Rate Options.

Baud Rates:

Each Smartfind M15 model has two independent NMEA 0183 ports (In & Out) and these can have different baud rate values. To adjust the values set the desired baud rates for the NMEA input and output, and then click on "Config Device" to apply new the setting (see figure 18).

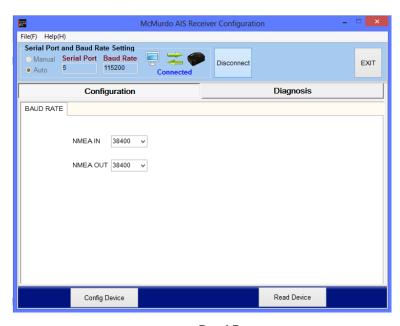


Figure 18 Baud Rates

3.9.3 WiFi Option (M15SW model only)

The information below details the information required for connecting the M15SW to another device using WiFi.

■ SSID (Service Set Identifier):

Name of the wireless network. The SSID for the M15SW is AIS-R-NNNN where NNNN is the last 4 digits of the units serial number (printed on label on side of unit)

Security Encryption:

- Any device being used to connect via WiFi should support WPA-PSK with TKIP data encryption
- If requested by your device for an IP address or port number, use the following details

IP Address 192.168.2.1

Port 3333

Password:

The WiFi Network key is 123456789@

The SSID, security encryption and Network key (password) are non-configurable and pre-set at the factory. The device is pre-set to use Channel 6 for WiFi and is non configurable.

3.9.4 Diagnosis

The Diagnosis tab has two submenus, System Check and Data Log.

System Check

System Check retrieves following information and statuses from the receiver: Firmware Version, Product Serial Number, NMEA-2000 Connected, RX position reports.

Note the NMEA 2000 will only show workable on the M15SW model.

See figure 19 below.

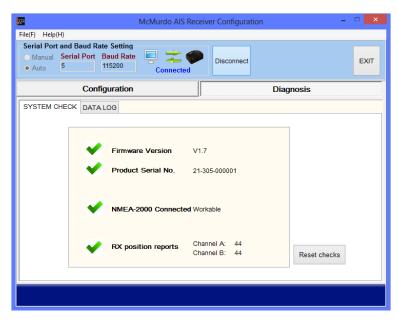


Figure 19 System Check

Data Log

The Data Log enables user to record received AIS information.

To enable or disable the recording of AIS information, use the "Enable Log" check box. Click "Save" to save the record at a preferred location on the PC connected via USB. To ensure the log is recorded the device must stay connected to the PC via USB and the Rx configurator or the McMurdo AIS viewer is running.

To clear the current listing, use the "Clear" button.

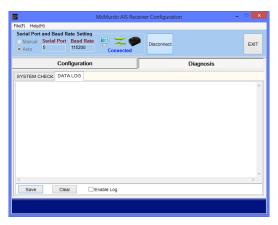


Figure 20 Data Log

3.10 NMEA 0183 Multiplexer

All Smartfind M15 models are designed with both NMEA 0183 input and output wiring.

Thus, the input and output ports support independent baud rates. For the advanced multiplexing configuration, Smartfind

M15 gets input from one NMEA 0183 device and passes to another NMEA 0183 device together with AIS information.

Smartfind M15 supports three baud rates: 4800, 9600, and 38400. The default baud rate is 38400. Use the provided configuration utility to change baud rates.

See the illustration Figure 21.

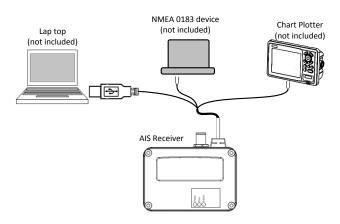


Figure 21 NMEA 0183 Multiplexer

3.11 McMurdo AIS Viewer Software

The McMurdo AIS Viewer is a supplementary application that provides a simple access for the user to view AIS information on a PC. The application provides basic features to browse the relative positions of surrounding vessels and the dynamic and static information regulated by IMO. It also enables the setting of an AIS Man Over Board list (MOB List), this enables the MMSI of any SART or MOB device to entered along with a user name. When any of the AIS devices are activated the SRM message on the screen will display the User name from the MOB list.

For professional uses, we recommend connecting the McMurdo Smartfind M15 Series with other marine electronic products such as ECS or Radar for displaying AIS information.

The viewer (McMurdo AIS Viewer.exe) is included on the CD-ROM included in the box. A handbook detailing the viewer's operation is accessible via the help menu in the viewer,

4 APPENDIX

4.1 Product Specifications

APPLIC	ABI E STANDARDS	
APPLICABLE STANDARDS		
IEC 62287-1 (applicable parts)		
ITU-R M.1371 (applicable parts)		
IEC 60945 (applicable parts)		
IEC 61162 (applicable parts)		
VHF RECEIVER		
Number of AIS Receivers	2 channels	
AIS CH-1	Default CH 87B (161.975MHz)	
AIS CH-2	Default CH 88B (162.025MHz)	
Frequency Range	161.975 ~ 162.025 MHz	
Channel Bandwidth	25KHz	
Message Format	AIS Class A & B messages	
Data Rate	9,600bps / per channel	
Usable Sensitivity	PER ≤ 20% @ exceeding -107 dBm	
POWER SUPPLY		
Supply Voltage External Source	12 / 24V DC	

USB	Standard USB port on PC	
Power Consumption	<1.50 Watt	
LED INDICATION		
Smartfind M15	Power, Error, AIS Rx	
Smartfind M15S	Power, Error, AIS Rx, Radio Tx	
Smartfind M15SW	Power, Error, AIS Rx, Radio Tx, Wi-Fi	
INTERFACE		
VHF Antenna Connector	Female Type M (PL 259)	
NMEA 0183 Input	38400 (default), 9600, 4800 bps	
NMEA 0183 Output	38400 (default), 9600, 4800 bps	
USB 2.0	Supported	
VHF Radio	F	
(M15S & M15SW only)	Female Type M (PL 259)	
Wi-Fi	IEEE 002 44h/n/n	
(M15SW only)	IEEE 802.11b/g/n	
NMEA 2000	Supported	
(M15SW only)	Supported	
ENVIRONMENTAL		
Operating Temperature	-15°C~55°C	

·	0500 5000	
Storage Temperature	-25°C~70°C	
Humidity Operation	0~95% RH at 40°C	
Vibration	IEC 60945	
Waterproof	IPX2	
PHYSICAL		
Size in mm (w)	128 mm	
Size in mm (h)	36 mm	
Size in mm (d)	88 mm	
Cable length (USB,	1M	
Power, & NMEA0183)	TIVI	
Weight	210g (incl. cable)	
Wi-Fi (Smartfind M15SW model only)		
IEEE 802.11b/g/n		
RF PERFORMANCE (Smartfind M15S and Smartfind M15SW		
only)		
VHF Port Insertion Loss	Receiver Path 3.5dB	
	Transmit Path: 1.2dB	
Certification		
CE, FCC (ID WZ7AR150W)		

4.2 Dimensions

Applicable to all Smartfind M15 models, (M15 shown).

Front View


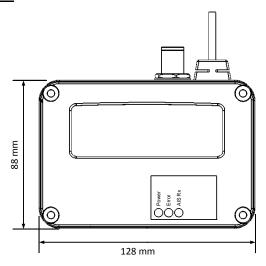


Figure 22 Front View

Side View



Accessories (Optional)

Accessories are available from Orolia Ltd. Contact our local dealer/agent for more details.

4.4 NMEA 2000 PGN Information (M15SW Model only)

Transmit		
PGN	Description	
59392	ISO Acknowledgment	
59904	ISO Request	
60928	ISO Address Claim	
126464	PGN List - Transmit PGN's group function	
126996	Product Information	
129038	AIS Class A Position Report	
129039	AIS Class B Position Report	
129040	AIS Class B Extended Position Report	
129041	AIS Aids to Navigation (AtoN) Report	
129792	AIS DGNSS Broadcast Binary Message	
129793	AIS UTC and Date Report	
129794	AIS Class A Static and Voyage Related Data	
129795	AIS Addressed Binary Message	
129796	AIS Acknowledge	
129797	AIS Binary Broadcast Message	
129800	AIS UTC/Date Inquiry	

129801	AIS Addressed Safety Related Message	
129802	AIS Safety Related Broadcast Message	
129803	AIS Interrogation	
129804	AIS Assignment Mode Command	
129805	AIS Data Link Management Message	
129806	AIS Class A Position Report	
129807	AIS Group Assignment	
129808	DSC Call Information	
129809	AIS Class B "CS" Static Data Report, Part A	
129810	AIS Class B "CS" Static Data Report, Part B	
Receive		
PGN	Description	
59392	ISO Acknowledgment	
59904	ISO Request	
60928	ISO Address Claim	

5 Orolia Ltd WORLDWIDE WARRANTY

Limited warranty

IMPORTANT

Orolia Limited warranty registration

Congratulations on purchasing your Smartfind M15. As standard your unit has a one year (12 months) warranty from the date of purchase shown or your invoice, however, this can be extended by an additional year by simply registering your unit on-line at:

www.mcmurdomarine.com

Then follow the REGISTER WARRANTY link at the top of the page.

Warranty Statement

Subject to the provisions set out below Orolia Ltd warrants that this product will be free of defects in materials and workmanship for a period of up to two years (subject to registration, see above) from the

date of purchase. Orolia Ltd will not be liable to the buyer under the above warranty:-

for any defect arising from fair wear and tear, wilful damage, negligence, abnormal working conditions, water damage or use of solvents, failure to follow Orolia Ltd's instructions (whether oral or in writing) including a failure to install properly and/or to use materials recommended and/or supplied by Orolia Ltd, misuse or alterations or repair of the product by persons other than Orolia Ltd or an Orolia approved Service Agent;

for parts, materials or equipment not manufactured by Orolia Ltd in respect of which the buyer shall only be entitled to the benefit of any warranty or guarantee given by the manufacturer to Orolia Ltd;

If the total price for the product has not been paid.

THE LIMITED WARRANTY STATED ABOVE IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Orolia Ltd will not be liable for indirect, special, incidental or

consequential damages of any kind sustained from any cause. In no event shall Orolia Ltd be liable for any breach of warranty or other claim in an amount exceeding the purchase price of the product. This warranty does not affect any statutory rights of the consumer. In order to be valid, claims must be made under the above warranty in writing as soon as practicable after discovery of the defect or failure and within the warranty period referred to above. Proof of purchase will be required. The claim should be sent together with the product in question to the address set out below or to an Approved Service Agent. Following a valid warranty claim Orolia Ltd shall be entitled to repair or replace the product (or part) in question free of charge, or at Orolia Ltd's sole discretion to refund to the buyer the price of the product (or a proportional part of the price). Orolia Ltd shall not be liable to a buyer who is not a consumer for any other loss or damage (whether indirect, special or consequential loss of profit or otherwise) costs, expenses or other claims for compensation which arise out of or in connection with this product. In the case of a consumer Orolia Ltd shall only be liable where other loss or damage is foreseeable.

Nothing shall limit Orolia Ltd's liability for death or personal injury caused by its negligence. This warranty is to be interpreted under English law.

All enquiries relating to this warranty or Approved Service Agents should be sent to:

Orolia Limited, Silver Point, Airport Service Road,

Portsmouth, Hampshire, PO3 5PB, UK

Telephone: Int + 44 (0) 23 9262 3900

Fax: Int + 44 (0) 23 9262 3998

Web: www.mcmurdomarine.com

Email: service.mcmurdo@orolia.com

An Orolia Group Business

6 ACRONYMS

AIS Automatic Identification System

COG Course Over Ground

CPA Distance to Closest Point of Approach

CSTDMA Carrier-sense time division multiple access

DSC Digital Selective Calling
ECS Electronic Chart System
ETA Estimated Time of Arrival
GPS Global Positioning System

IMO International Maritime OrganizationMMSI Maritime Mobile Service Identity

SOG Speed Over Ground

SRM Safety Related Message

TCPA Time to Closest Point of Approach

TDMA Time Division Multiple Access
UTC Coordinated Universal Time

VHF Very High Frequency
VTS Vessel Traffic Service

Orolia Ltd

Silver Point Airport Service Road Portsmouth PO3 5PB United Kingdom

Phone: +44 (0)23 9262 3900 Fax: +44 (0)23 9262 3998

Email: service.mcmurdo@orolia.com Website: www.mcmurdomarine.com